

Under Desk and Wall PC Mount

MOUNT-PC01

Assembly Manual

Individual Product SKUs

MOUNT-PC01

MOUNT-PC01W



WARNING



If you do not understand these directions, or if you have any doubts about the safety of the installation, please contact our product support team at 309-278-5303 or help@vivo-us.com for further assistance. Check carefully to make sure there are no missing or defective parts. Failure to report missing parts within 30 days may result in denial of free replacement. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.



DO NOT EXCEED WEIGHT CAPACITY

FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY.



DO NOT INSTALL INTO DRYWALL ALONE

DRYWALL ALONE CANNOT SUPPORT WEIGHT OF YOUR PC TOWER. Mount must be installed into wood stud or concrete/brick walls ONLY. Failure to follow instructions may result in damage to property and/or serious personal injury. Please verify intended mounting location before proceeding. If unsure, please contact us at 309-278-5353 or help@vivo-us.com.

Need Help? We're Here For You

US-Based Customer Support from Trained Professionals

Monday-Friday from 7am-7pm CST

Saturday 8am-4pm CST



Email Us

help@vivo-us.com



Chat with Live Agent

www.vivo-us.com



Give Us a Call


309-278-5303 ext. 1



Assembly Video & Product Info

www.vivo-us.com/products/mount-pc01

Package Contents

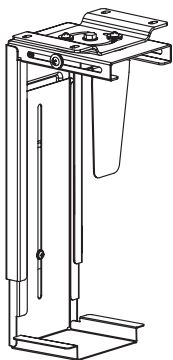


A (x1)
Mount




B (x12)
Pad


Included Hardware & Tools



M-A (x4)
ST4.8x16mm Screw



M-B (x4)
ST4.8x38mm Screw



M-C (x4)
Concrete Anchor



M-D (x4)
Washer



T-A (x1)
4mm Allen Wrench

Tools Needed:



**Phillips
Screwdriver**



Drill



Level



Pencil



Stud Finder




**Tape
Measure**

Weight Capacity:



Pre-Mounting Instructions


Peel adhesive backing off Pads **(B)**, and apply to top, bottom, and side of Mount **(A)** as shown.

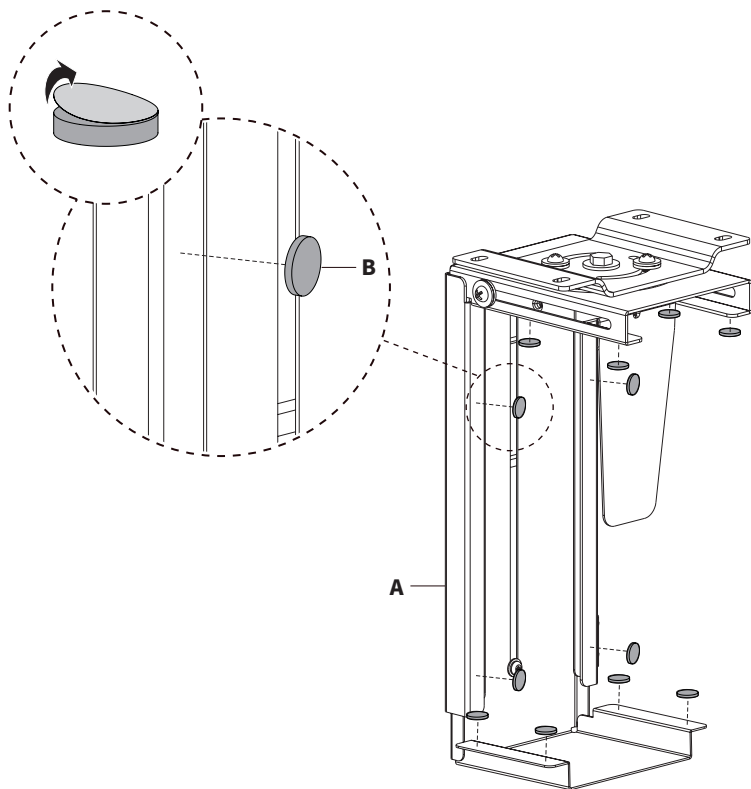


Mounting Options

Determine your intended mounting surface and follow instructions as identified below.


– Option 1 –
Under Desk
Pages 6–8

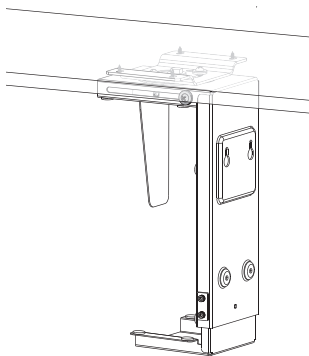


– Option 2 –
Wood Stud
Pages 11–12

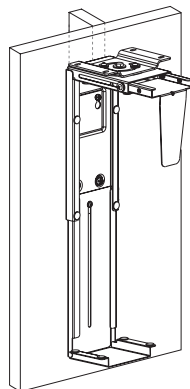

– Option 3 –
Solid Wood Wall
Pages 13–14

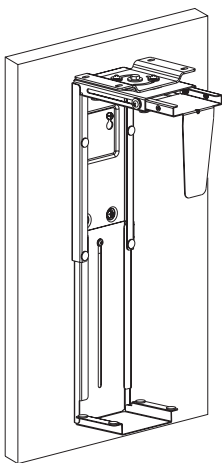

– Option 4 –
Brick/Concrete Wall
Pages 15–16

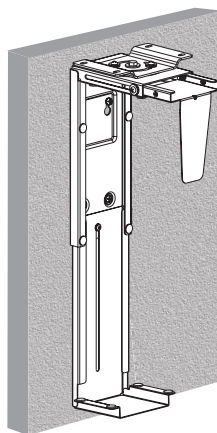


*****Read Before Proceeding*****

If you intend to Mount with Option 2, 3, or 4, follow Pre-Wall Mounting Instructions on **Pages 9–10** first.

– Option 1 –
Under Desk Mounting

STEP 1


Secure Mount (A) to bottom of desk using ST4.8x16mm Screws (M-A) and Washers (M-D).

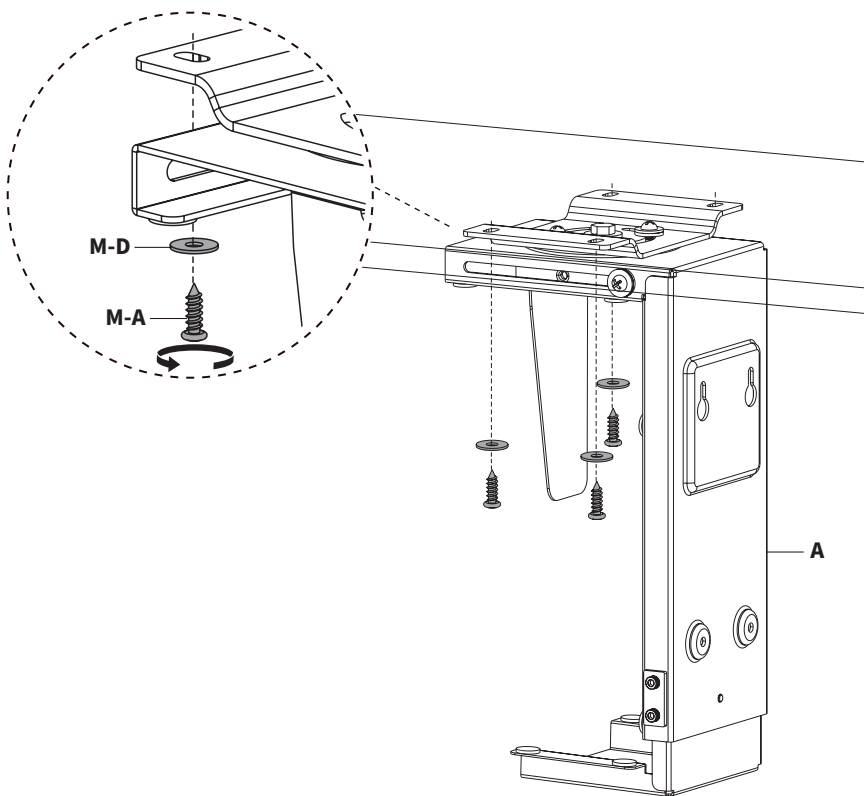

Mount Blocked by Desk Frame Bar?

If the Mount (A) is obstructed by the desk frame underneath your desktop, Spacer Brackets are available for purchase to help with installation.


To order Spacer Brackets (MOUNT-PCSB1), please contact our Customer Support team at 309-278-5303 or email help@vivo-us.com.

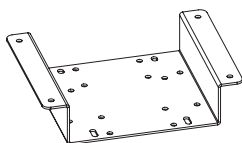



Spacer Brackets (MOUNT-PCSB1)
Available for Purchase

STEP 2

- 1** Loosen the **Locking Screws** on both sides of the top of Mount **(A)**.

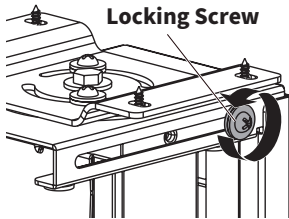


- 2** Slide the Side Support Bracket out to maximum width.

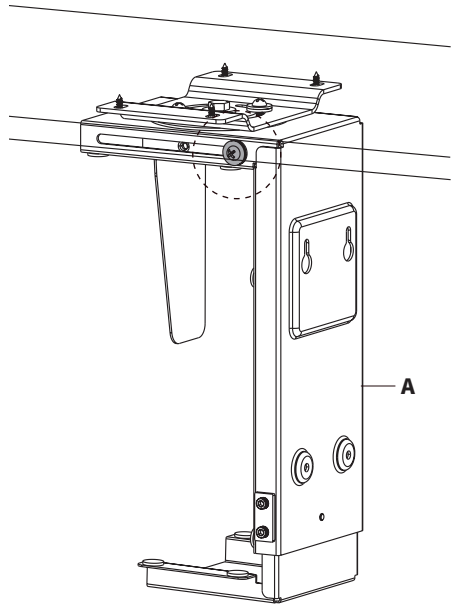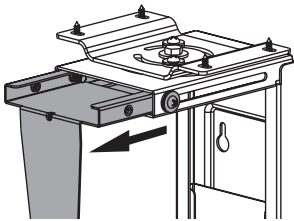


Optional Adjustment for Thinner PCs

If your PC tower has a width of 3.19"-6.0" (81mm-152mm), the width range of the side bracket can be narrowed for a better fit. Use a Phillips screwdriver to remove the Locking Screw from **Slot A**, then install the Screw into **Slot B**.

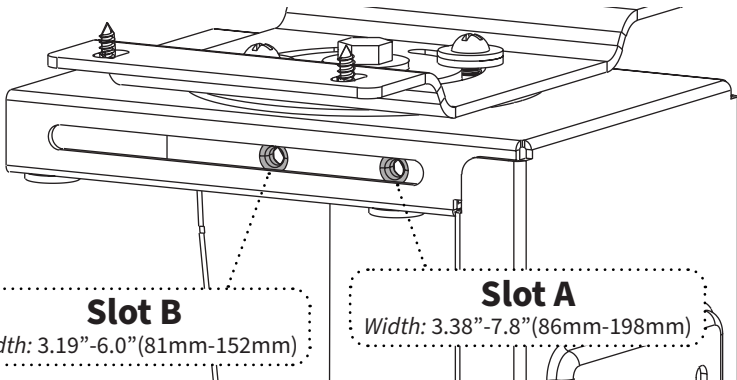


STEP 3


- 1 Loosen **Set Screws** for lower support using 4mm Allen Wrench (**T-A**) and slide the Bottom Support Bracket down.

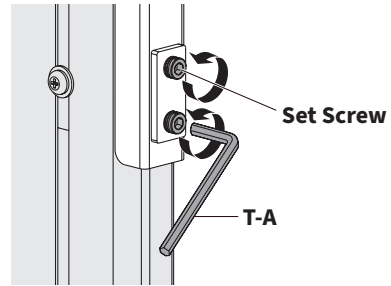

- 2 Place PC tower on Mount (**A**), slide Bottom Support Bracket up until Mount is fit vertically to PC, and retighten **Set Screws** with 4mm Allen Wrench (**T-A**).

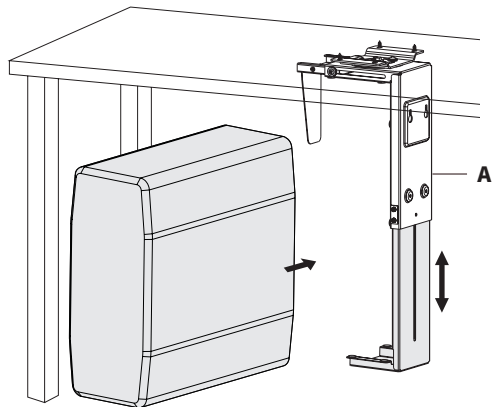


- 3 Slide the Side Support Bracket into place to hold PC. Secure by tightening **Locking Screws** using a Phillips screwdriver.

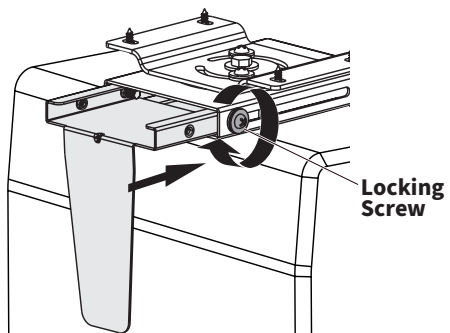

Assembly Complete!


Pre-Wall Mounting Instructions

Loosen two **Locking Screws** on top of Mount **(A)** (one on each side) and slide the Side Support Bracket out to maximum width.

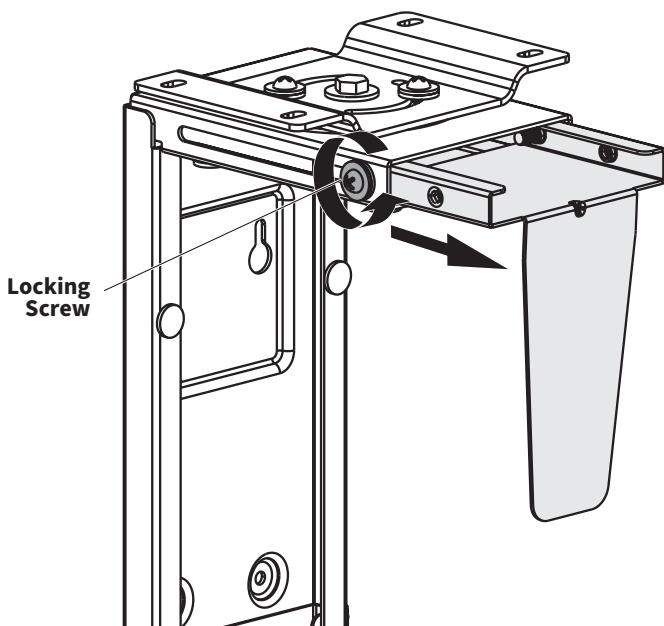


Optional Adjustment for Thinner PCs

If your PC tower has a width of 3.19"-6.0" (81mm-152mm), the width range of the side bracket can be narrowed for a better fit. Use a Phillips screwdriver to remove the Locking Screw from **Slot A**, then install the Screw into **Slot B**.


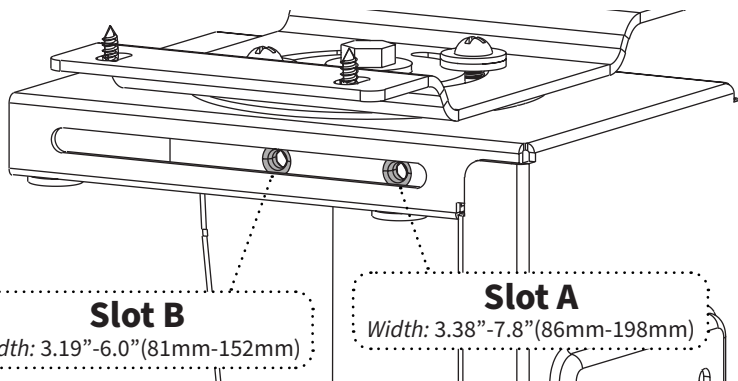


Pre-Wall Mounting Instructions – Cont'd

Use a tape measure to measure the height of your PC.

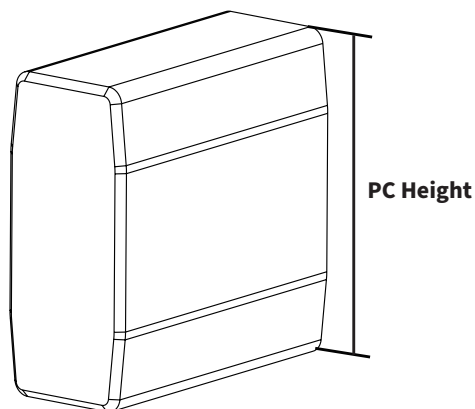

Loosen the **Set Screws**. Slide the Bottom Support Bracket so that it's slightly greater than **PC Height**. Retighten the **Set Screws**.

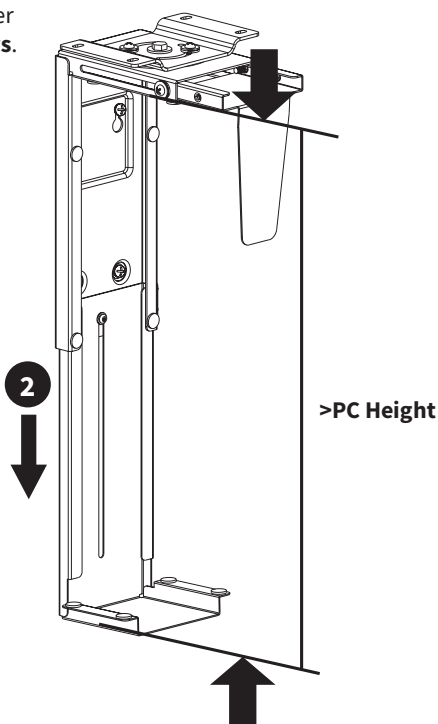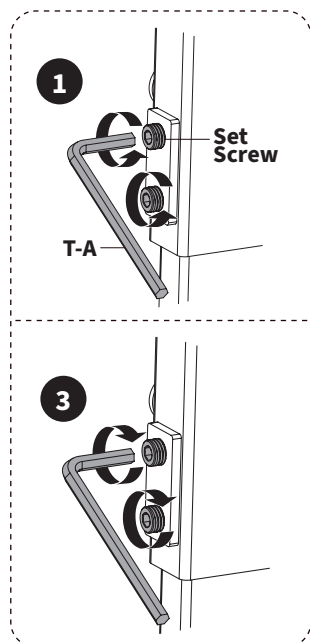

Proceed to desired Wall Mounting Option:

Wood Stud: p.11-12

Solid Wood: p.13-14

Concrete/Brick: p.15-16


- Option 2 -

Wood Stud Mounting


Ensure that you have completed instructions on **Pages 9-10** first

STEP 1



Use a studfinder to locate stud. Using a level, Place Mount **(A)** against wall and mark drilling locations for top and bottom holes on only one side of the Mount that aligns with the stud.

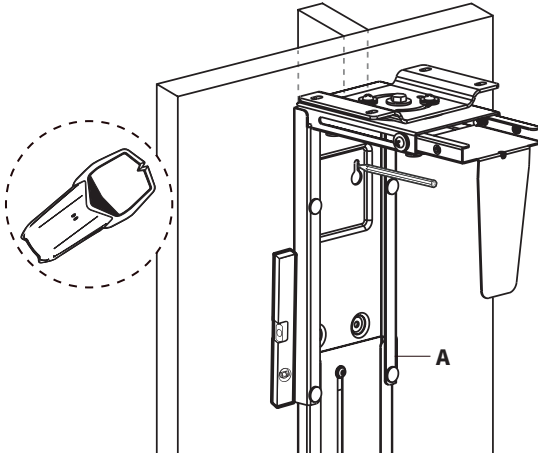

Drilling Locations

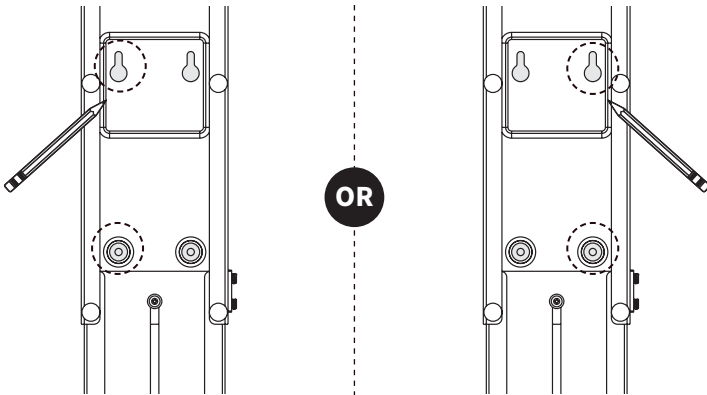

Drill mounting holes at marked locations using the infographic below.

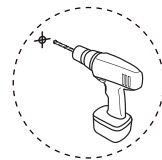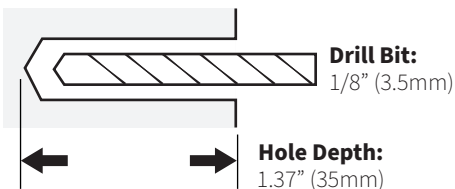


STEP 2



Insert ST4.8x38mm Screw (**M-B**) into top hole that aligns with stud, leaving 3mm of thread exposed.




Do NOT use included Anchors (**W-B**) for wood or drywall.

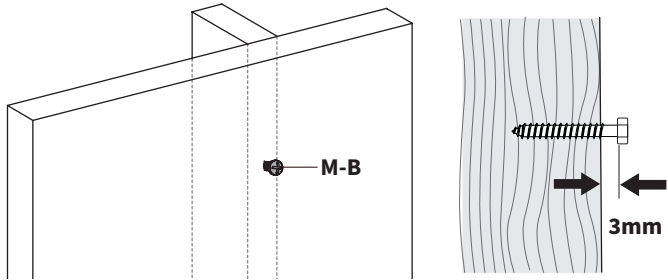

Hang Mount (**A**) on screw.

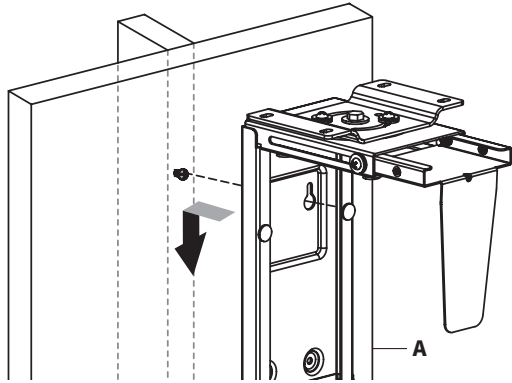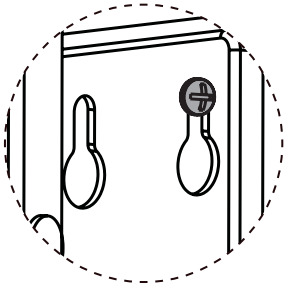

Insert ST4.8x38mm Screw (**M-B**) into lower hole that aligns with stud. Tighten all screws with a Phillips screwdriver.

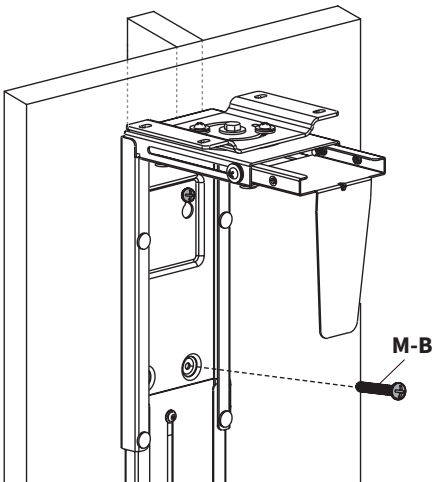

Proceed to STEP 3
on **Page 17**


- Option 3 -

Solid Wood Wall Mounting


Ensure that you have completed instructions on **Pages 9-10** first

STEP 1

Using a level, Place Mount **(A)** against wall and mark drilling locations.

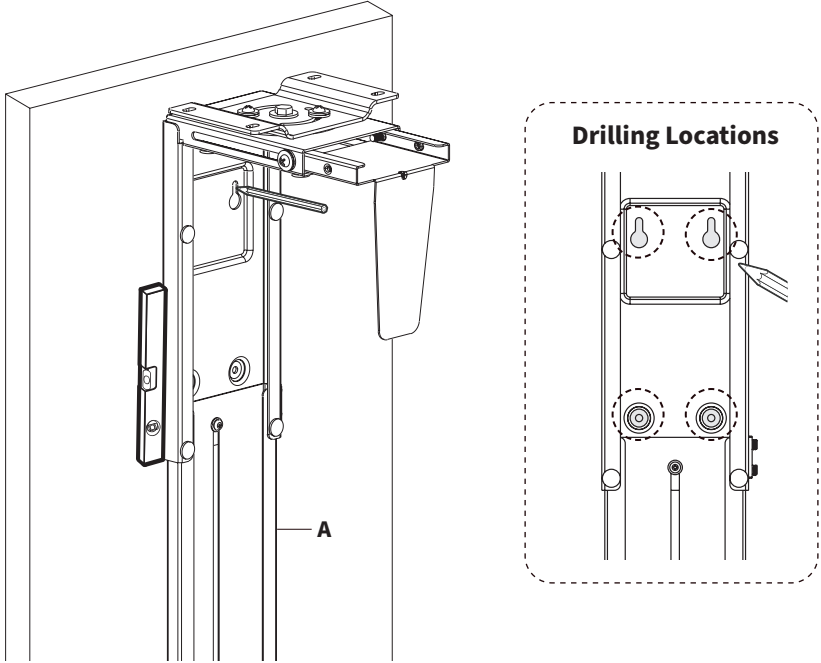

Drill mounting holes at marked locations using the infographic below.


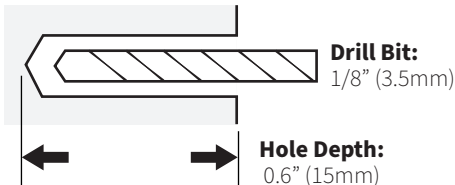


STEP 2



Insert two ST4.8x16mm Screws (**M-A**) into top holes, leaving 3mm of thread exposed.




Do NOT use included Anchors (**W-B**) for wood or drywall.

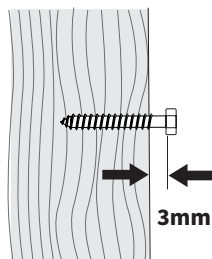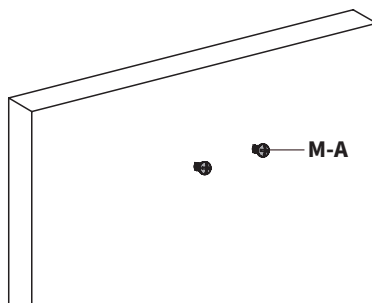

Hang Mount (**A**) on screws.

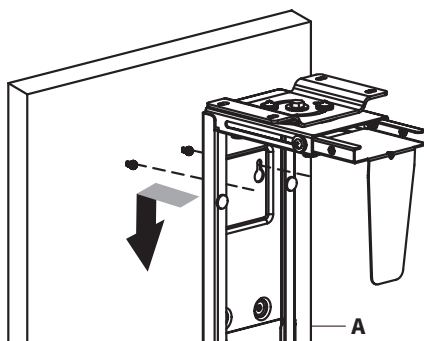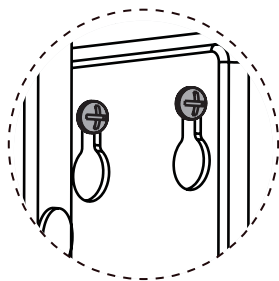

Insert two more ST4.8x16mm Screws (**M-A**) into lower holes. Tighten all screws with a Phillips screwdriver.

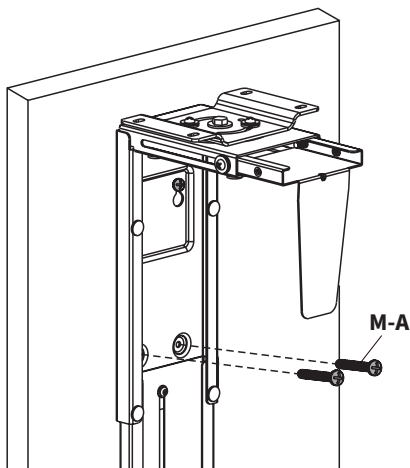


Proceed to STEP 3
on **Page 17**


– Option 4 –
Concrete/Brick Wall Mounting
*Ensure that you have completed instructions on **Pages 9-10** first*

STEP 1


Using a level, Place Mount **(A)** against wall and mark drilling locations.

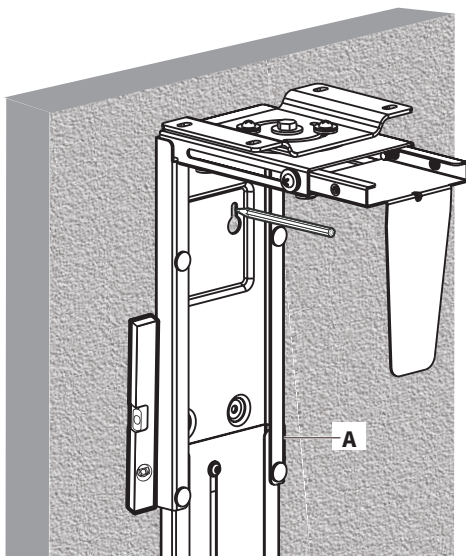

Drilling Locations

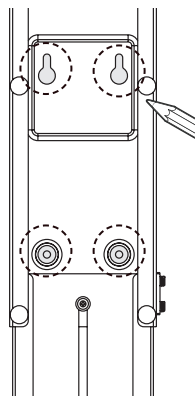


Drill mounting holes at marked locations using the infographic below.

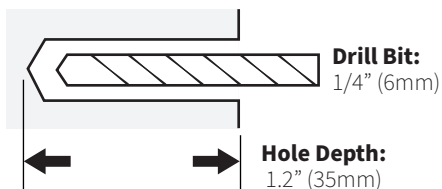


STEP 2


Insert Concrete Anchors (**M-C**) into holes, and insert two ST4.8x38mm Screws (**M-B**) into top holes, leaving 3mm if thread exposed.

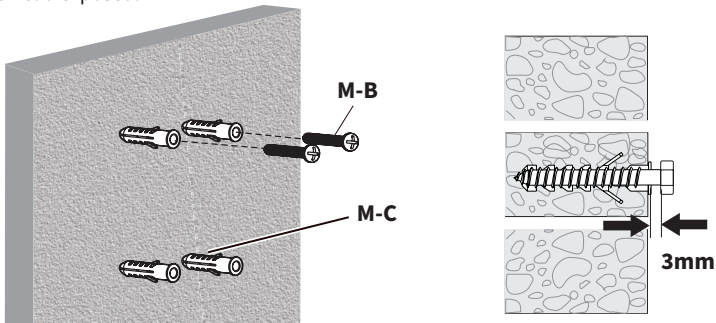

Hang Mount (**A**) on screws.

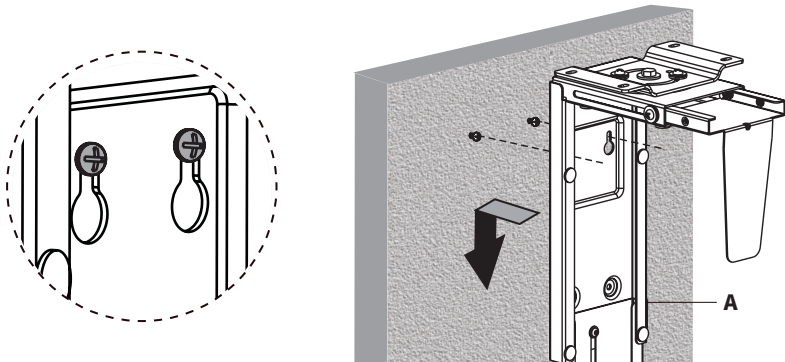


Insert two more ST4.8x38mm Screws (**M-B**) into lower holes. Tighten all screws with a Phillips screwdriver.

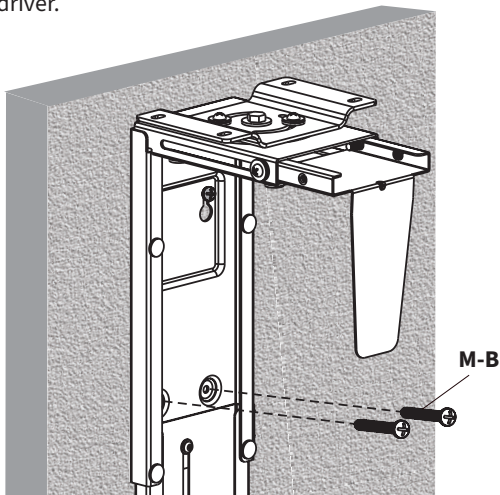



STEP 3

Place your PC tower onto the Mount **(A)**.

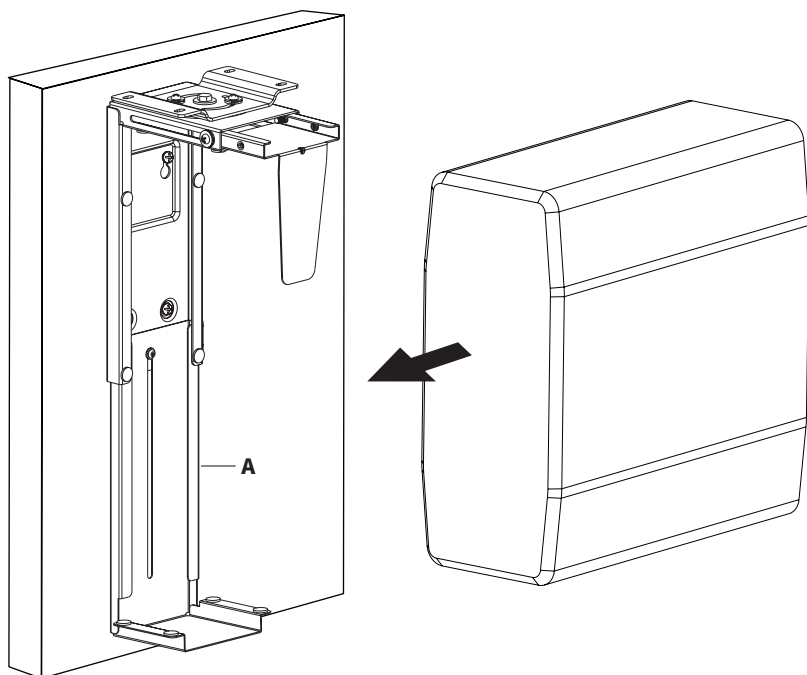

STEP 4

Slide the Side Support Bracket into place to hold PC, and tighten **Locking Screws** using a Phillips screwdriver.

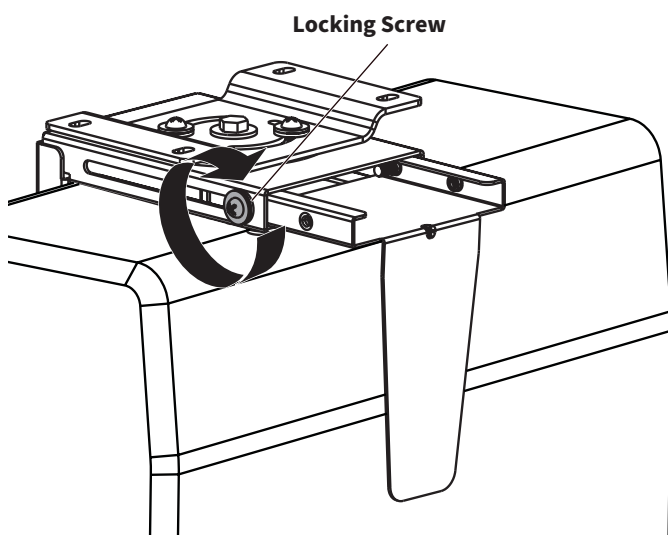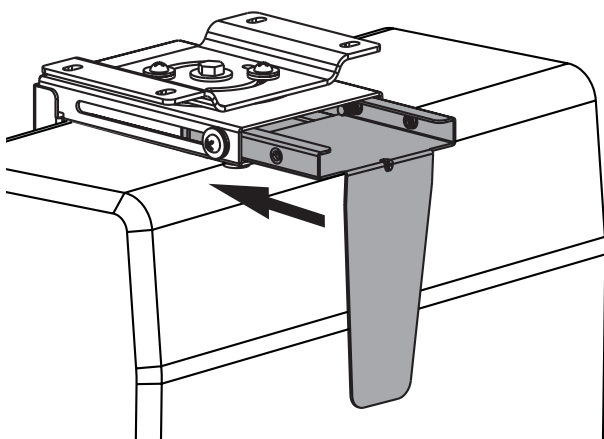

Assembly Complete!

V·I·V·



Love Your New Setup?
Tag Us on Social!



@ VIVO-us



@ vivo_us



@VIVOus



VIVO



Need Help? **We're Here For You**

Monday-Friday from 7am-7pm CST

Saturday 8am-4pm CST



Email Us
help@vivo-us.com



Chat with Live Agent
www.vivo-us.com



Give Us a Call
309-278-5303 ext. 1



VIVO-us



@vivo_us



@VIVOus



VIVO

FOR MORE GREAT VIVO PRODUCTS,
CHECK OUT OUR WEBSITE AT: WWW.VIVO-US.COM