




User Manual

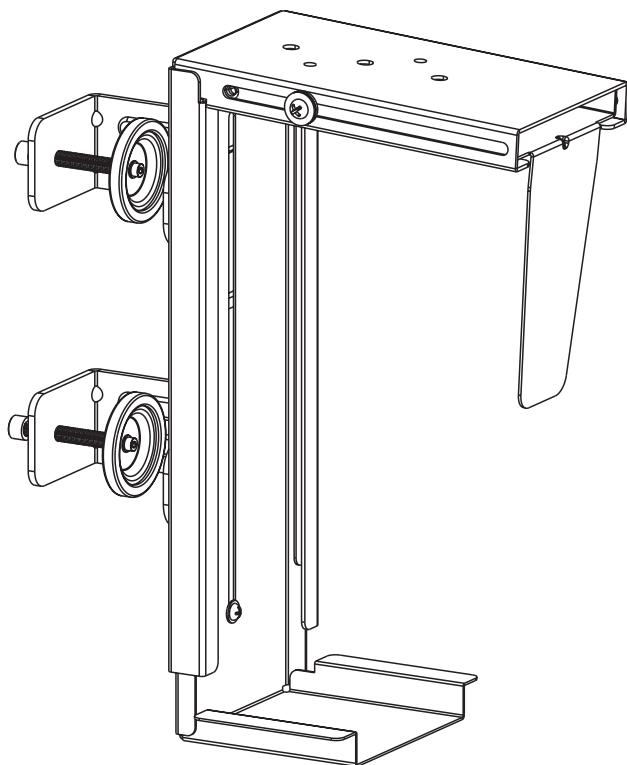

Under Desk Leg Clamp Large PC Mount

MOUNT-PCLO1



Better Products for a Better Workspace Experience

We are dedicated to creating high-end ergonomic solutions
for the office with top of the industry support.

Explore Endless Workspace Solutions

www.vivo-us.com



WARNING



If you do not understand these directions, or if you have any doubts about the safety of the installation, please contact our product support team at 309-278-5303 or help@vivo-us.com for further assistance. Check carefully to make sure there are no missing or defective parts. Failure to report missing parts within 30 days may result in denial of free replacement. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.



WEIGHT LIMIT: 44lbs(20kg)

DO NOT EXCEED WEIGHT LIMIT. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY AND DAMAGE TO PROPERTY.

Need Help? We're Here For You

US-Based Customer Support from Trained Professionals

Monday-Friday from 7am-7pm CST

Saturday 8am-4pm CST



Email Us

help@vivo-us.com



Chat with Live Agent

www.vivo-us.com



Give Us a Call


309-278-5303 ext. 1




Assembly Video & Product Info

www.vivo-us.com/products/mount-pcl1

Package Contents

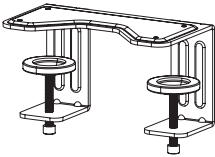

A (x1)
Clamp

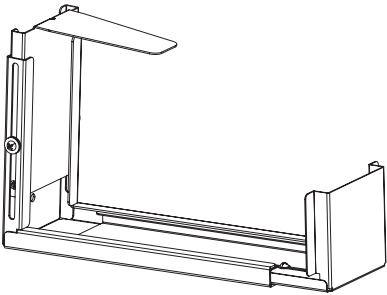

B (x1)
Mount



C (x12)
Pad

Included Hardware & Tools



S-A (x4)
M5x6mm
Screw



S-B (x4)
Long Clamp
Screw



T-A (x1)
4mm Allen
Wrench




T-B (x1)
6mm Allen
Wrench



T-C (x1)
3mm Allen
Wrench

Weight Limit: 44lbs (20kg)

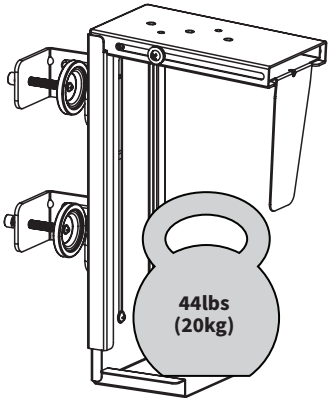

Assembly Steps

STEP 1

Option 1: Thick Desk Legs


1.6" – 3.3" (40 – 85mm)

Proceed to STEP 2 on [Page 6](#)


Option 2: Thin Desk Legs

0.4" – 3.3" (10 – 85mm)

Remove the preinstalled clamp screws from Clamp (A) by loosening and removing Screws (A1), Washer (A2), and Clamp Plate (A3) using the 3mm Allen Wrench (T-C).


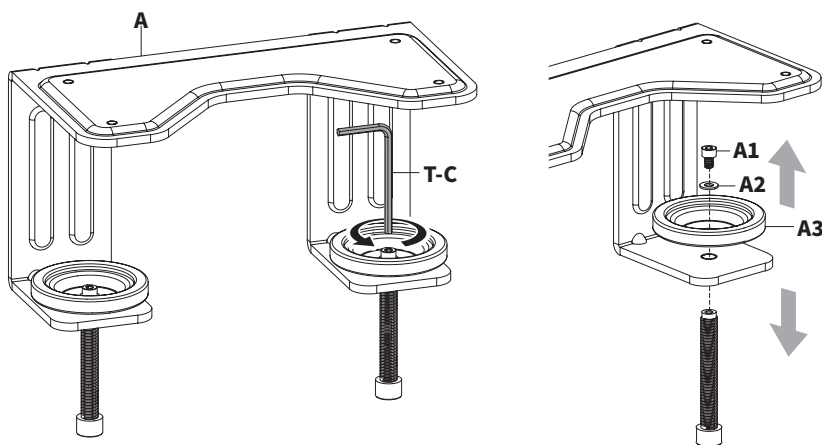


Thread Long Clamp Screws (S-B) into Clamp (A) and attach Clamp Plate (A3) using previously removed Screws (A1) and Washer (A2). Tighten using 3mm Allen Wrench (T-B).

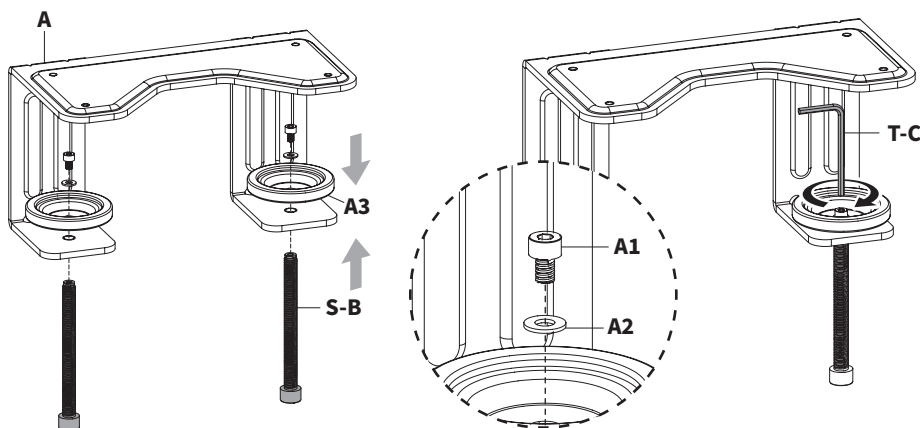


STEP 2

Remove adhesive backing from Pads (C) and apply to top, bottom, and side of Mount (B) as shown.

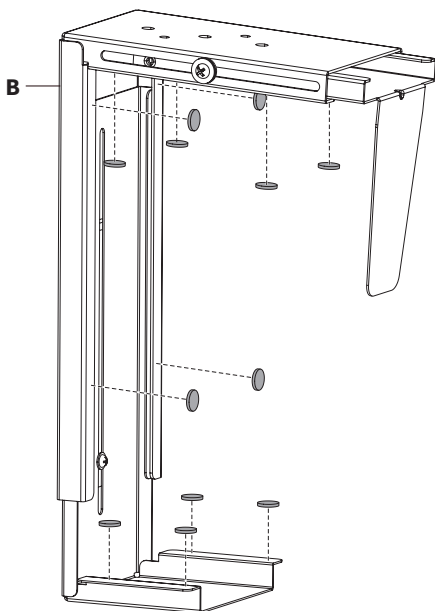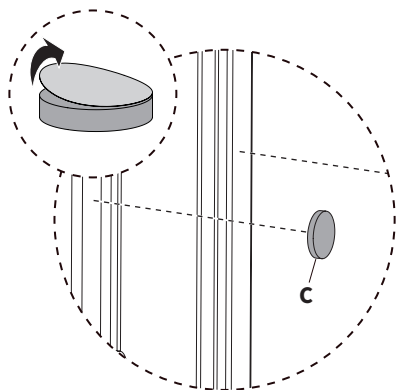



STEP 3

Loosen the **Set Screws** on the either side of Mount (B) using 4mm Allen Wrench (T-A) to slide bottom support bracket down.

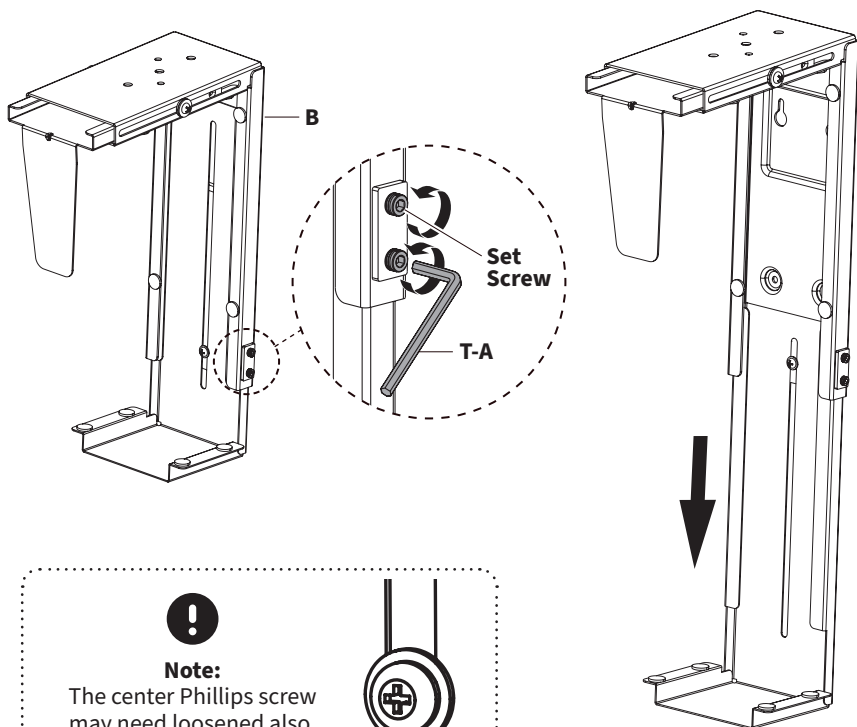


STEP 4

Thread two M5x6mm Screws (**S-A**) into Clamp (**A**) leaving a gap of more than 2mm, as shown.

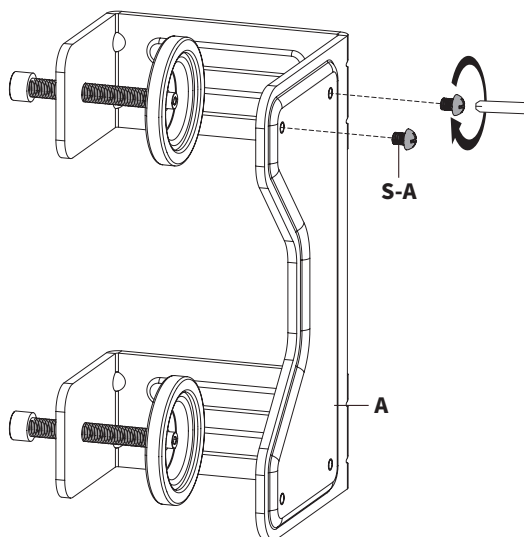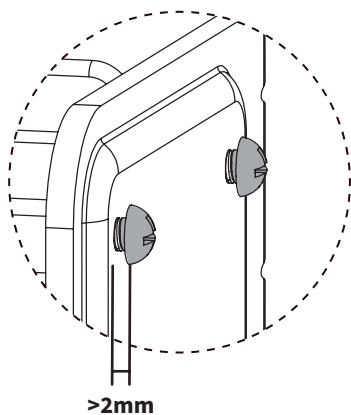


Insert the heads of M5x6mm Screws (**S-A**) with Clamp (**A**) into the **Keyhole Slots** in Mount (**B**) then lift upward.

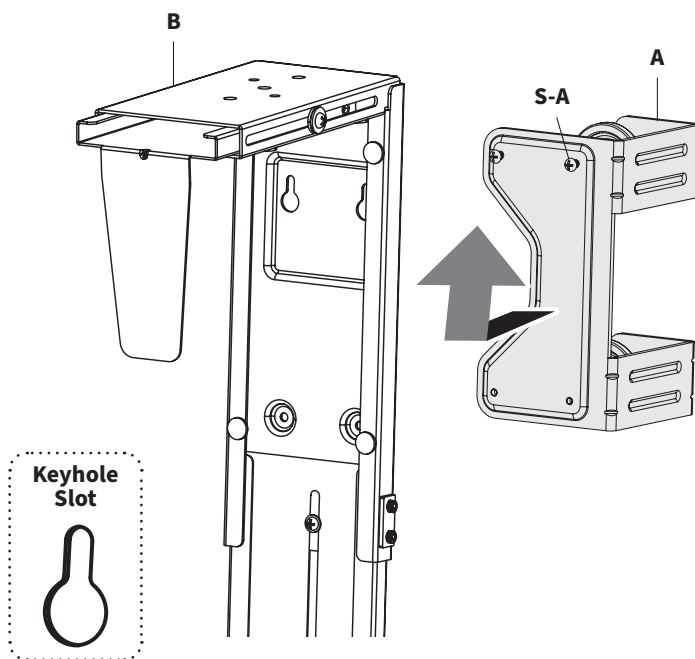


STEP 5

Secure Clamp **(A)** to Mount **(B)** using M5x6mm Screws **(S-A)** in the lower holes. Fully tighten all screws using a Phillips screwdriver.

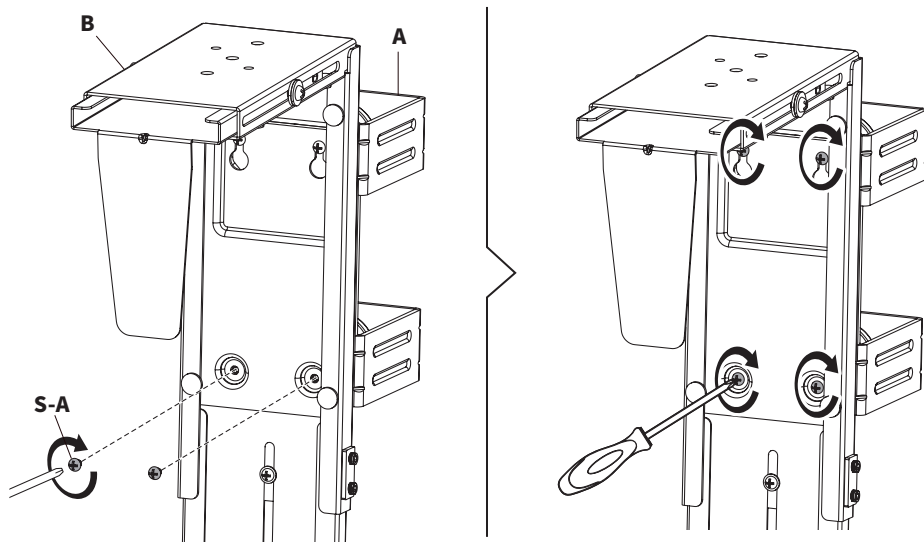


STEP 6



Loosen both Clamp Screws on Clamp **(A)** to allow room for the desk leg. Position the Clamp onto desk leg, then tighten both Screws using the 6mm Allen Wrench **(T-B)** to secure it.

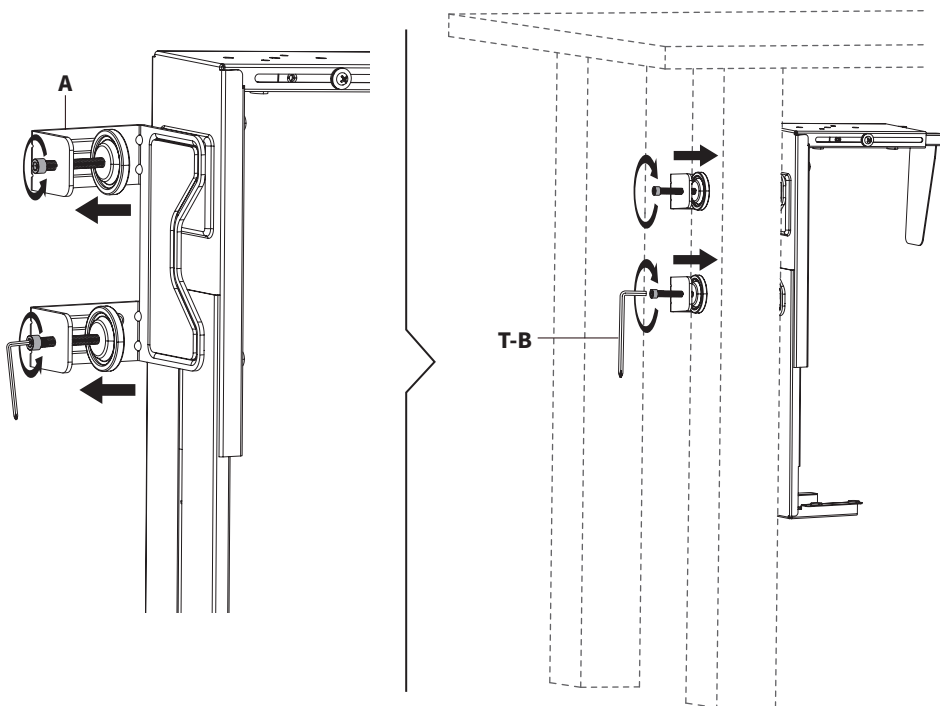

- 1 Loosen the **Locking Screws** on both sides of the top of Mount (B).

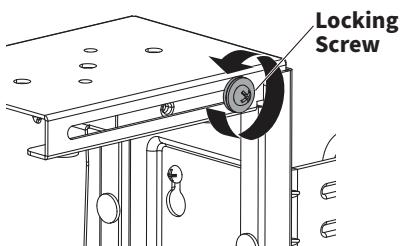


- 2 Slide the Side Support Bracket out to maximum width.

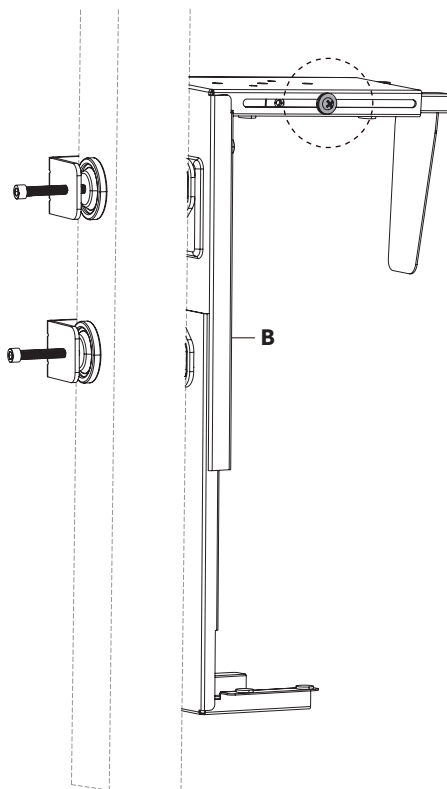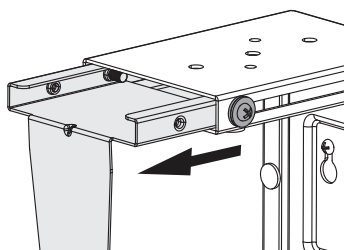

Optional Adjustment for Thicker PCs

If your PC tower has a width of 7.0"-14.6" (178mm-371mm), the width range of the side bracket can be lengthened for a better fit. Use a Phillips screwdriver to remove the Locking Screw from **Slot A**, then install the Screw into **Slot B**.

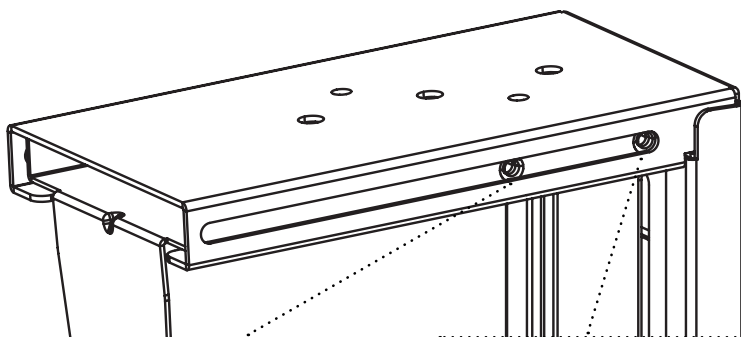

Slot A


Width: 6.4"-11.3" (163mm-287mm)

Slot B


Width: 6.6"-12.7" (167mm-322mm)

STEP 8


- 1 Place PC tower in Mount (**B**), then slide bottom support bracket up until Mount is fit vertically to PC.

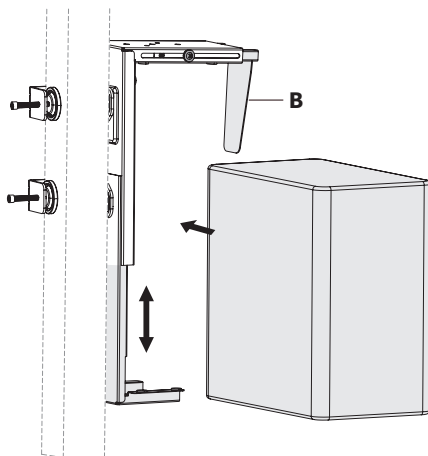


- 2 Tighten **Set Screws** on lower support using 4mm Allen Wrench (**T-A**).

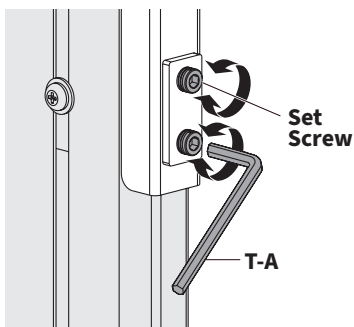

- 3 Slide the Side Support Bracket into place to hold PC. Secure by tightening **Locking Screws** using a Phillips screwdriver.

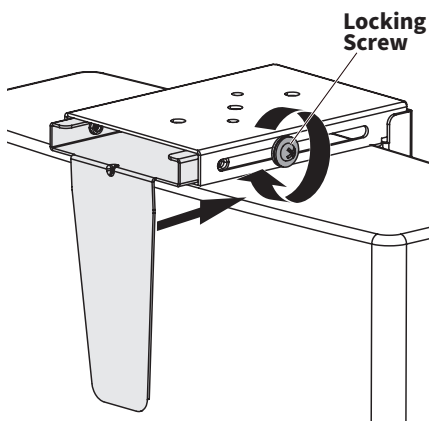

Assembly Complete

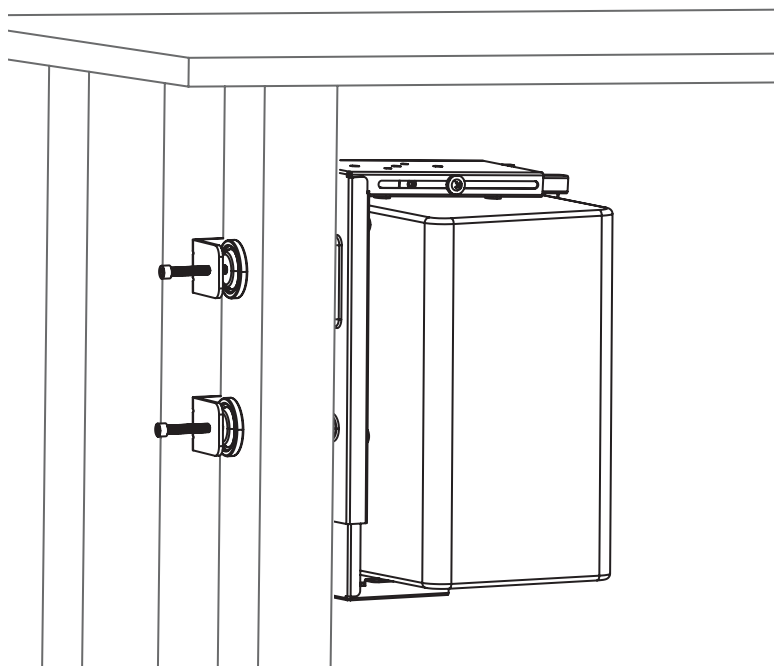



Need Help? **We're Here For You**

Monday-Friday from 7am-7pm CST
Saturday 8am-4pm CST



Email Us
help@vivo-us.com



Chat with Live Agent
www.vivo-us.com



Give Us a Call
309-278-5303 ext. 1



VIVO-us



@vivo_us



@VIVOus



VIVO