


TV Mount Designed for Sonos Arc Soundbar VESA mount type: Vertical Brackets

Instruction Manual

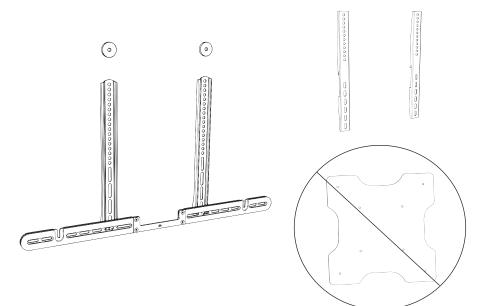

SKU: MOUNT-SONOS3T



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/mount-sonos3t

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



309-278-5303

www.vivo-us.com Chat live with an agent!


🕂 WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

🗥 WARNING: CHOKING HAZARD


SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

PACKAGE CONTENTS

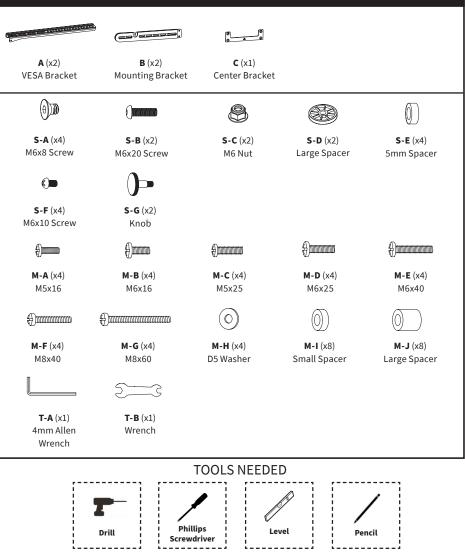

ASSEMBLY STEPS

STEP 1

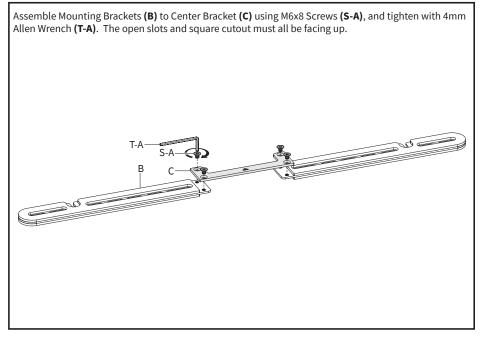


STEP 2 (Option A)

Below TV Installation

Measure the horizontal mounting hole spacing on the back of the TV to determine correct spacing for VESA Brackets (A). Install VESA Brackets (A) to the back of the assembled mount using M6x20 Screws (S-B) and M6 Nuts (S-C), tightening with 4mm Allen Wrench (T-A) and Wrench (T-B).


NOTE: Make sure the arrow on the back of Center Bracket **(C)** is facing down.

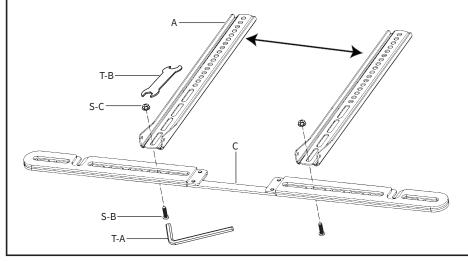

Above TV Installation

Measure the horizontal mounting hole spacing on the back of the TV to determine correct spacing for VESA Brackets (A). Install VESA Brackets (A) to the back of the assembled mount using M6x20 Screws (S-B) and M6 Nuts (S-C), tightening with 4mm Allen Wrench (T-A) and Wrench (T-B).

NOTE: Make sure the arrow on the back of Center Bracket (C) is facing down.

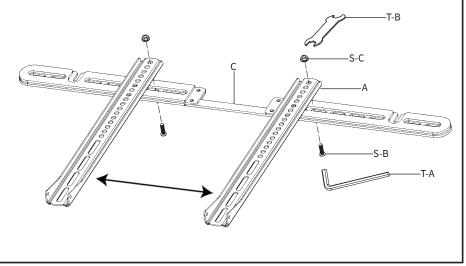


STEP 3 (Option A)

Below TV Installation

Determine the correct mounting height for the soundbar mount.


For below TV mounting, the open slots in the soundbar mount should be at least 2.5" below the bottom edge of the TV.

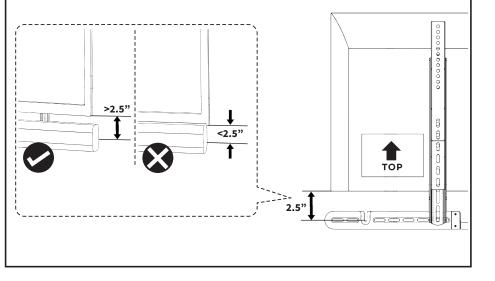

STEP 3 (Option B)

Above TV Installation


For above TV mounting, measure the distance from the base of the soundbar to the center of the rear mounting holes. The distance from the top edge of the TV to the open slots in the soundbar mount should be equal to or greater than the measured distance.

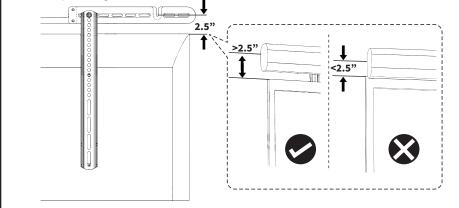

STEP 4 (Option A)

Below TV Mounting


Install the assembled mount, Large Spacers **(S-D)** and VESA brackets from TV VESA mount to the back of the TV using screws **(M-A through M-G)**, washers **(M-H)** and spacers **(M-I, M-J)** as needed. The TV VESA mount brackets should be placed behind the soundbar mount and Large Spacers **(S-D)**.

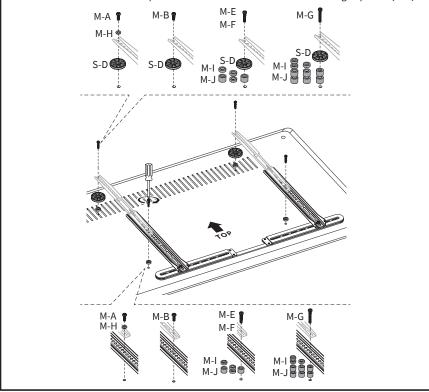


STEP 4 (Option B)

Above TV Mounting


Install the assembled mount, Large Spacers (S-D) and VESA brackets from TV VESA mount to the back of the TV using Screws (M-A through M-G), Washers (M-H) and Spacers (S-E, M-I, M-J) as needed. The TV VESA mount brackets should be placed behind the soundbar mount and Large Spacers (S-D). Insert and tighten M6x10 Screws (S-F) into the sides of VESA Brackets (A) to stabilize the mount.

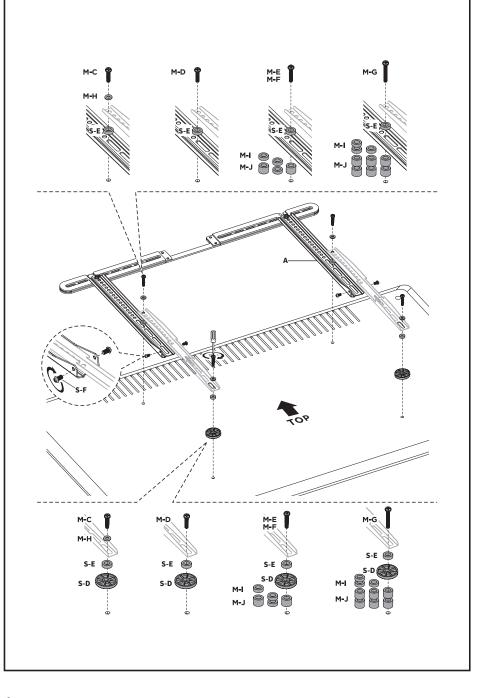

STEP 5

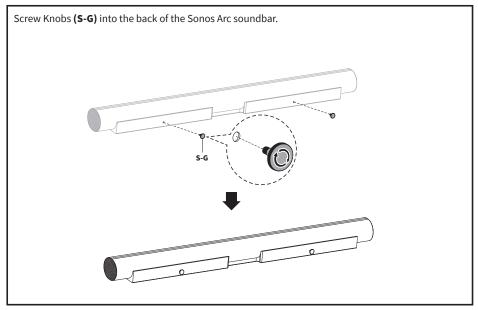

STEP 6

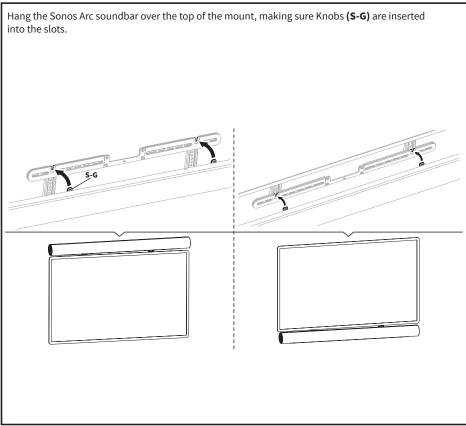



Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.

Ľ	309-278-5303	AVG. RESOLUTION TIME (within office hrs): 5M 4S
	www.vivo-us.com Chat live with an agent!	AVG. RESOLUTION TIME (within office hrs): < 15 M
	help@vivo-us.com	AVG. RESPONSE TIME (within office hrs): 1HR 8M - 23% within < 15m - 38% within < 30m - 61% within < 1hr - 83% within < 2hr - 92% within < 3hr