


Under Desk Laptop Storage Mount

Instruction Manual

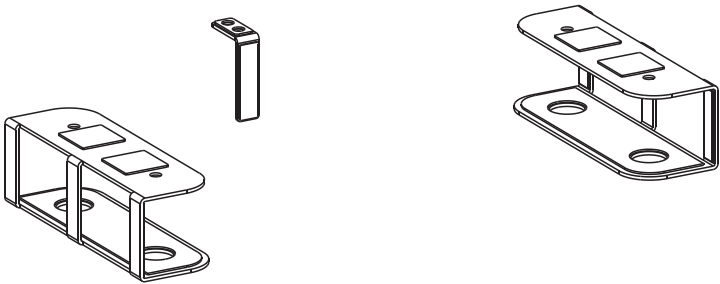

SKU: MOUNT-UDLS1



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

<https://vivo-us.com/products/mount-udls1>

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com
Chat live with an agent!



309-278-5303


WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual and do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly, or inappropriate use.


WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

PACKAGE CONTENTS




A (x2)
Laptop Shelf



B (x1)
Bracket



C (x4)
Adhesive Pad



D (x2)
Cardboard Spacer



S-A (x6)
ST4.8x16mm Screw

TOOLS NEEDED

DO NOT EXCEED WEIGHT CAPACITY.
Failure to do so may result in serious injury.




**Phillips
Screwdriver**

ASSEMBLY STEPS


STEP 1

Remove the adhesive backing from one side of Adhesive Pads (**C**) and stick them to the top of Laptop Shelves (**A**).

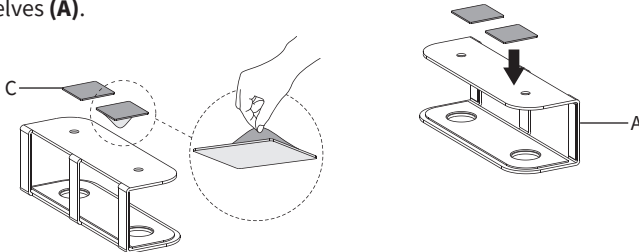


STEP 2

Insert Cardboard Spacers (**D**) into Laptop Shelves (**A**).

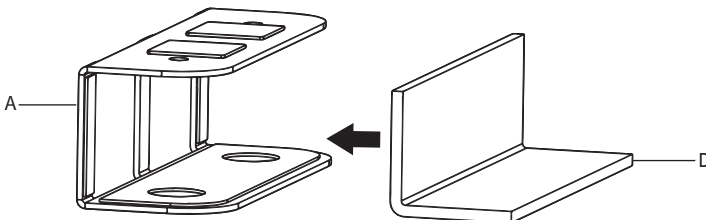


STEP 3

Remove the adhesive backing from the tops of Adhesive Pads (C) and place the laptop between Cardboard Spacers (D).

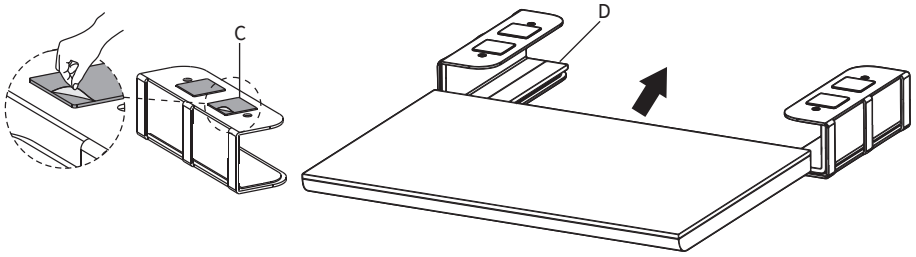


STEP 4

Place the assembly against the underside of the desktop in the desired location, and remove the laptop and Cardboard Spacers (D).

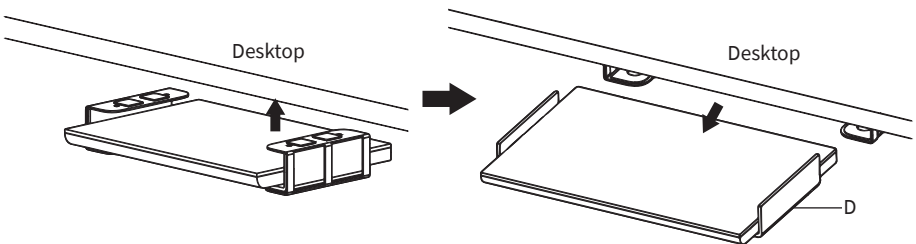


STEP 5

Secure Laptop Shelves (A) in places using ST4.8mm Screws (S-A) and a Phillips Screwdriver.

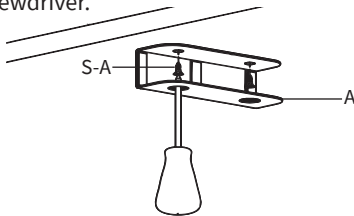


STEP 6

Remove the adhesive backing from Bracket (B).

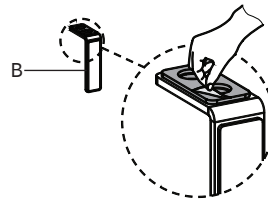

STEP 7

Place the laptop back into the assembly in the desired position. Stick Bracket (B) to the underside of the desktop so that it is flush with the laptop. Secure Bracket (B) using ST4.8x16mm Screws (S-A) and a Phillips Screwdriver.

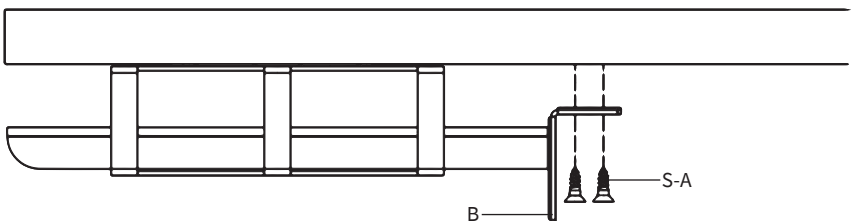



Open **Monday - Friday 7:00am - 7:00pm** CST,
our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (*within office hrs*): **5M 4S**



www.vivo-us.com
Chat live with an agent!

AVG. RESOLUTION TIME (*within office hrs*): **< 15 M**



help@vivo-us.com

AVG. RESPONSE TIME (*within office hrs*): **1HR 8M**

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr