


Shelf Kit for STAND-RACE1B

Instruction Manual

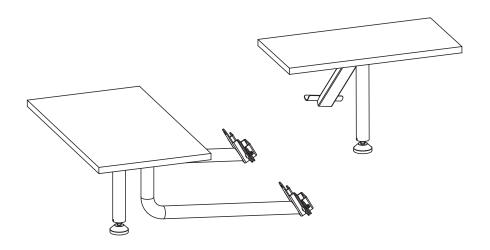

SKU: STAND-RACE1SF



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/stand-race1sf

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST







www.vivo-us.com Chat live with an agent!



309-278-5303



If you do not understand these directions, or if you have any doubts about the safety of the installation, please contact our product support team at 309-278-5303 or help@vivo-us.com for further assistance. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



WARNING: CHOKING HAZARD


SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

DO NOT EXCEED WEIGHT CAPACITY.

Failure to do so may result in serious injury.





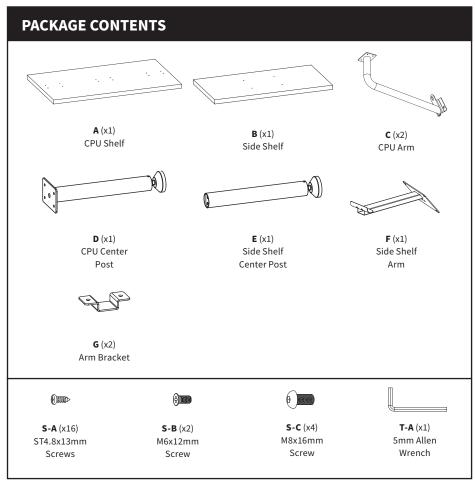

NOTE: SOME HARDWARE MAY NOT BE USED


TOOLS NEEDED




ASSEMBLY STEPS


STEP 1

Take note of the pilot hole patterns on CPU Shelf (A) and Side Shelf (B). Identify CPU Shelf for use below.

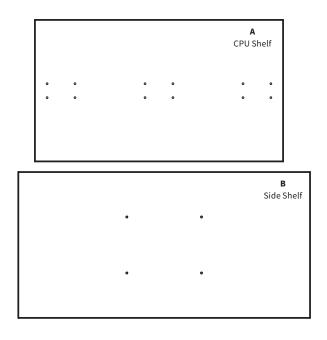


Secure CPU Center Post **(D)** to underside of CPU Shelf **(A)** using ST4.8x13mm Screws **(S-A)** and a Phillips screwdriver.

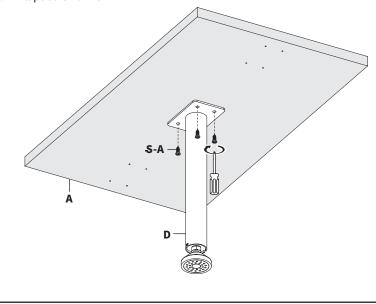


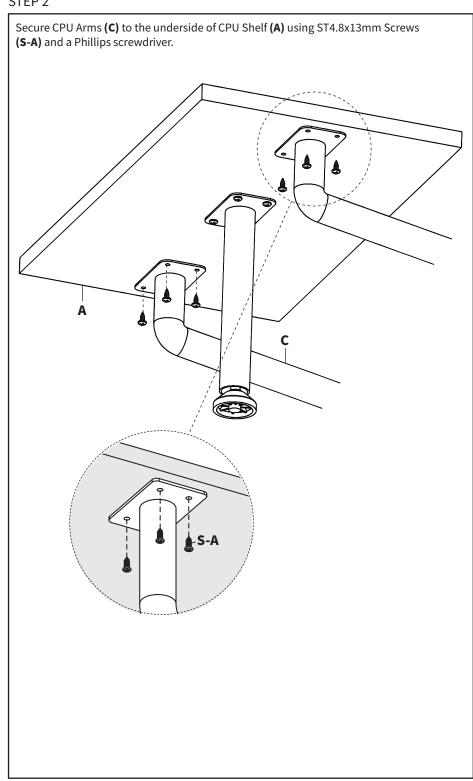


Use 5mm Allen Wrench **(T-A)** to loosen the two screws on the front support frame of your VIVO racing cockpit so that they protrude 5mm from the frame.

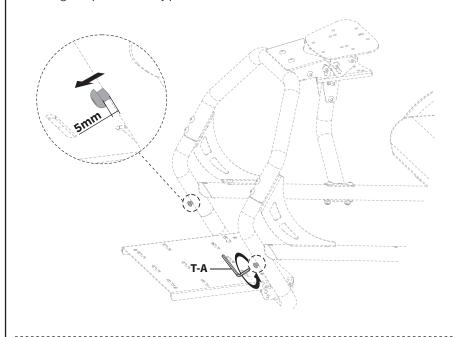


Line up CPU Arm **(C)** keyholes with the previously loosened screws and slide into place. Tighten screws using 5mm Allen Wrench **(T-A)**.

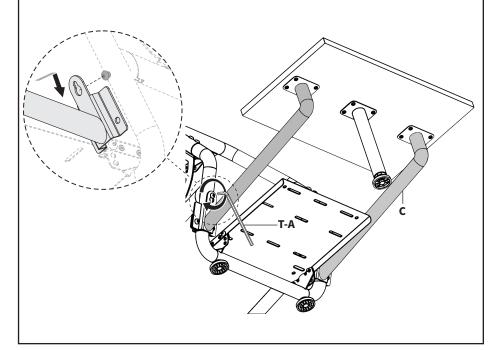


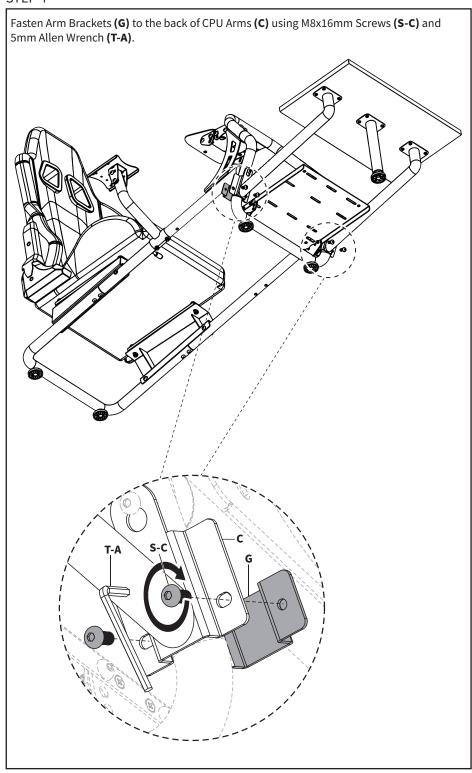



Remove the M8x16mm screws from the underside of cockpit's rear support bar using 5mm Allen Wrench (T-A).

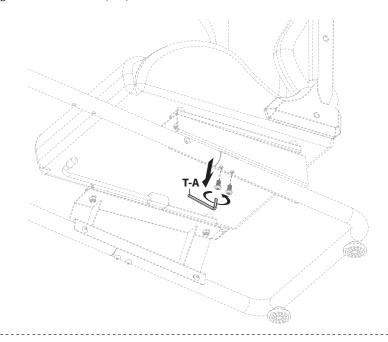


Line the Side Shelf Arm **(F)** on the underside of the rear support bar and re-thread the previously removed screws into the frame. Secure using 5mm Allen Wrench **(T-A)**.

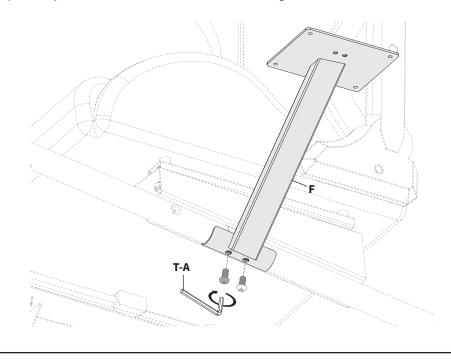

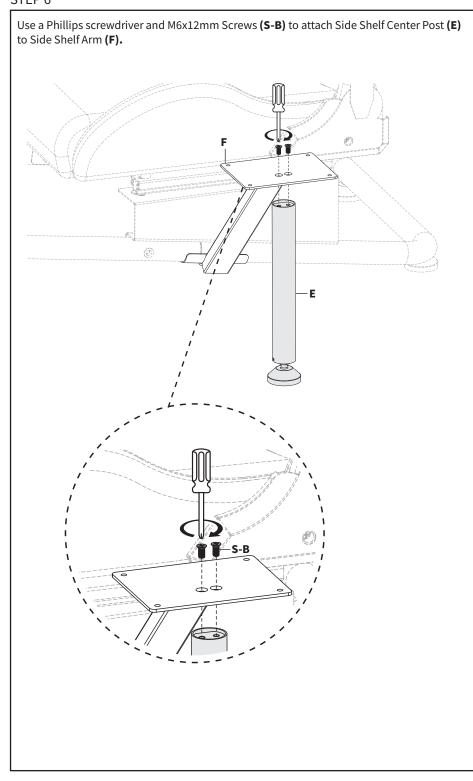

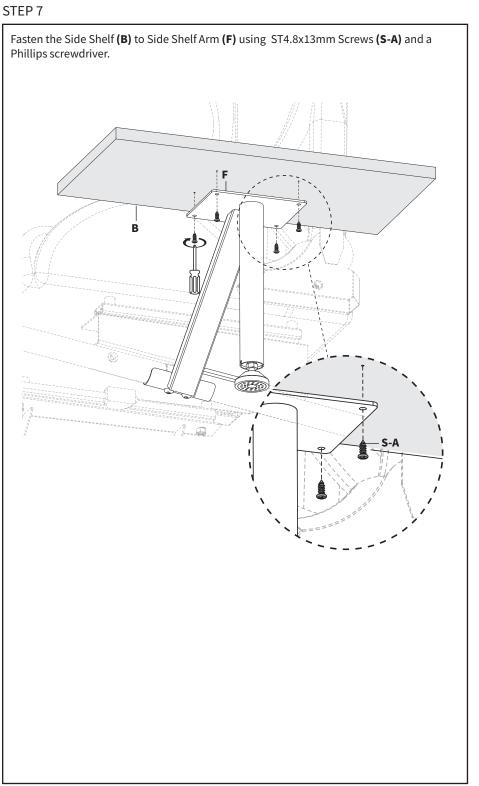

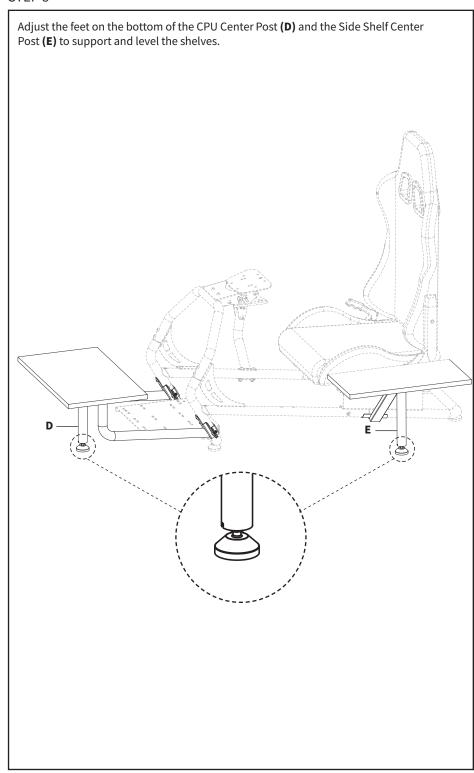



LAST UPDATED: 11/16/2023 REV2



Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (within office hrs): 5M 4S



Chat live with an agent!

AVG. RESOLUTION TIME (within office hrs): < 15 M



help@vivo-us.com

AVG. RESPONSE TIME (within office hrs): 1HR 8M

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr