


Above/Below Clamp-On 13" Dual Shelf

Instruction Manual

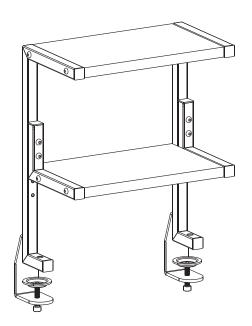

SKU: STAND-SHELF2C/W



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/stand-shelf2c

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST







www.vivo-us.com Chat live with an agent!



309-278-5303


¶\WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

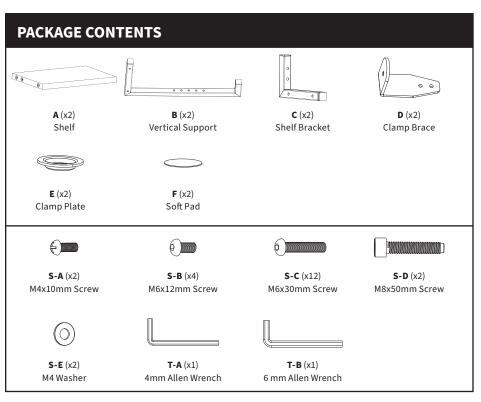



DO NOT EXCEED WEIGHT CAPACITY.


Failure to do so may result in serious injury.




ASSEMBLY STEPS

STEP 1

Secure Shelf (A) into top holes on Vertical Support (B) using M6x30mm Screws (S-C) and 4mm Allen Wrench (T-A).

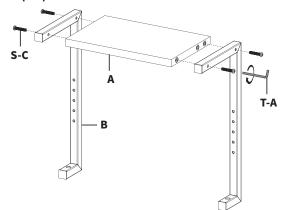

Secure remaining Shelf (A) to Shelf Bracket (C) using M6x30mm Screws (S-C) and 4mm Allen Wrench (T-A).

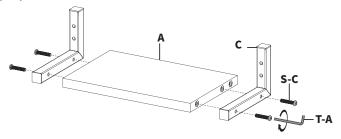


Attach Shelf Bracket (C) to middle holes of Vertical Support (B) using M6x30mm Screws (S-C) and 4mm Allen Wrench (T-A). Select mounting holes based on desired shelf height.


INSTALLATION STEPS

INSTALLATION OPTIONS:

Choose your desired installation method and follow appropriate steps below.

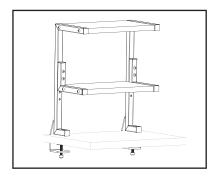



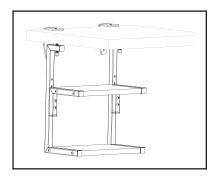


BELOW DESK Page 6-7

Above Desk


STEP 1

Thread M8x50mm Screws (S-D) into Clamp Braces (D) with Clamp Plate (E), M4x10mm Screws (S-A) and M4 washer (S-E). Tighten using 6mm Allen Wrench (T-B) and a Phillips Screwdriver. Mount the clamp assemblies to Vertical Supports (B) using M6x12mm Screws (S-B) and 4mm Allen Wrench (T-A). S-A В S-D T-B

STEP 2

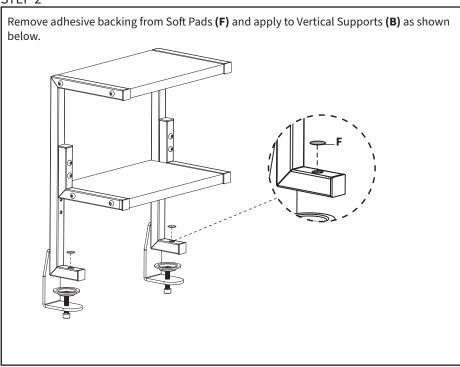


STEP 3

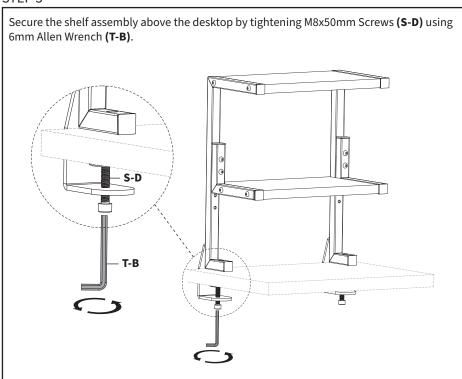


Below Desk


STEP 1

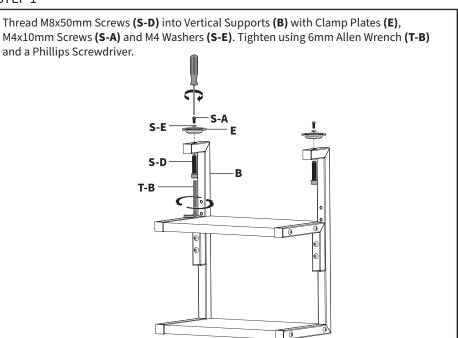


STEP 2

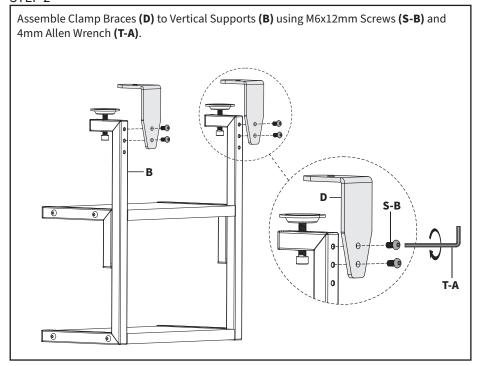

Remove adhesive backing from Soft Pads (F) and apply them to Clamp Braces (D) as shown below.

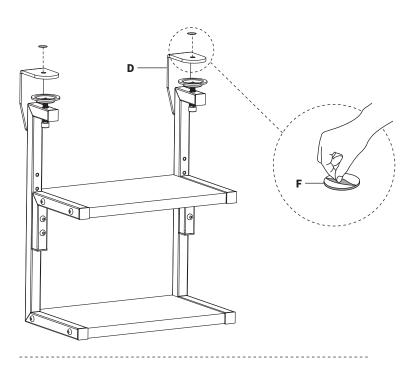

Secure the shelf assembly below the desktop by tightening M8x50mm Screws **(S-D)** using 6mm Allen Wrench **(T-B)**.

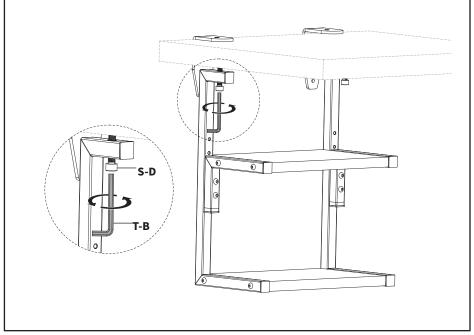



Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (within office hrs): 5M 4S



www.vivo-us.com Chat live with an agent! AVG. RESOLUTION TIME (within office hrs): < 15 M



help@vivo-us.com

AVG. RESPONSE TIME (within office hrs): 1HR 8M

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr