


Single Monitor Extra Tall Desk Mount

Instruction Manual

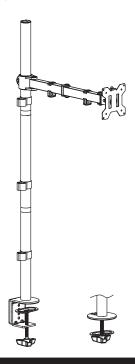

SKU: STAND-V011/W



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/stand-v011

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com



309-278-5303

Chat live with an agent!

WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.



TIPOVER WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:


- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF MONITOR OR STAND.
- USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.



WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REOUIRED.

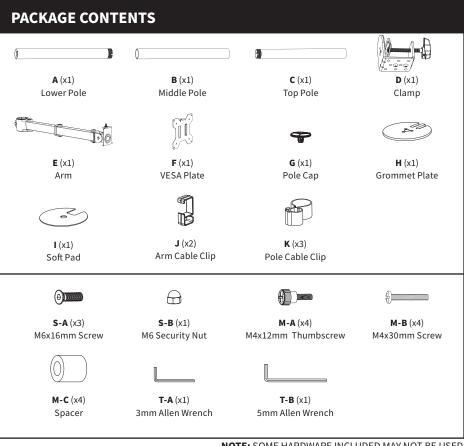


NOTE: SOME HARDWARE INCLUDED MAY NOT BE USED




ASSEMBLY STEPS

STEP 1

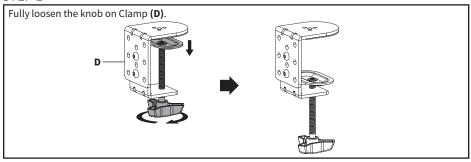


STEP 2: Option A - Desk Clamp

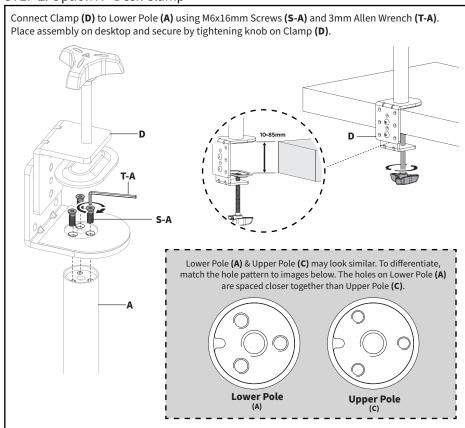


STEP 2: Option B - Grommet


Using a Phillips screwdriver, remove the screw from Clamp (**D**) and separate Clamp Bolt (**D1**) and Clamp Plate (**D2**) from the clamp assembly. Thread Clamp Plate (**D2**) onto Clamp Bolt (**D1**). Connect Grommet Plate (**H**) to Lower Pole (**A**) using M6x16mm Screws (**S-A**) and 3mm Allen Wrench (**T-A**). Remove adhesive backing from Soft Pad (**I**) and adhere to Grommet Plate (**H**).

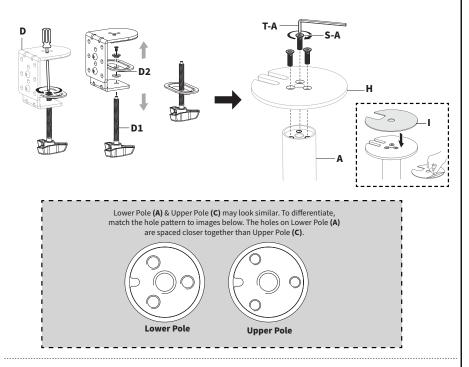


Place the pole assembly over grommet hole in desk, and connect using Clamp Bolt (**D1**) and Clamp Plate (**D2**). Secure by tightening Clamp Bolt (**D1**). For desktops without an existing gromment hole, use a 3/8" (10mm) drill bit to drill through desktop, then secure assembly as previously described.

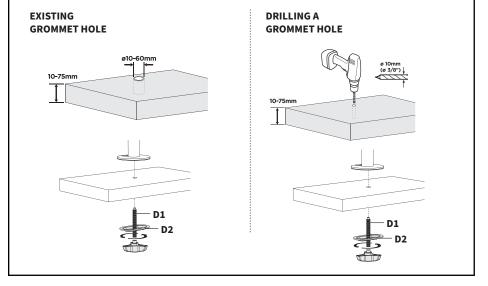


STEP 3

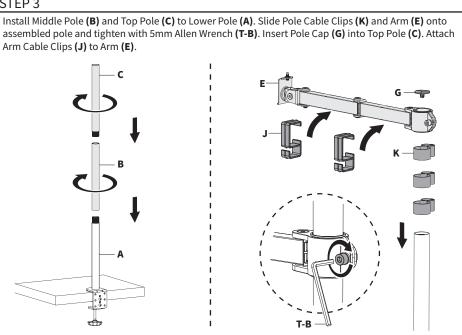


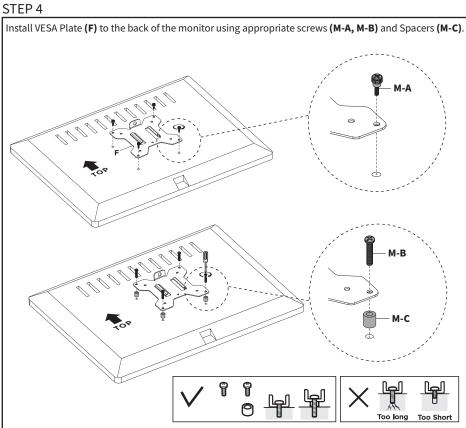


STEP 5

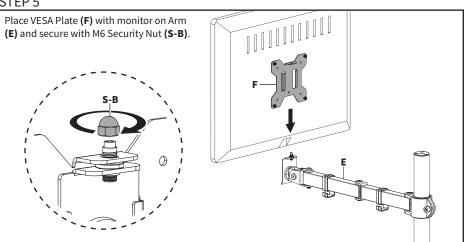

STEP 6

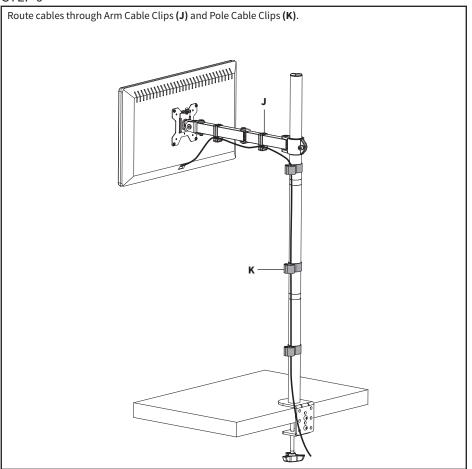

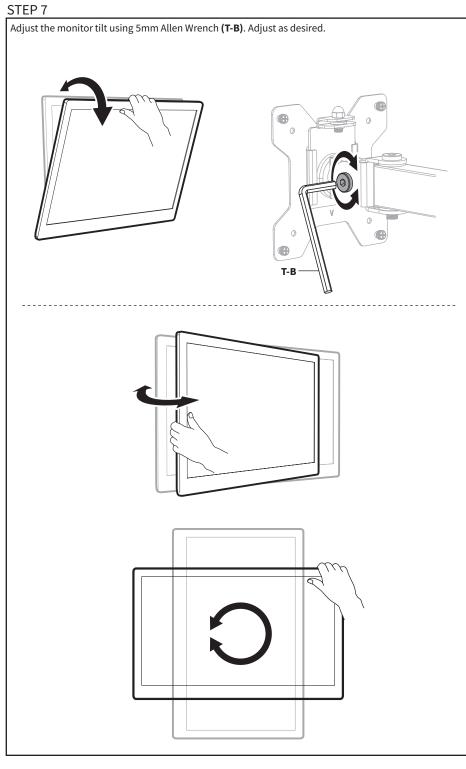



Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.



309-278-5303

AVG. RESOLUTION TIME (within office hrs): 5M 4S



www.vivo-us.com Chat live with an agent!

AVG. RESOLUTION TIME (within office hrs): < 15 M



help@vivo-us.com

AVG. RESPONSE TIME (within office hrs): 1HR 8M

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr