


Pneumatic Arm Single Monitor Desk Mount

Instruction Manual

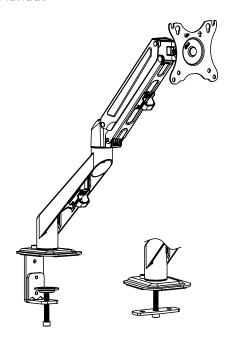

SKU: STAND-V1010



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/stand-v101o

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST



help@vivo-us.com



www.vivo-us.com Chat live with an agent!




309-278-5303

WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

M WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

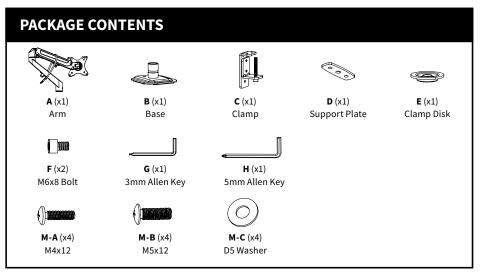

NOTE: SOME HARDWARE MAY NOT BE USED

TOOLS NEEDED



DO NOT EXCEED WEIGHT CAPACITY. Failure to do so may result in serious injury.




ASSEMBLY STEPS

STEP 1

OPTION A: Desk Clamp Installation Assemble base (B) to clamp (C) using M6x8 bolts (F), and tighten with 5mm Allen key (H). Unscrew the large clamp bolt to the "open" position.

For 3/8" - 2" (10mm - 50mm) desk thickness, place clamp disk (E) onto the top of the clamp bolt. Place assembled base onto edge of desk and tighten using the 5mm Allen key.

For 1-1/2" - 3-1/8" (40mm - 80mm) desk thickness, remove the two bolts from the back of the clamp using 5mm Allen key, and then reassemble clamp to the lower position. Place clamp disk (E) onto the top of the clamp bolt. Place assembled base onto edge of desk and tighten using the 5mm Allen key.

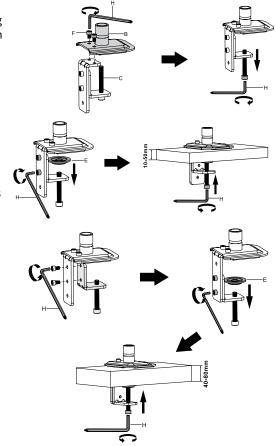






Do not overtighten screw!

OPTION B: Grommet Base Installation


Remove large clamp bolt from clamp (C). If necessary, drill hole in desk using a 3/8" (10mm) drill bit. Secure base (B) to desk using clamp bolt with support plate (D), and tighten using 5mm Allen key (H). NOTE: Grommet option will fit a desk thickness of 3/8" - 1-3/4" (10mm - 45mm).





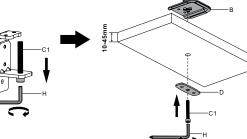


Do not overtighten screw!

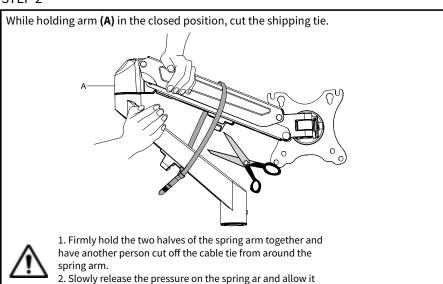


to gradually stretch to it's full extension.


STEP 3

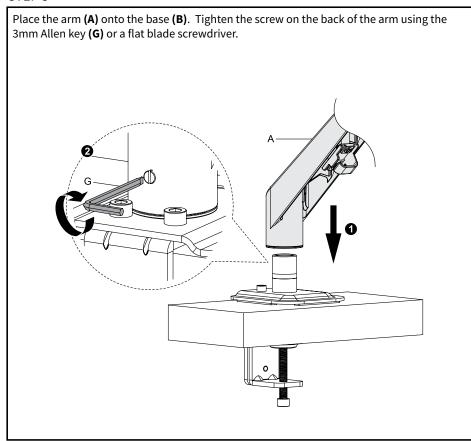

STEP 4

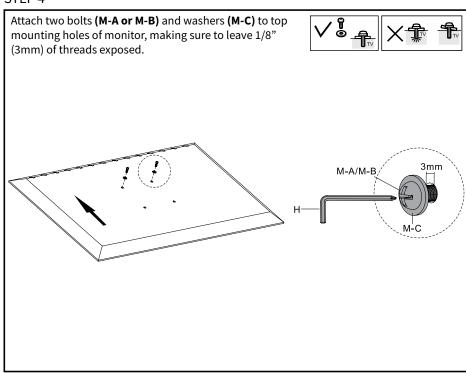


STEP 5

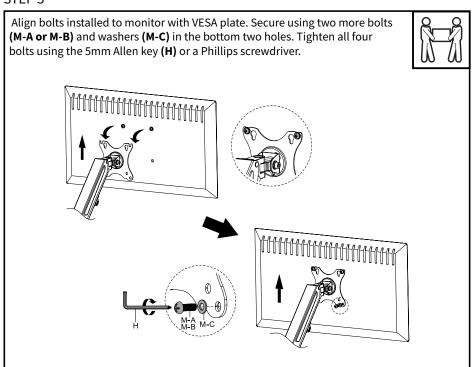

5

STEP 7

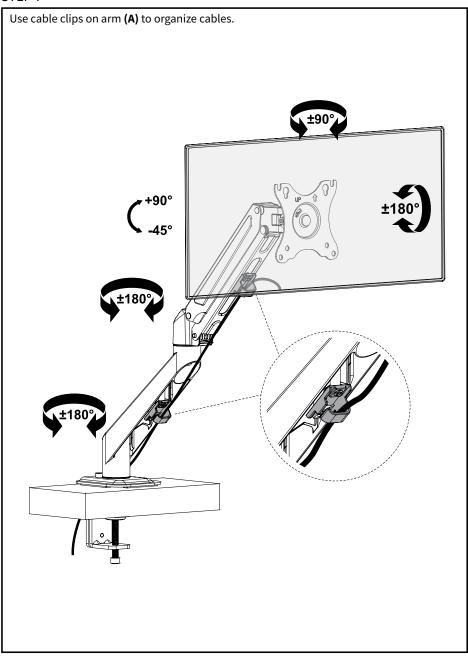



Open Monday - Friday 7:00am - 7:00pm CST,

our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.

 \subseteq

help@vivo-us.com

AVG. RESPONSE TIME (within office hrs): 1HR 8M

- 23% within < 15m
- 38% within < 30m
- 61% within < 1hr
- 83% within < 2hr
- 92% within < 3hr



www.vivo-us.com
Chat live with an agent!

AVG. RESOLUTION TIME (within office hrs): < 15 M



309-278-5303

AVG. RESOLUTION TIME (within office hrs): 5M 4S