



## 77316-[ ] SPADEWELL


### 77325 BUMPER INSTALLATION INSTRUCTIONS

#### INTRODUCTION

1. Please read these instructions before STARTING.
2. CONGRATULATIONS on your purchase of the Nemco Spadwell model 77316-[ ]. It will provide many years of service cleaning your ice cream spades.
3. These instructions outline a quick and easy technique of installing the BUMPER and should take less than a few minutes to complete.

#### INSTALLATION

1. Orient the Bumper onto the well lip as follows: **SEE DRAWING 1**. The slot in the bumper has a hole in the center and a slit shifted to one side. The shifted slot goes to the inside of the well.

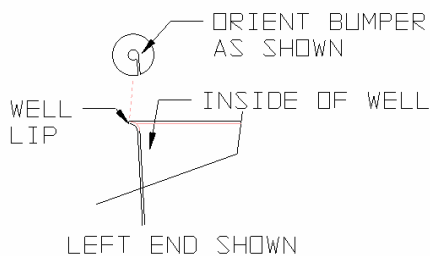

**DRAWING 1**

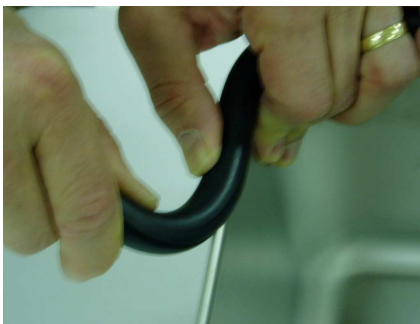


**PHOTO 1**



**PHOTO 2**

2. Start bumper onto lip - **See Photo 1**, and slide to about 1/4" to 3/8" from rear of mounting bracket - **See Photo 2**



**PHOTO 3**



**PHOTO 4**



**PHOTO 5**

3. Install the bumper on the lip by bending the Bumper back onto itself and using the thumb or your other hand to push in place. **SEE Photo 3**. Note bending the bumper back expands the slit opening making it easier for installation.
4. Next, while firmly holding the installed portion of the bumper, slide the remaining portion into place between the end flange and the well. **See Photo 4**.
5. Note a rocking back & forth motion will aid in seating the Bumper onto the well Lip.
6. The installation is now complete. **See Photo 5**.



**NEMCO Food Equipment**  
301 Meuse Argonne  
Hicksville, OH 43526  
Phone 1-800-782-6761 Toll Free  
[www.nemcofoodequip.com](http://www.nemcofoodequip.com)