

Application Guide

Tools, Techniques & Important Tips



WATER PROOF



STRETCHABLE



STRENGTH

#1 Waterproofing Bondcoat

BASECRETE

Flexible Waterproof Bondcoat

Control Joint Application Detail

Installation Checklist:



BASECRETE
KIT



WATERPROOF
POLYURETHANE




TROWEL



Squeegee or
Roller

1
Apply your first coat of 1/16th" BASECRETE with a roller, squeegee or preferred application method.

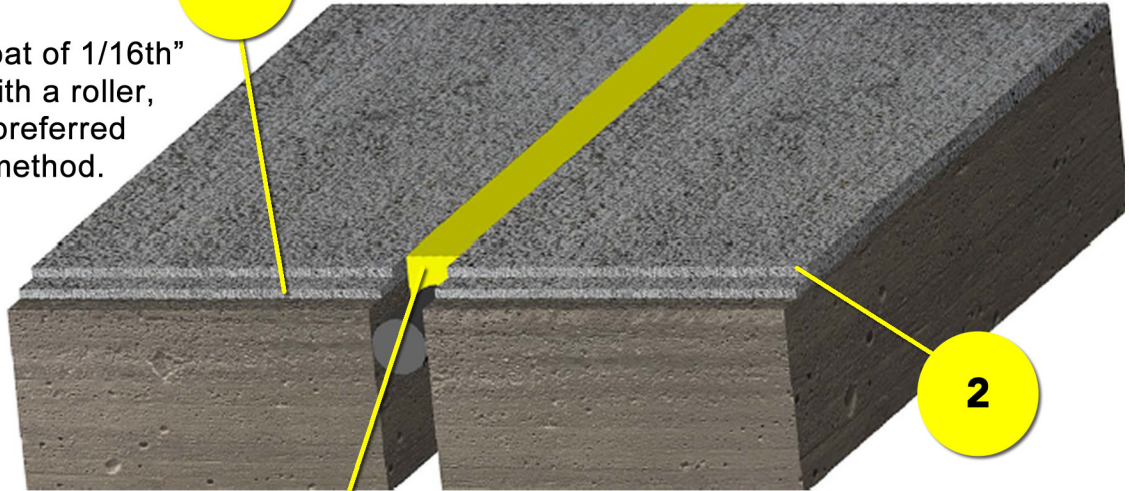

2
3
Complete application with a cant bead of waterproof polyurethane sealant onto the seam / backrod and let it dry thoroughly.

After your first coat has fully dried (allow at least 24 hours of curing time) apply a second coat of BASECRETE and cure for another 24 hours.



Recommended
Polyurethane

- Brands:
- Sikaflex
 - Pecora
 - BOSS

Control Joint

Watch Application Video





BASECRETE

Flexible Waterproof Bondcoat

Crack Application Detail

Installation Checklist:



BASECRETE KIT



ANGLE GRINDER



PREMIUM BASECRETE 4" MESH




TROWEL ROLLER OR SQUEEGEE

1

FOR CRACKS 1/16" to 1/4"

Use an angle grinder or similar device to slightly open the crack. Then Thoroughly clean and remove all debris.

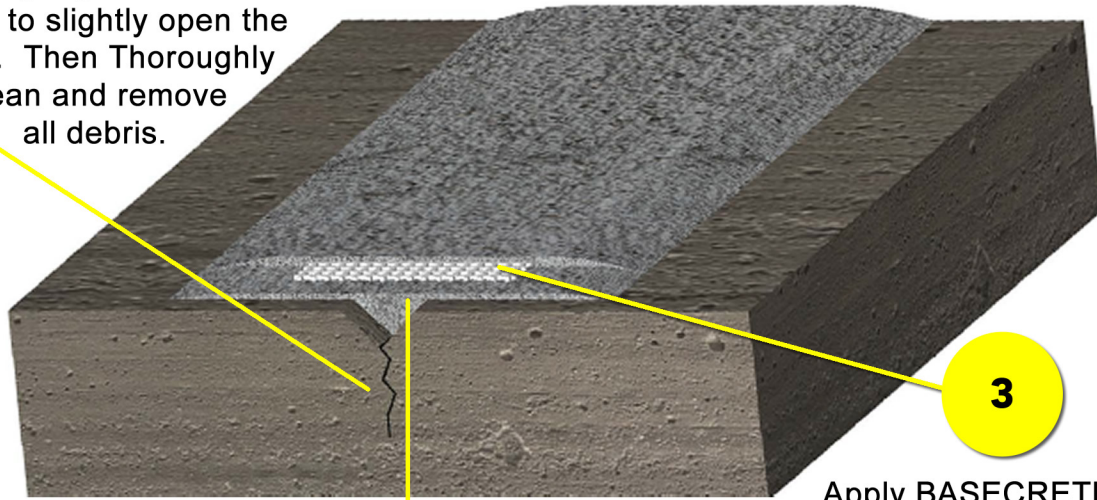

3

Apply BASECRETE MESH directly onto the wet application and then immediately apply a second coat that thoroughly covers the mesh.

Allow 24 Hours To Cure

2

Fill the crack area with BASECRETE making sure to overlap the area by at least 2" to 3" inches on each side.

Crack Repair

Watch Application Video



Installation Checklist:



BASECRETE KIT



CONCRETE RASP



TROWEL



PREMIUM BASECRETE 4" MESH

Rasp the surface of your ICF block to prepare for an initial coat of BASECRETE

1

2

Trowel the first layer of BASECRETE onto the rasped surface at a minimum of 1/8"

3

Embed premium, 38" BASECRETE mesh into the wet layer of BASECRETE.

4

Trowel a second coat of BASECRETE over the mesh while the application is STILL WET. This coat can be back-rolled for desired finish. Use a 3/4" nap for plaster finish. Let cure for at least 24 hours.

ICF BLOCK

Watch Application Video





BASECRETE

Flexible Waterproof Bondcoat

Vertical Application Detail

Installation Checklist:




BASECRETE KIT



WATERPROOF POLYURETHANE



TROWEL

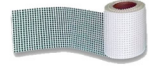


PREMIUM BASECRETE 4" MESH

Apply a cant bead of waterproof polyurethane sealant onto the substrate seam and let it dry thoroughly.



1

Recommended Polyurethane Brands:
- Sikaflex
- Pecora
- BOSS

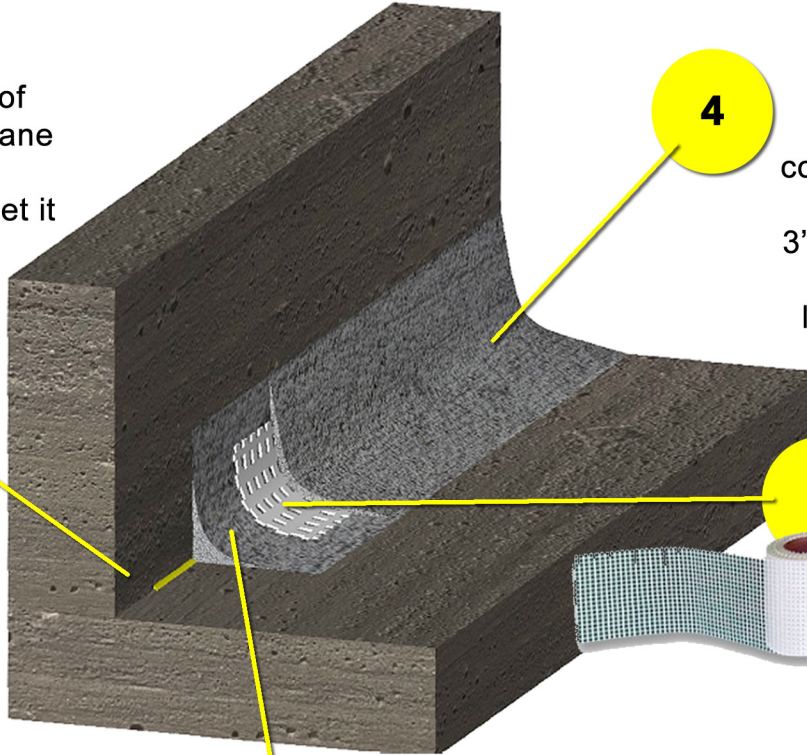

4

Immediately trowel another wet BASECRETE layer onto the joint, making sure to completely cover the reinforcing mesh and extending at least 3" on the vertical and horizontal surfaces. Then, allow at least 24 hours of curing time.

3

Immediately embed 4" BASECRETE MESH seam into the wet BASECRETE later created in step two.

2

Once sealant has dried, apply a cove of wet BASECRETE with a trowel onto the horizontal and vertical surfaces. BASECRETE MUST extend a minimum of 3" on each surface plane.

VERTICAL

Watch Application Video





BASECRETE

Flexible Waterproof Bondcoat

Installation Checklist:



BASECRETE KIT



WATERPROOF POLYURETHANE




PAINT BRUSH



TROWEL

Pipe Application Detail

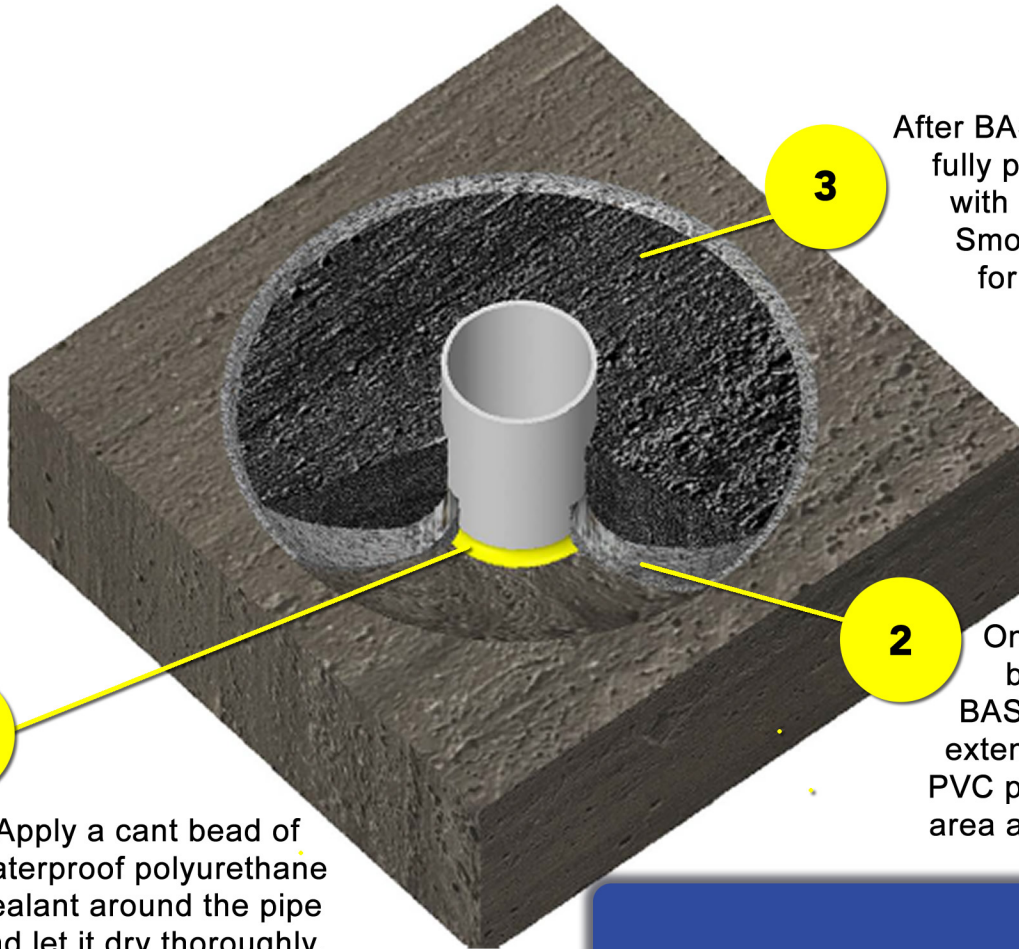

After BASECRETE has cured, fully pack the entire area with hydraulic cement. Smooth and allow the for full curing time.

Once sealant has dried, brush on 1/8" Inch of BASECRETE being sure to extend the application up the PVC pipe. Coat the entire drain area and allow 24 hours to dry.

Apply a cant bead of waterproof polyurethane sealant around the pipe and let it dry thoroughly.




Recommended Polyurethane Brands:

- Sikaflex
- Pecora
- BOSS

Pipe

Watch Application Video

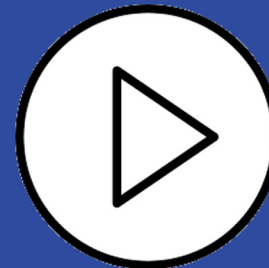



BASECRETE

Flexible Waterproof Bondcoat

Drain Application Detail

Installation Checklist:



BASECRETE KIT




WATERPROOF POLYURETHANE



PAINT BRUSH



TROWEL

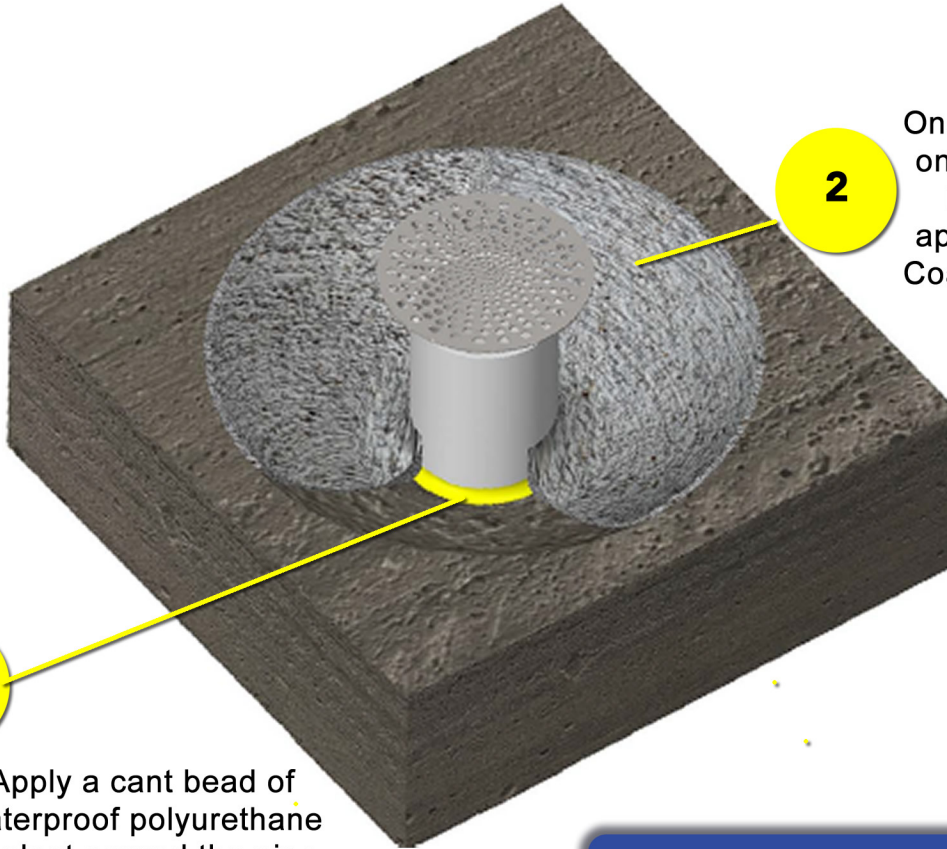

1



Apply a cant bead of waterproof polyurethane sealant around the pipe and let it dry thoroughly.


2

Once sealant has dried, brush on 1/8" Inch of BASECRETE being sure to extend the application up the PVC pipe. Coat the entire drain area and allow 24 hours to dry.

- Recommended Polyurethane Brands:
- Sikaflex
 - Pecora
 - BOSS

Drain

Watch Application Video

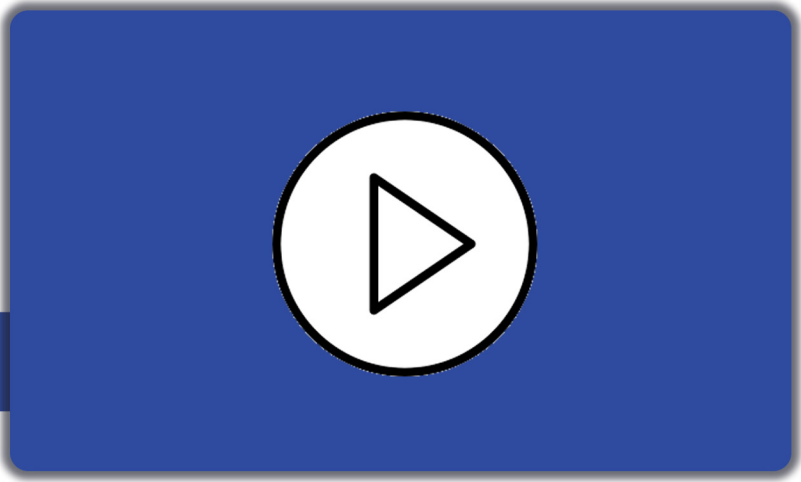



BASECRETE

Flexible Waterproof Bondcoat

Wood Application Detail

Installation Checklist:



BASECRETE KIT



1/8" STEEL LATHS



HEAVY DUTY OR PNEUMATIC STAPLE GUN



TROWEL ROLLER OR SQUEEGEE

1

Begin by installing 1/8" inch galvanized steel laths over the wood and fasten with staples



2

Roll, Squeegee, Spray, Trowel or Paint on the first coat of BASECRETE at 1/8" thickness and allow for at least 24 hours of cure time.

3

After at least 24 hours, Roll, Squeegee, Spray, Trowel or Paint on a second coat of BASECRETE at 1/8" thickness. Allow to cure for 24 hours.

Wood

Watch Application Video

