

# Installation Guide

## *Installing on Paling Fence*



**Tools Needed:**

Measuring Tape, Scissors, and Zip Ties.

1. Measure the fence that you are going to cover.
2. Calculate the numbers of panels you will need.
3. Connect the panels together using the easy snap-to-lock system.
4. Secure the panels together with zip ties.
5. Secure the aligned panels to the fence with plastic ties.
6. Trim the extra zip ties to finish the installation.

## *Installing on Timber Cladding Wall*




**Tools Needed:**

Measuring Tape, Scissors, Zip Ties, and Staple Gun.

1. Measure the wall that you are going to cover.
2. Calculate the numbers of panels you will need.
3. Connect the panels together using the easy snap-to-lock system.
4. Secure the panels together with zip ties.
5. Secure the aligned panels to the wall with a staple gun.

## *Installing on Brick or Concrete Walls*

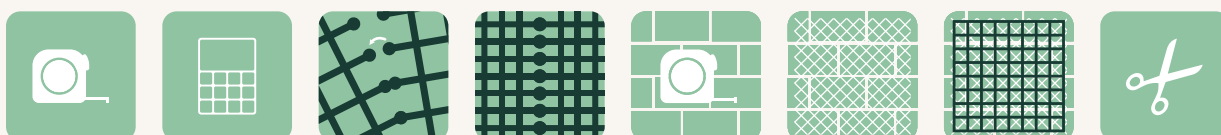

**Tools Needed:**

Measuring Tape, Scissors, Zip Ties, Staple Gun, Drill, Concrete Screws, and Steel Wire Grid.

1. Measure the wall that you are going to cover.
2. Calculate the numbers of panels you will need.
3. Connect the panels together using the easy snap-to-lock system.
4. Fix the panels together as required size.
5. Measure the wall to define the area of coverage.
6. Using a drill, mount the steel wire grid onto the wall with concrete screws.
7. Secure the panels onto the steel wire grid with zip ties.
8. Trim the extra zip ties to finish the installation.