



HEAVY DUTY AXLE KIT

Install Instructions

Page 1 of 1

Fits all Polaris models utilizing OEM Spacer PN 5432535 from 1997 and up.

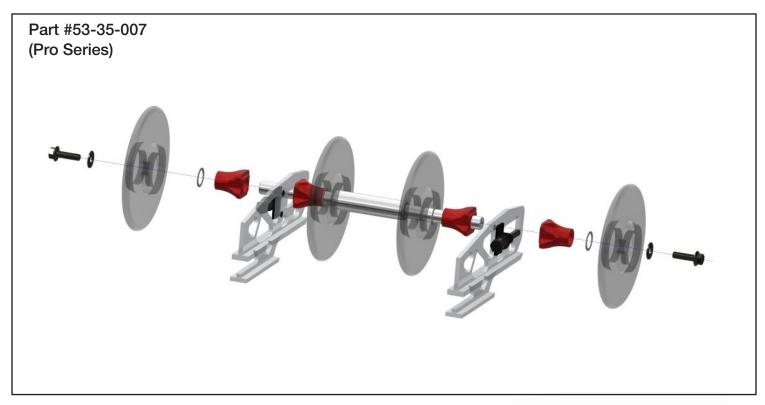

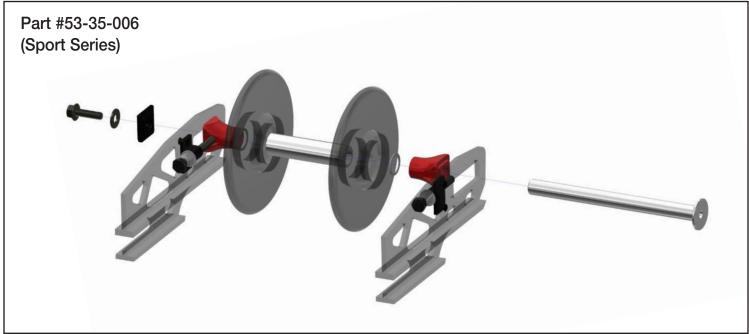



Torque all nuts and bolts and tighten track tension to OEM specifications found in your vehicle service manual. Important! Read all instructions carefully and double check your work. Failure to follow instructions may result in damage to suspension components. After installation is complete be sure to cycle the suspension through its motion. We are not responsible for any damage that can occur from improper installation.

902-35-009 | Rev 0 | 9/27/2017

3

If in doubt, just ask!