

TRACKbox® - TB2 Installation Guide


Wiring

CAN bus Requires V5 Firmware

7	8	9	10	11	12
1	2	3	4	5	6

12-way microfit plug to TB2

3	Yellow	Ignition Sense (6-42 Volt DC input)
5	Black	Ground
6	Red	Power (6-42 Volt DC)

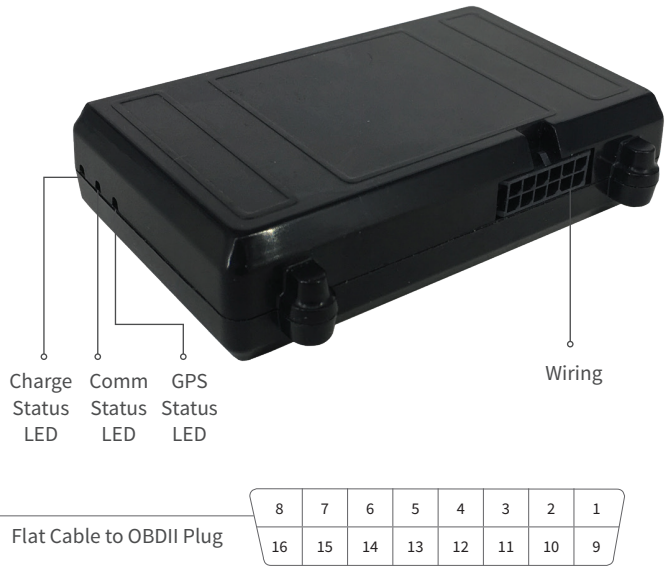

Installation tips

- Secure TRACKbox® - TB2 unit firmly.
- Sticker must face down, and the unit should be as flat as possible.
- There should be no metal above the unit.
- Install as far away from radio and speakers as possible.

TRACKbox® - TB2 Device Status LED's

The TRACKbox® - TB2 device contains 3 status LED's on the board indicating status information relating to Charge, Communication and GPS.

Charge Status LED	Comm Status LED	GPS Status LED
OFF: No external power	FAST FLASH RED: Modem wake up	RED: No antenna attached
FLASH RED: Battery Low - no external power		
RED: Battery low- charging	FLASH RED: Waiting for SIM	FLASH RED: Searching/acquiring fix
FLASH GREEN: Battery level OK - no external power		
GREEN: Charge Done	RED: Not registered to network (inactive/faulty SIM or bad coverage)	GREEN: Fix acquired
ORANGE: Pre-charge	GREEN: Registered on network	FLASH GREEN: Sleep mode (GPS off)
FLASHING RED/GREEN: No battery detected	FLASH GREEN: Insufficient power for modem	