



CLEANING INSTRUCTIONS:

OCCASIONALLY, THE INSIDE OF THE LARGER DIAMETER PORTION OF THE POLE WILL NEED CLEANED IF YOU'RE IN HEAVY DEBRIS. UNTHREAD THE LARGE COLLAR PART AS IN STEP 1, FULLY REMOVING IT. DRILL A HOLE IN THE END OF THE RUBBER GRIP TO ALLOW WATER TO FLOW OUT. NEXT, RUN WATER DOWN INSIDE THE POLE AT THE LARGE COLLAR UNTIL DEBRIS IS REMOVED. REPLACE LARGE COLLAR. NEVER USE ANY TYPE OF LUBRICANT INSIDE THE POLE.

GLUE USED TO ATTACH BLACK LOCKING COLLARS:

IF COLLARS EVER COME LOOSE USE
LOCTITE SUPER GLUE- PROFESSIONAL



FOR MORE HEADS AND ACCESSORIES VISIT OUR WEBSITE AT
WWW.INTELETOOL.COM

PLEASE LET US KNOW WHAT YOU THINK OF INTELETOOL
AND SEND ANY ACTION PHOTOS OR VIDEO TO
INFO@INTELETOOL.COM. WE'D LOVE TO POST THEM ON
OUR WEBSITE!



Copyright 2009 FENSTEMAKER ENTERPRISES LLC
DBA INTELETOOL



**WITH TWIST&LOCK INNERLOCK
POLE OPERATION AND
HEAD TO POLE ASSEMBLY
INSTRUCTIONS**



NOTE: THE POLE WILL COME TO YOU IN THE INTERNALLY LOCKED, COLLAPSED POSITION WITH ALL BLACK COLLARS IN THE LOOSENED POSITION. TO EXTEND THE POLE FOR THE FIRST TIME FOLLOW POLE OPERATING INSTRUCTIONS.



HEAD TO POLE ASSEMBLY INSTRUCTIONS



HI, MY NAME IS DAN FENSTEMAKER, INVENTOR OF INTELETOOL. I'D LIKE TO BETTER ACQUAINT YOU WITH HOW IT WORKS!

STEP 1- SELECT THE HEAD OF YOUR CHOICE.

STEP 2- PLACE THE HEAD IN THE POLE END, MAKING SURE THE BLACK COLLAR IS LOOSENED COUNTER-CLOCKWISE.

STEP 3- SECURE THE HEAD BY PLACING IT IN THE COLLAR AND THEN BY ROTATING CLOCKWISE TO THREAD THE HEAD INTO THE POLE 6 ROTATIONS UNTIL SEATED.

STEP 4. GRAB THE UPPER SECTION OF THE POLE WITH ONE HAND AND ROTATE THE BLACK COLLAR CLOCKWISE UNTIL SNUG. DO NOT OVER TIGHTEN.

STEP 5. NOW GET TO WORK!

1




2



3



4

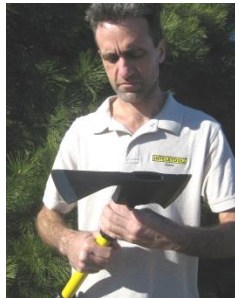

5



POLE OPERATION INSTRUCTIONS



STEP 1-TO EXTEND THE POLE- LOOSEN THE LARGE BLACK COLLAR BY TURNING COUNTER CLOCKWISE UNTIL LOOSE BUT NOT COMPLETELY UNTHREADED.

STEP 2-GRAB THE TOP SECTION OF THE POLE WITH YOUR LEFT HAND AND THE LOWER SECTION WITH YOUR RIGHT. KEEPING THE LOWER SECTION STILL, ROTATE THE UPPER SECTION COUNTER CLOCKWISE AND THEN PULL OUT.

STEP 3-EXTEND POLE TO DESIRED LENGTH.

STEP 4-TO ENGAGE THE INNERLOCK- WITH RIGHT HAND, GRAB THE LOWER SECTION AND WITH THE LEFT, GRAB THE UPPER SECTION. TWIST UPPER SECTION CLOCKWISE WHILE KEEPING THE LOWER SECTION STILL UNTIL YOU FEEL RESISTANCE AND THEN HEAR A CLICK. THE INNERLOCK IS NOW ENGAGED.

STEP 5-TIGHTEN LARGE BLACK COLLAR LOCK UNTIL SNUG . THE INTELETOOL TELESCOPIC POLE IS NOW READY FOR USE.

1



2



3



4



5

