

Tec Vanlife

# Sprinter Headliner Shelf Installation Guide (Sprinter 2019+)

Version 1.1 - Updated Installation Manual

---

## Pre-Installation Checklist

Before you begin, ensure you have the following items:

- T25 TORX DRIVER (COAT HANGER)
- T30 TORX DRIVER (GRAB HANDLE)

## Estimated Installation Time


**25 minutes**

---

---

## Installation Steps

1. **Begin by removing the rubber covers from the coat hooks and, if present, the bolt covers on the grab handles.**

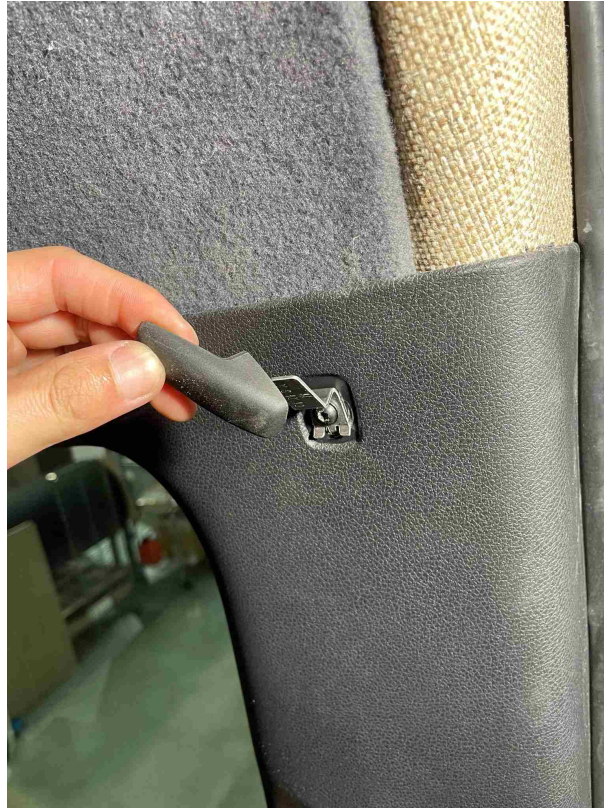


2. **Next, remove the T25 screws from the coat hook and the T30 screws from the grab handle. Keep these screws handy as you will need them for the following step.**




- 
3. **Gently pull on the handle to create space, allowing you to slide the bracket into place.**



4. **Next, reattach the coat hook along with the B pillar bracket.**

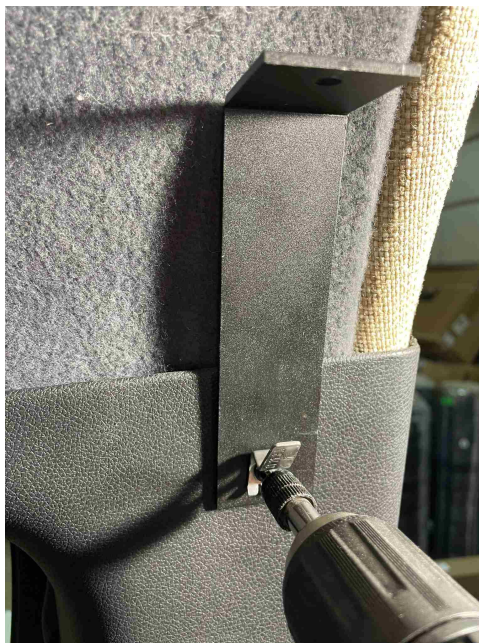

- 
5. **Now tighten all the screws.**

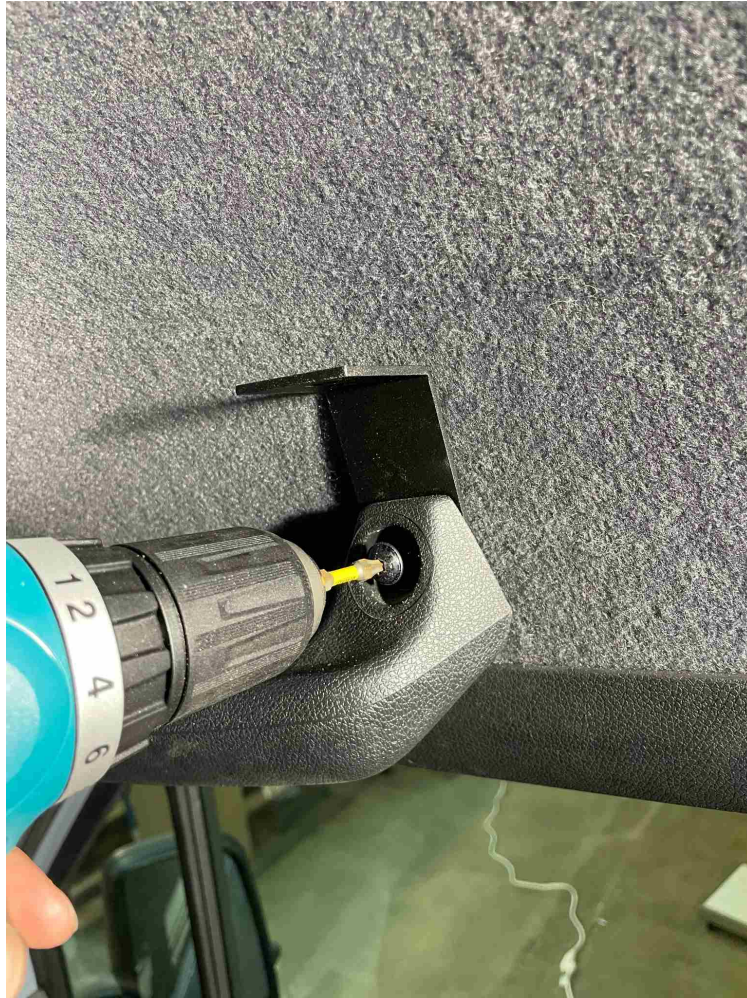

6. **Now that both brackets are installed, mirror the same process to install the brackets on the opposite side.**

- 
7. **With all four brackets in place, carefully slide the headliner shelf into position. Then, secure the shelf to the brackets using the included hardware.**



### **Maintenance**

Regularly inspect the headliner shelf to ensure it remains securely fitted.

### **Customer Support**

For assistance, please contact our customer support team at [hello@tecvan.ca](mailto:hello@tecvan.ca).

**Thank you for choosing Tec Vanlife for your Sprinter adventures!**