

DIY roller tube install sheet

DIY tube sets come in 3 models for different size pools:

- 75mm 2 piece tube set (TUNi275) with end slug kit #1009 DIY75
- 100mm 2 piece tube set (TUNi2100) with end slug kit #1010 DIYSM100
- 100mm 3 piece tube set (TUNi3100) with end slug kit #1015 DIYLG100

Regardless of model, all tubes are pre drilled with white Feather Plug holes and red self drilling screw locator holes



3 x End Slug self drill screw mounting locator holes marked Red (in 20mm from end of tube)



Second line of 3 in a further 300mm from first line

6 x Tube Joining locator hole self drill screw. 2

lines of 3 holes

First line of 3 in

50mm from end

marked Red

of tube

Feather plug hole lines marked White

The End Slug kit is packed in the accessory box. The End Slug Kit is the complete kit to make the tube set complete. Note: 6.5mm drill bit is supplied to allow for any tube length desired by simply drilling through the outer tube feather plug hole then through the inner tube if the feather plug holes don't line up. Feather plug holes are pre drilled to standard roller lengths, there is one white 2.5mm hole in the feather plug hole line that can be drilled out to 6.5mm for a further common size

2 piece tube sets have 2 different tube size therefore 2 different size end slugs, 1 x LARGE + 1 x SMALL (DIY75 + DIYSM100)

3 piece tube sets have 2 of the same size tubes for the end slugs to be installed into and a different size joiner tube, therefore they have 2 of the same size end slugs (DIYLG100)

Note where the markings are on the end slug before installation:



daisypoolcovers.com.au





DIY roller tube install sheet

Installation

Unpack and check all items

1. Line up indicator mark on End Slug to red locator mounting hole. Install 3 x self drill screws to each end slug






2. Slide tube sections together, allowing tube section to be at least 300mm longer than the pool water level width. Line up white feather plug holes then press in all feather plugs.


If special size is required, use the supplied 6.5mm drill bit to drill through outer tube feather plug hole through inner tube

Note: last feather plug hole will give minimum tube over lap





3. Install 6 x tube joining self drill screws through the 6 x red indicator holes

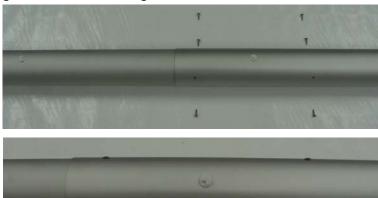

4. Cut white over cover sheet to tube length

Punch hole in each corner and centre on each side (6 total), install white eyelets to each hole tie knot in shock cord, thread on over cover ball, thread through 2 x end eyelets, thread second over cover ball then tie knot (knot sits inside over cover ball)



Over cover kit • tie knot - thread on ball • thread through from under • thread through other side from top

