



THANK YOU FOR CHOOSING RAGO FABRICATION OUR TEAM THANKS YOU FOR YOUR SUPPORT!

FABRICATION EVERY PRODUCT WE MAKE IS MADE IN THE USA AND SUPPORTS A VETERAN OWNED BUSINESS.

There are helpful install videos on www.ragofabrication.com that guides the installer through the installation process. To find the video go to More at the top of the page / Install Help / and choose the correct video that applies.

Customer service and satisfaction is our top priority (it actually is second to making kick ass products). With that being said, we will do everything we can to make sure the install process goes as smoothly as possible with the least amount of hiccups.


A couple key points to remember when installing your products:

- Get a friend to help with the installation process. An extra hand is very helpful.
- Make sure you watch the install video for your product from *start* to *finish*.
- Please be patient. When you rush, mistakes happen.
- Call with any questions!

LET'S GET STARTED!

Tools Required

- 10mm ratchet
- 10mm wrench
- 5mm Allen Head
- Pocket Flat Head Screw Driver
- Phillips Screw Driver

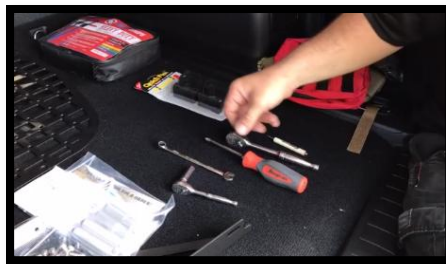

Included

- 2 - Stepped Spacers (Rear nearest to hatch) with hardware
- 2 - Large Spacers (Front nearest to back seat) with hardware
- 2 - Modular Storage Panels
- 2 - Slim Hanger Brackets
- 2 - Hanger L Bracket
- 14 - Stainless Steel Bolts
- 28 - Washers
- 14 - Nylon Locking Nuts

Install



Step 1

Remove Rear Cover



Step 2

Use 10mm Ratchet to remove bolt



Step 3

Remove Large Spacer and screw in to hole. Use caution when handling spacers. Some edges maybe sharp.



Step 4

Twist left to remove round tie down knob and unscrew



Step 5

Insert step spacer and screw in.




Step 5

Use pocket screw driver to expose bolt from hook. Remove bolt. Set aside to Reinstall later.




Step 6

Place slim bracket over the L bracket and bolt together using a washer on on top and bottom loosely.

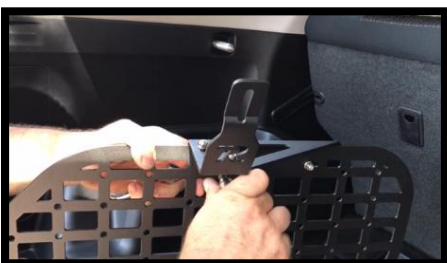

Step 7

Bolt MSP to bracket using bolts, washers, and nuts. Do not overtighten to allow for adjustment.

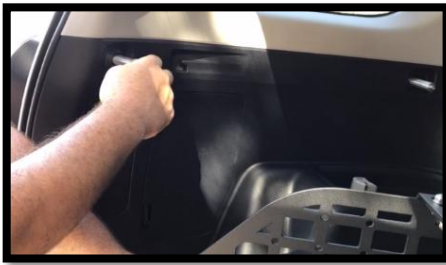

Step 8

Unscrew bolt from spacer.



Step 9

Using original hook bolt, use bracket to attach panel to hook hole. Then use spacer bolts to attach MSP to spacers.



You will want to make sure you lift the weight of the rack to avoid damaging the threads on the spacers when tightening the rack.



Step 10

Tighten all the bolts.
Then you can just add install your bottle opener using your remaining bolts.



Please exercise judgment when adding weight and items to the rack. Rago Fabrication has not crash or weight tested the rack.
Disclaimer Rago Fabrication is an aftermarket product manufacture and WILL NOT make claims without extensive testing in a controlled testing environment. The installer as well as the purchaser of our products is advised to use our products at their own discretion and will analyze the risks involved for their own situation.

The purchase or installation or any and all Rago Fabrication products indicates your agreement and acceptance of the following terms and conditions:

By purchasing or installing this/these product(s), you agree to be bound by the following terms and conditions: Rago Fabrication products are intended for off-road use only. Rago Fabrication cannot be held liable for damage to the vehicle or injuries sustained as a result of installation or use of Rago Fabrication products. The purchaser accepts full liability for any and all property damage and any and all injuries that may occur during installation or use of Rago Fabrication products. All products sold by Rago Fabrication are for off road use only and are not intended nor designed for use on the street. Any modification of your vehicle with Rago Fabrication products can result in hazardous situations which may result in property damage or bodily harm. The purchaser of this product assumes all risks, including but not limited to personal injury, property damage, and legal consequences arising from installation or use of Rago Fabrication products. All order sales are conducted and transacted by Rago Fabrication which has no presence outside the State of Texas. You agree that any and all legal action or proceeding between Rago Fabrication you shall be brought exclusively in a federal or state court of competent jurisdiction sitting in Bexar, Texas.