






1. Long bolts / Spacers
2. Medium bolts

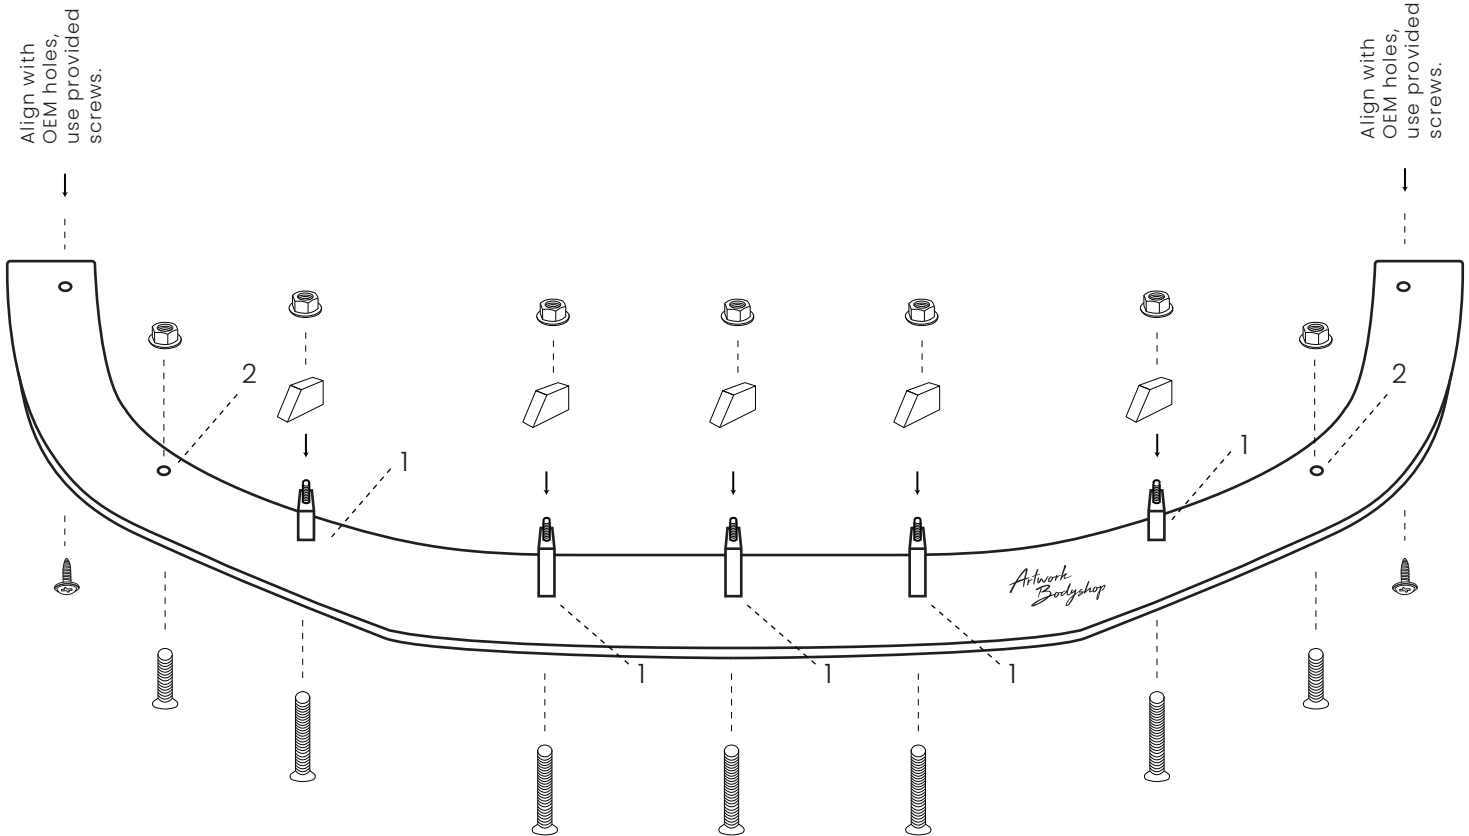


PARTS LIST MAY DIFFER ACCORDING TO YOUR MODEL

**PARTS LIST**

	#10 x 1" Black Phillips Screws x 2
	M8 Lock Nuts x 7
	40mm M8 Bolts x 5 30mm M8 Bolts x 2
	M8 Hex Key x 1

**SPACERS SIDE VIEW**

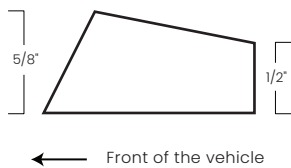

5/8" Spacers x 5

\*Install your bolts with your hex key by the bottom of your lip.

**\*\*\*CAUTION\*\*\***

PROFESSIONAL INSTALLATION IS STRONGLY RECOMMENDED

1. Remove each exterior screws under your bumper towards the wheels.
2. Align the splitter and install it with the screws (or the provided ones if the factory ones are not long enough) you just removed in the factory holes to hold the splitter in place. (You can use a car jack to hold the middle of the splitter up).
3. Use a 5/16" drill bit and through the remaining holes of the splitter, drill holes under your bumper. Make sure the drill bit stays straight as possible.
4. Remove the screws under your bumper so you can access inside the bumper and assemble the splitter with spacers, bolts and nuts like the drawing shows. Screw the nuts inside by hand until it's tight, and then use the hex key by the bottom of the splitter to tight the bolts.
5. Reinstall all removed screws and make sure everything is tight, take pictures and send it to **info@artworkbodyshop.com** and make sure to tag us on social media **@artworkbodyshop!**