


**\*\*\*CAUTION\*\*\***

PROFESSIONAL INSTALLATION IS STRONGLY RECOMMENDED

1. Remove each exterior screws under your bumper towards the wheels.
2. Align the splitter and install it with the provided screws in the factory holes to hold the splitter in place (You can use a car jack to hold the middle of the splitter up).
3. Use a 5/16 drill bit, and through the 4 middles holes (front ones) drill holes under your bumper. Make sure the drill bit stays straight as possible to make sure the holes are centered with the holes in the splitter.
4. Remove the screws under your bumper so you can access inside the bumper and assemble the splitter with spacers, screws, bolts and nuts like the drawing shows. Screw the nuts inside by hand until it's tight, and then use the hex key by the bottom of the splitter to tight the bolts.
5. Reinstall all removed screws and make sure everything is tight, take pictures and send it to **info@artworkbodyshop.com** and make sure to tag us on social media !

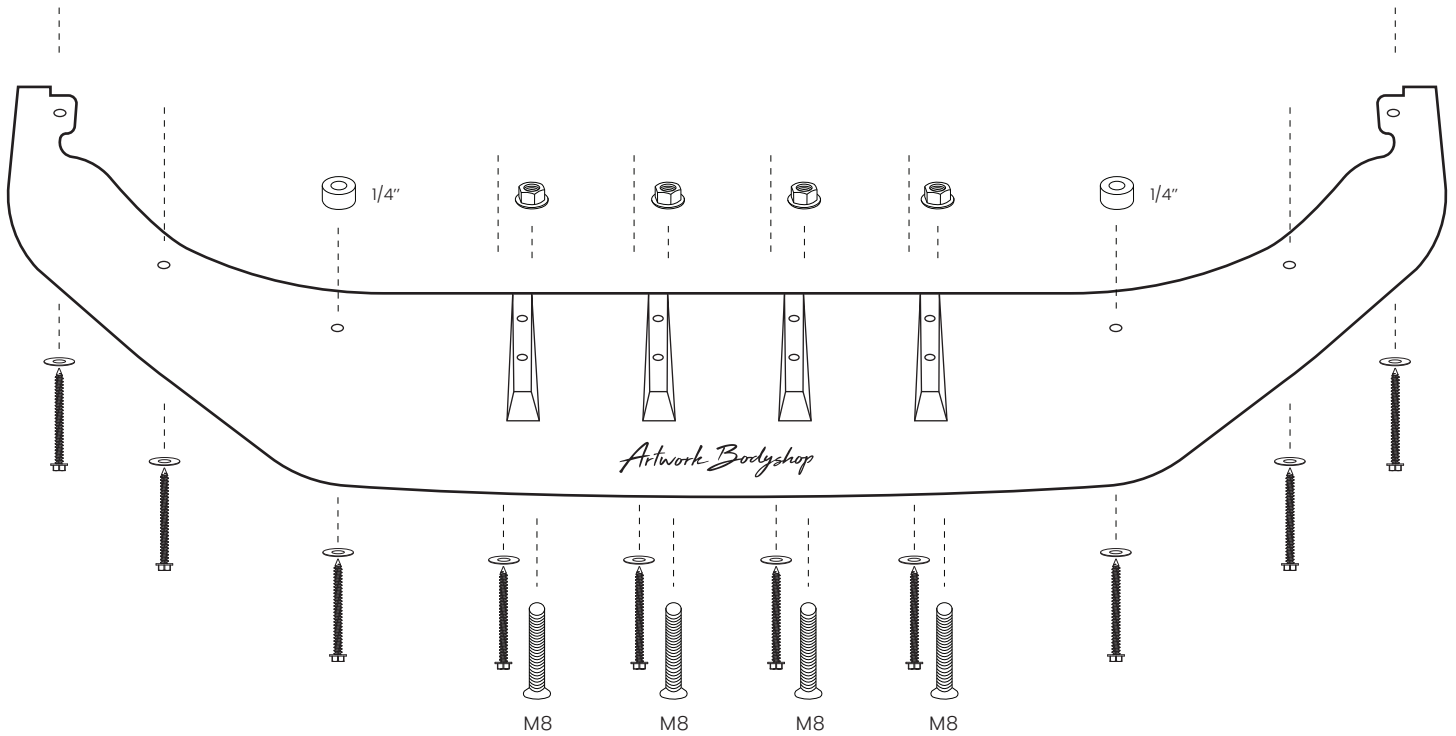

**PARTS LIST**

	55mm M8 Bolts x 4
	M8 Lock Nuts x 4
	#10-12 x 1 Hex Metal Screws x 10
	16mm Washers x 10
	Spacers x 4
	1/4" Round Spacers x 2

\* Install your bolt with your hex key by the bottom of your lip.

	M8 Hex Key x 1
--	----------------