

The Eclipse Workstation is installed in the cabinet prior to the counter being templated. A support structure, (cleat system of wood frame), will need to be constructed and mounted inside the base cabinet(s) and recessed 1/16" from the top. For 24" deep inset cabinets installed against a wall the cabinet must be pulled 1" away from the wall.

- 1) A support frame (cleat system) will need to be built and installed into the cabinet(s). This frame will support the weight of the Workstation. Note: Clips are NOT to be used.
- 2) Construct the support frame so that the inside dimensions are 1/2" larger than the basin's inside dimensions.
- 3) 3. Attach the support frame to the interior walls of the cabinet
Support frame must be installed 1/16" lower than the top of the cabinet.
Once installed, the top of the Workstation Flanges will be flush with the top of the cabinet. Use a level to ensure that the support frame is installed level in the cabinet.
- 4) Carefully place the Workstation sink into the cabinet by resting the flanges on the support frame. All four flanges should rest upon the support frame.
- 5) Use a level to ensure that the flanges are level.
- 6) The top of the flanges should be flush with the top of the cabinet.

COUNTER TOP INSTALLATION

Note: The front to back cutout dimension must be exactly 18-1/2".

The suggested maximum corner radius is 3/8". *Please refer to countertop manufacturer warranted minimums* The finished countertop will not and should not completely cover the Workstation flanges.

1/2" will be exposed on the front and back flanges (this is known as a reveal). Creating this reveal allows for the Workstation Accessories to slide across the upper tier.

1. Cover what will be the exposed 1/2" of the front and back flanges with painters tape for easy cleaning of excess silicone.
2. Apply a generous bead of silicone to the un-taped part of the flange.
3. Set the countertop and position it properly so you have 1/2" reveal on the front and back flanges and 1/4" reveal on the left and right flanges. Press countertop down onto the flange. The silicone should fill any gaps.
4. Wipe excess silicone off of exposed flange.
5. Wait one hour and remove tape. This will ensure there is a clean flange, free from silicone. Which will enable the Workstation Accessories to slide freely.



HAVENS



LIFETIME WARRANTY | EASY CARE | ERGONOMIC DESIGN | AMERICAN HANDCRAFTED

HANDCRAFTED IN THE USA BY HAVENS

BUILT-IN CULINARY WORKSTATION LEDGE FOR ACCESSORIES

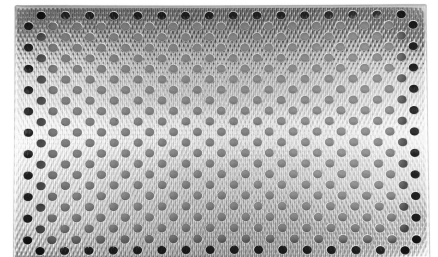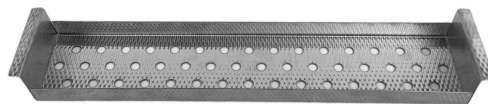

AVAILABLE CULINARY ACCESSORIES FOR THE LEGACY SINK:

12"/15" STAINLESS DRYING RACK | SPONGE & SOAP CADDY
PROFESSIONAL CUTTING BOARD | MIXING BOWL CUTTING BOARD 5
QT. PASTA STRAINER BOARD | 5 QT. MIXING BOWL BOARD TRIPLE
CONTAINER SERVE BOARD | SIX CONTAINER SERVE BOARD FILLABLE
STAINLESS DROP IN BOWL | STAINLESS DROP-IN STRAINER
2 CONTAINER & BOWL BOARD | OVEN PAN | FULL SINK COVER