


1" x 1"
Print Test
Box

Reversible Eco Bag
Handle



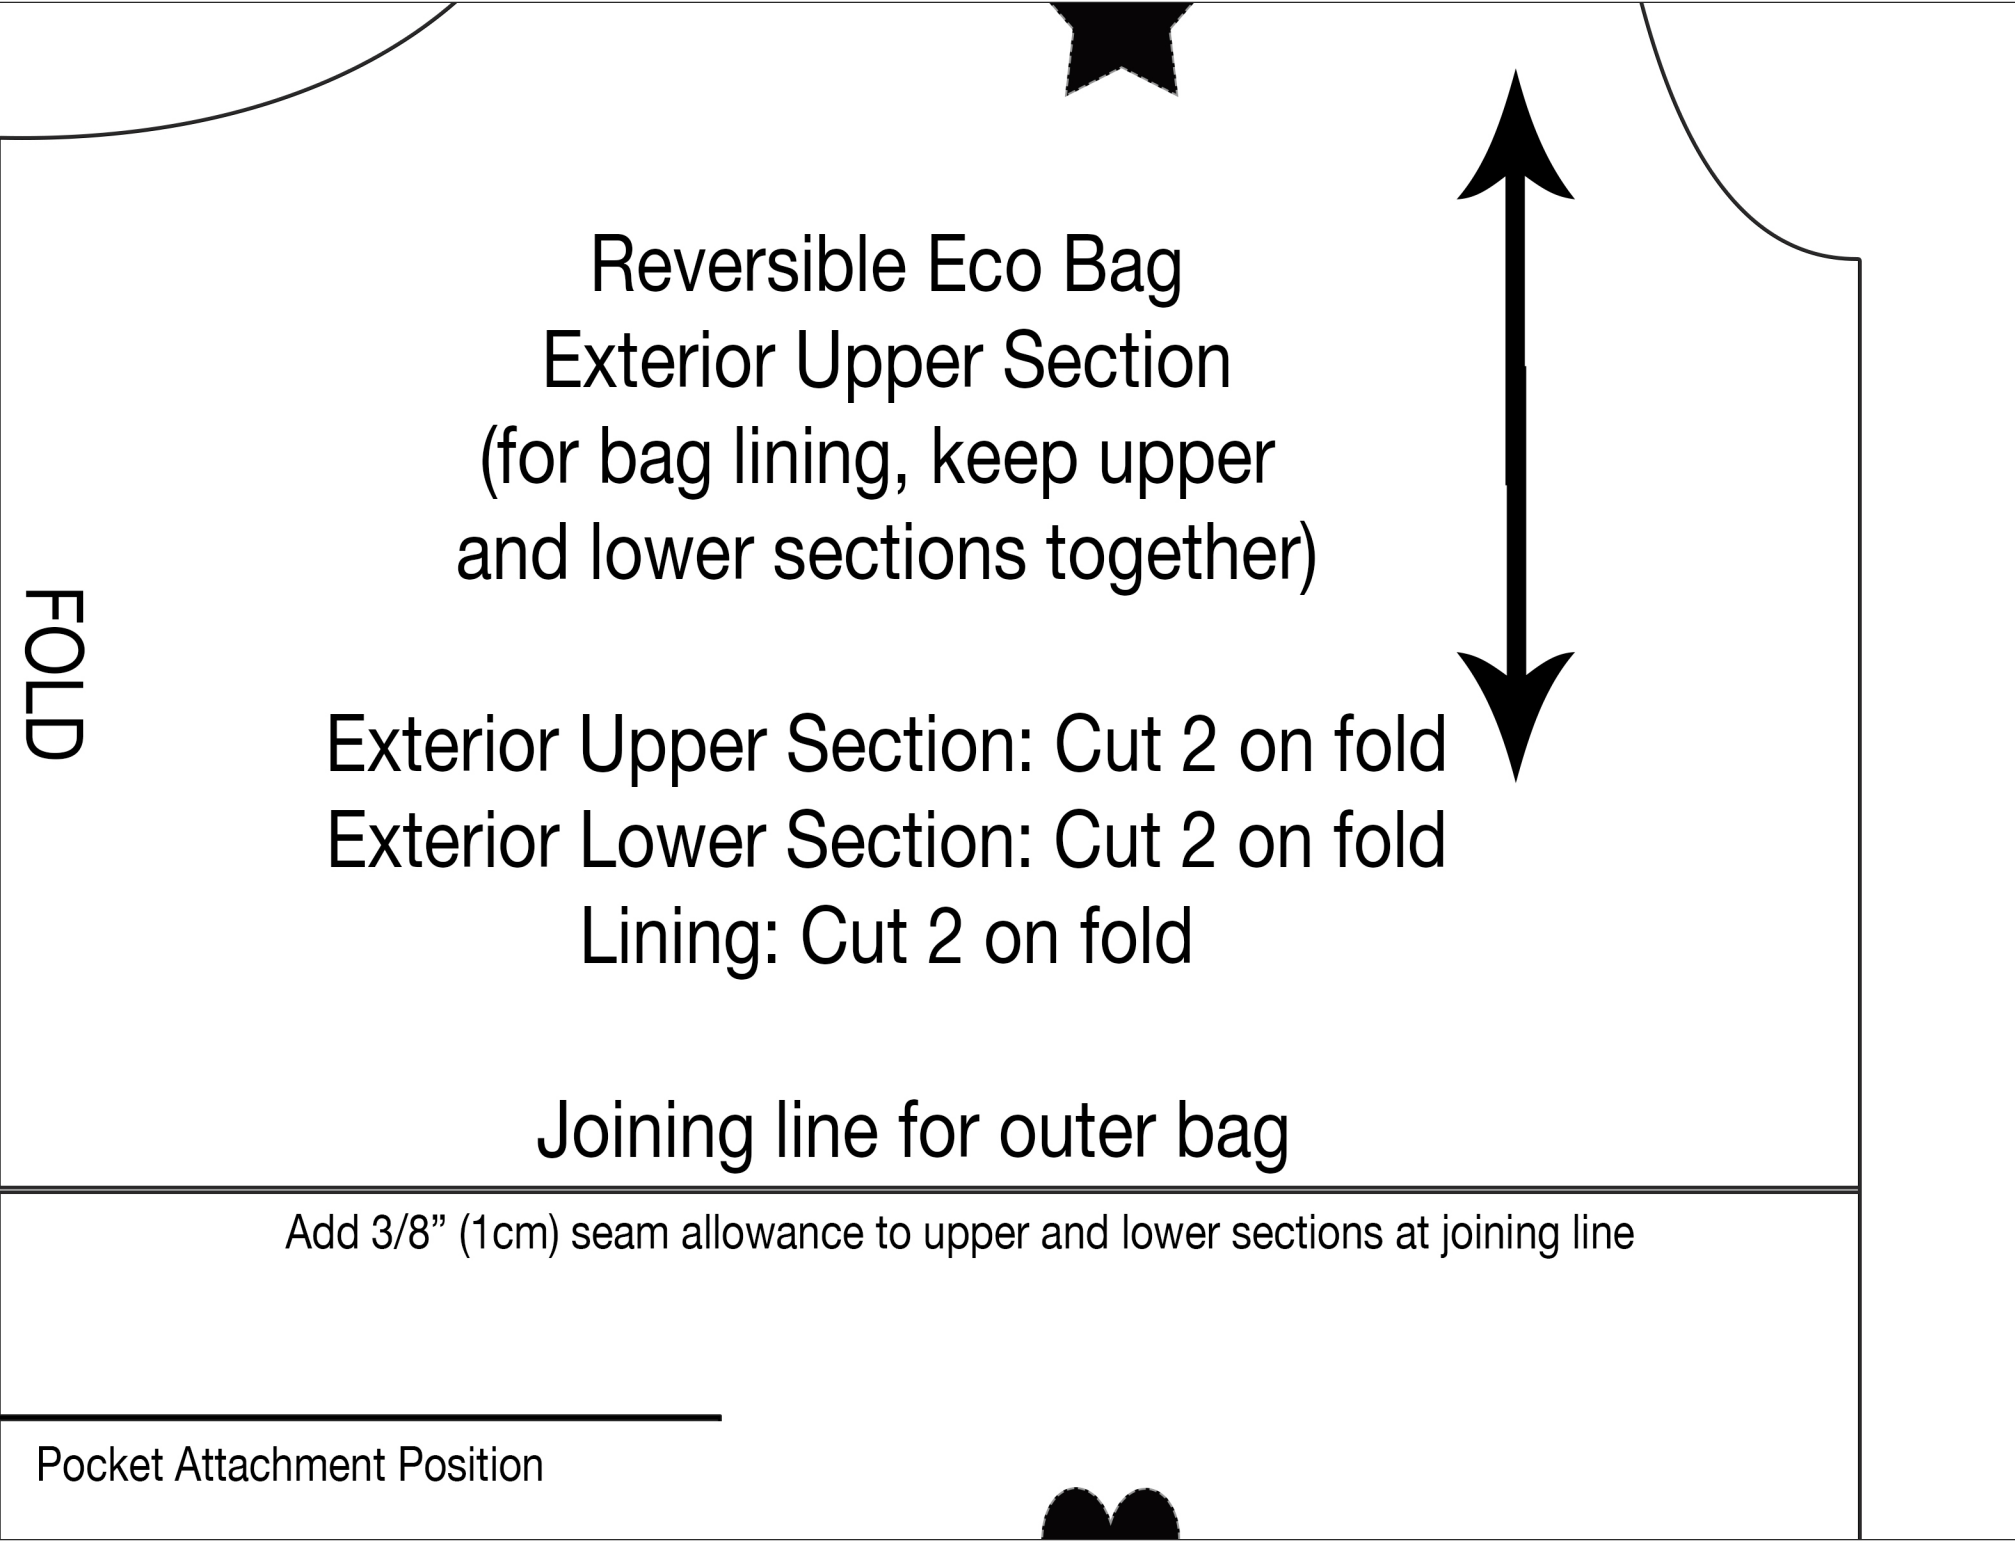

Reversible Eco Bag
Exterior Upper Section
(for bag lining, keep upper
and lower sections together)

FOLD

Exterior Upper Section: Cut 2 on fold
Exterior Lower Section: Cut 2 on fold
Lining: Cut 2 on fold

Joining line for outer bag

Add 3/8" (1cm) seam allowance to upper and lower sections at joining line

Pocket Attachment Position



Reversible Eco Bag
Exterior Lower Section
(for bag lining, keep upper
and lower sections together)

FOLD



Reversible Eco Bag

Pocket

Cut 1

Folding Line

