



-INSTALLATION- INSTRUCTIONS

▶ LP AVENTURE BIG AND SMALL
BUMPER GUARDS ◀

SUBARU CROSSTREK 2018-2020

CONGRATULATIONS FOR YOUR NEW LP AVENTURE BUMPER GUARD!

If you have any question or need assistance during the installation please contact our team. You can find the information on the last page.



IN THE BAG





NECESSARY TOOLS

1. - We recommend the use of a lift
2. - Jack stand to support the bumper guard
3. - Ratchet
4. -12mm Socket
5. -14mm Socket
6. -12mm Wrench
7. -14mm Wrench
8. - Knife or a Dremel

1

ASSEMBLE BUMPER GUARD



2

REMOVE REAR BOLTS AND UNFOLD




3

TIGHTEN BOLTS




4

READY TO INSTALL

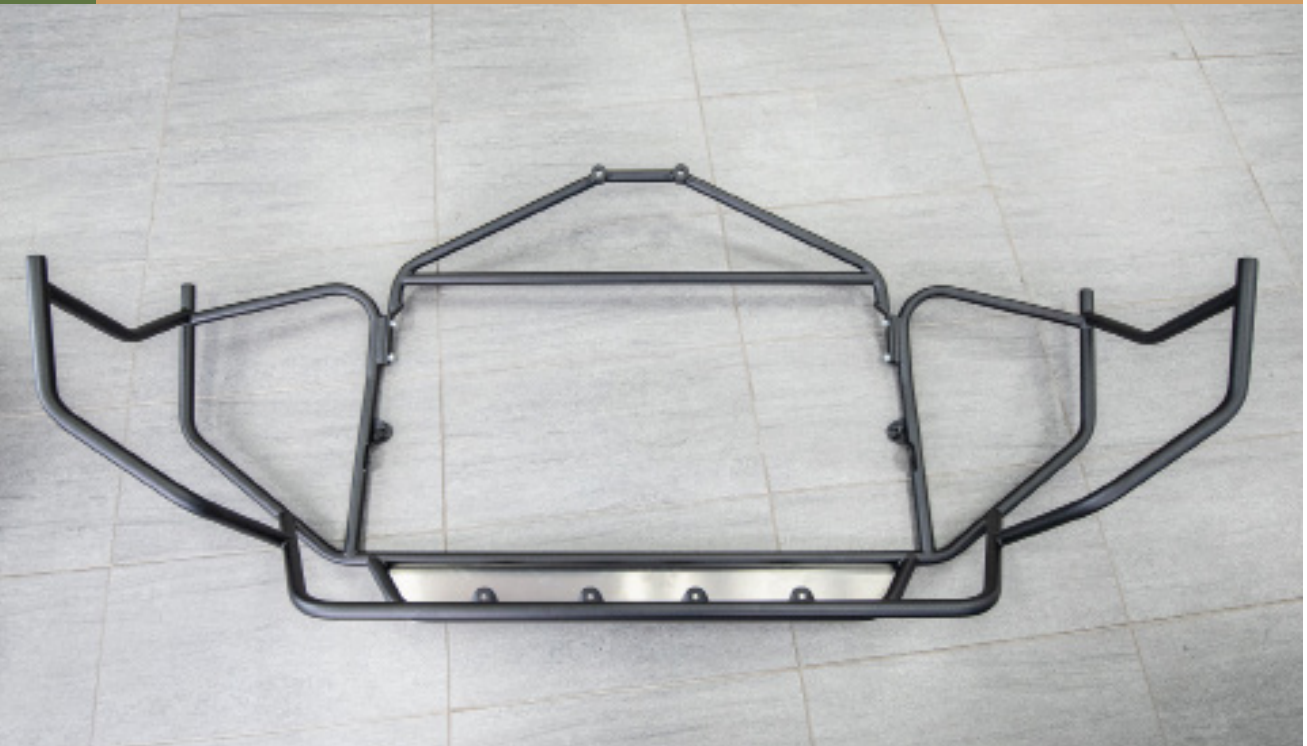


5

CUT THE OEM SKIDPLATE

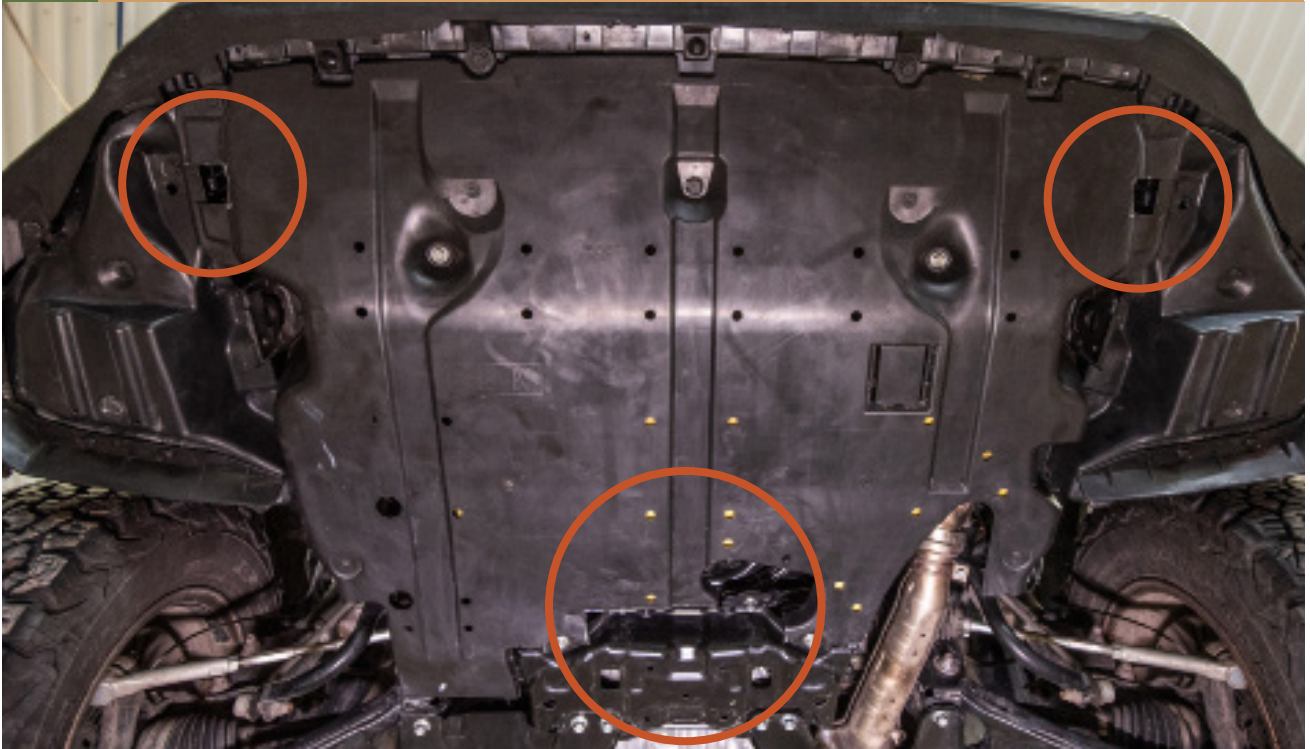

6



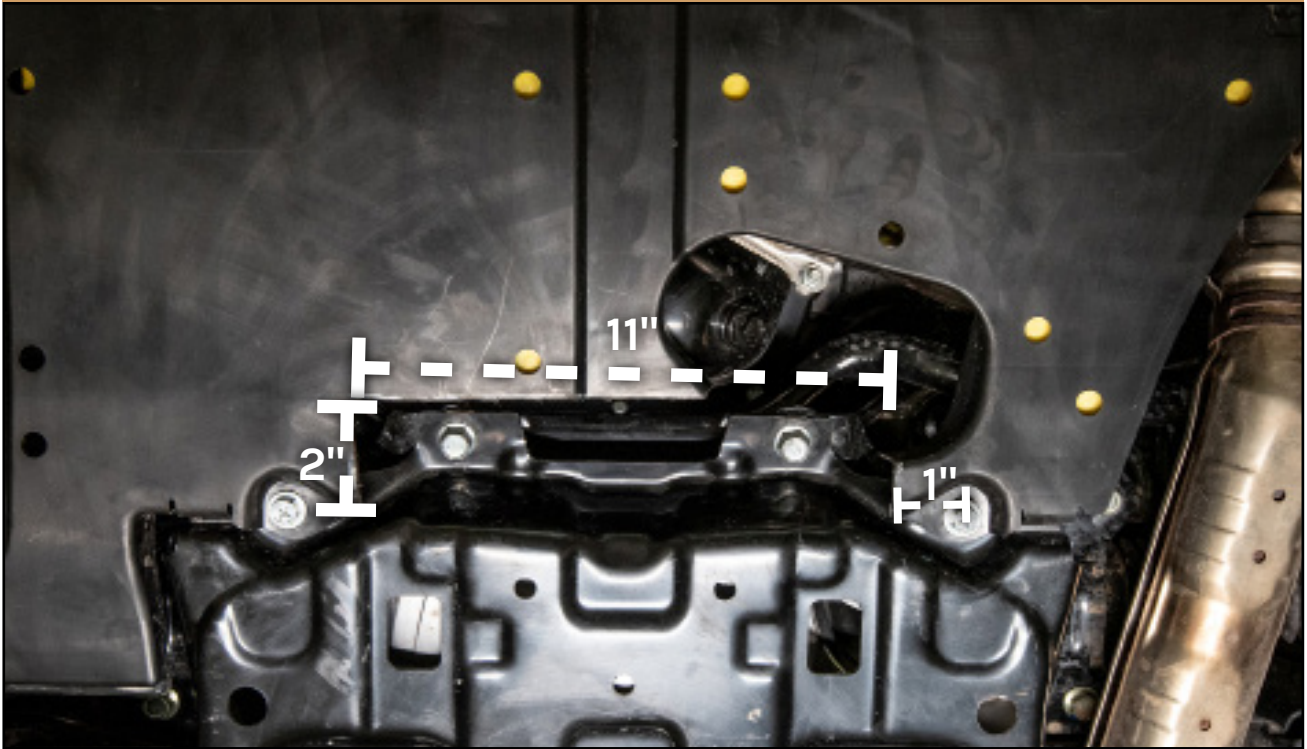

8

REMOVE FACTORY SKIDPLATE





9

REMOVE BOLT



10

LOWER PLASTIC COVERS



11

REMOVE BOLTS





12

INSTALL BUMPER GUARD SUPPORT RODS





13

REMOVE BOLTS





14

RE INSTALL PLASTIC COVERS



15

RE INSTALL FACTORY SKIDPLATE



16

USE A JACK TO SUPPORT THE BUMPER GUARD DURING INSTALLATION





17

ATTACH BUMPER GUARD TO THE BRACKETS




18

BOLT UP THE REAR OF THE BUMPER GUARD



INSTALLATION COMPLETE!

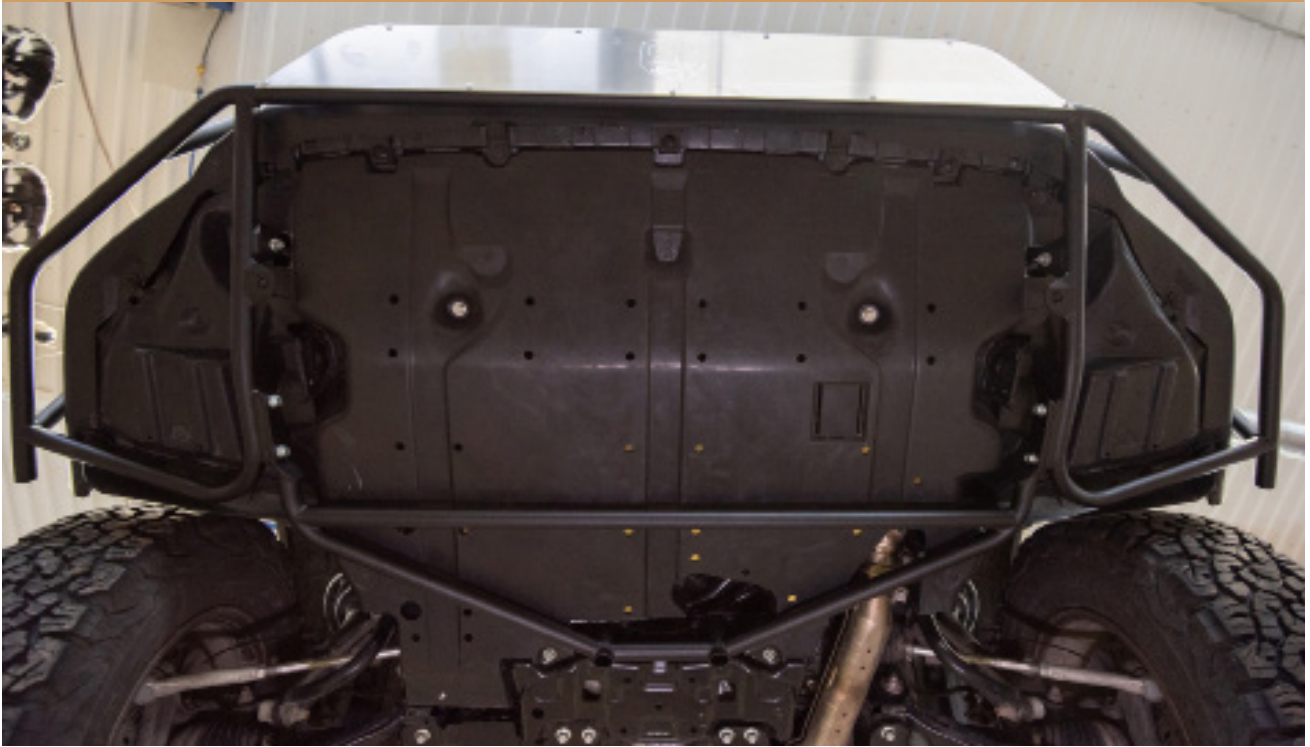



**You have completed the installation.
Thank you for your interest
in our products.**

**For all requests, information or
assistance: Contact our team
by phone at
1 (866) 562-1316**

**We are available Monday to Friday
Between 8AM and 5PM (EST).**

**Or by email at :
SALES@LPAVENTURE.COM
WWW.LPAVENTURE.COM**

NOW, ENJOY THE RIDE!