



# -INSTALLATION- INSTRUCTIONS

▶ LP AVENTURE BIG AND SMALL  
BUMPER GUARDS ◀

SUBARU CROSSTREK 2021-2023

SMALL BUMPER GUARD CROSSTREK 2024+

# CONGRATULATIONS FOR YOUR NEW LP AVENTURE BUMPER GUARD!

If you have any question or need assistance during the installation please contact our team. You can find the information on the last page.



IN THE BAG

2020-2023 Hardware



2024+ Hardware






## NECESSARY TOOLS

1. - We recommend the use of a lift
2. - Jack stand to support the bumper guard
3. - Ratchet
4. -12mm Socket
5. -14mm Socket
6. -12mm Wrench
7. -14mm Wrench
8. - Knife or a Dremel

INSTALL FRONT PLATE

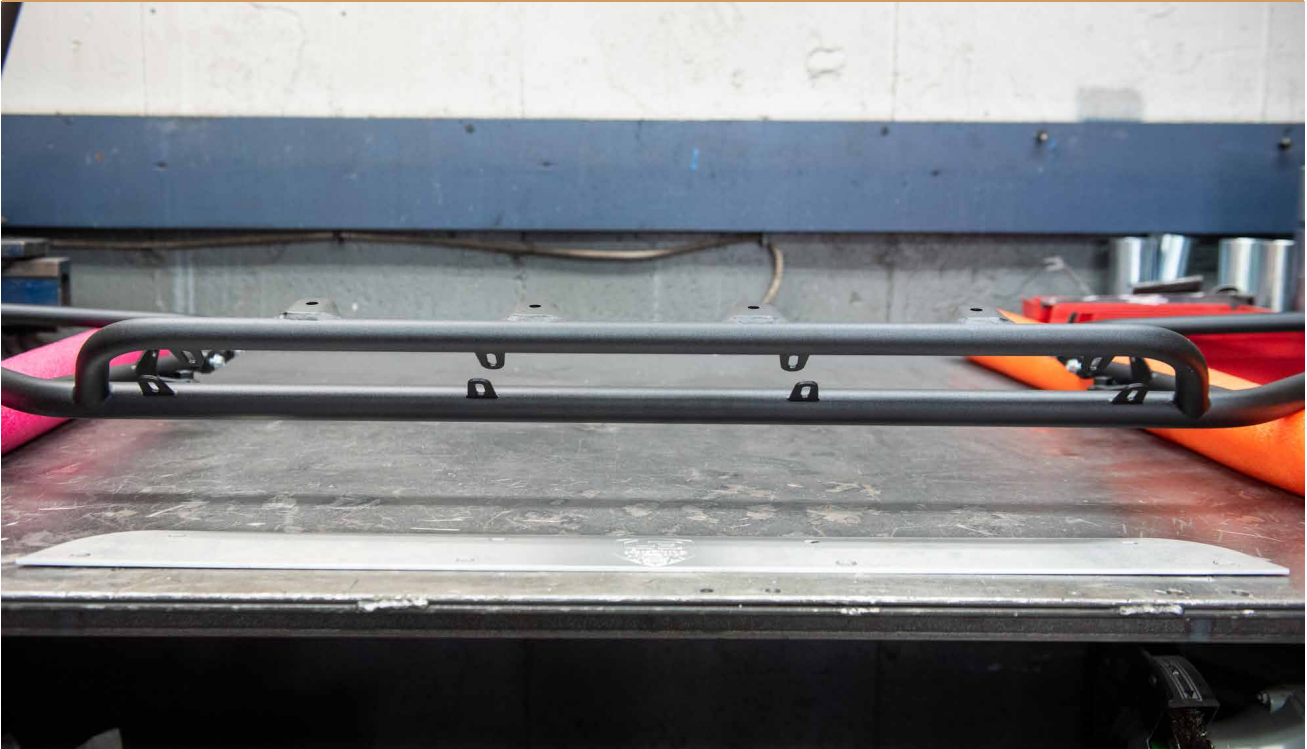


1

PLACE WASHER ON BOLT




2

WITH TWO BOLTS ON EITHER CORNER OF THE FRONT PLATE.  
RAISE IT INTO PLACE ON THE BUMPER GUARD

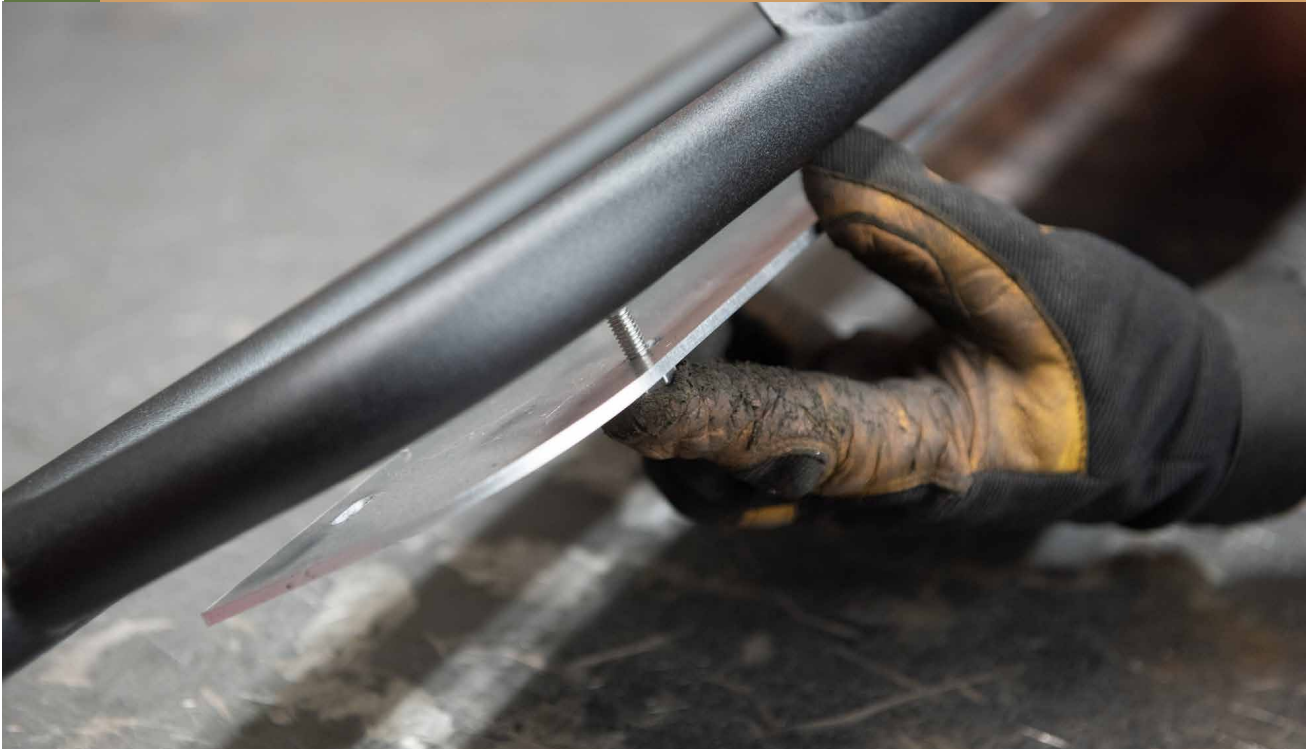

3

INSTALL NUTS BUT DO NOT TIGHTEN ALL THE WAY

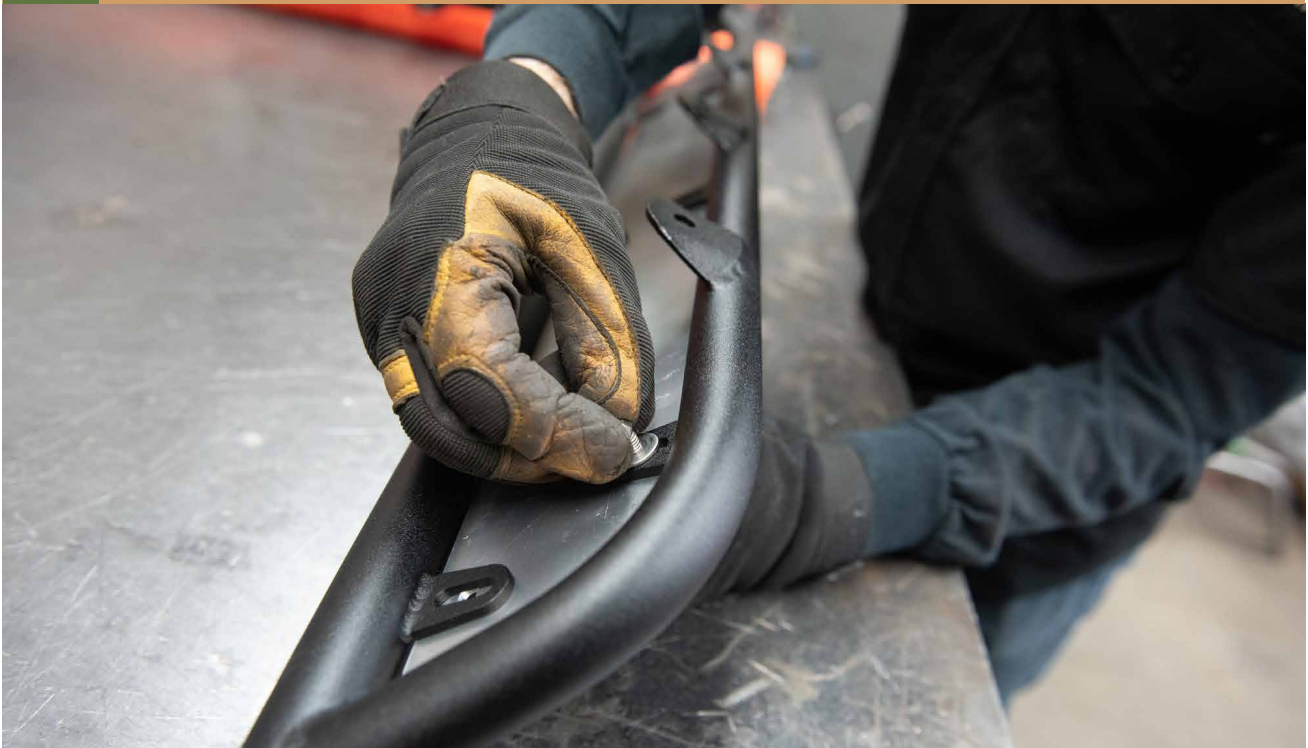


4

WITH THE TWO OUTER BOLTS HOLDING THE FRONT PLATE IN PLACE ,  
INSTALL THE REST OF THE NUTS AND BOLTS BUT DO NOT TIGHTEN YET.



5

CENTER THE FRONT PLATE

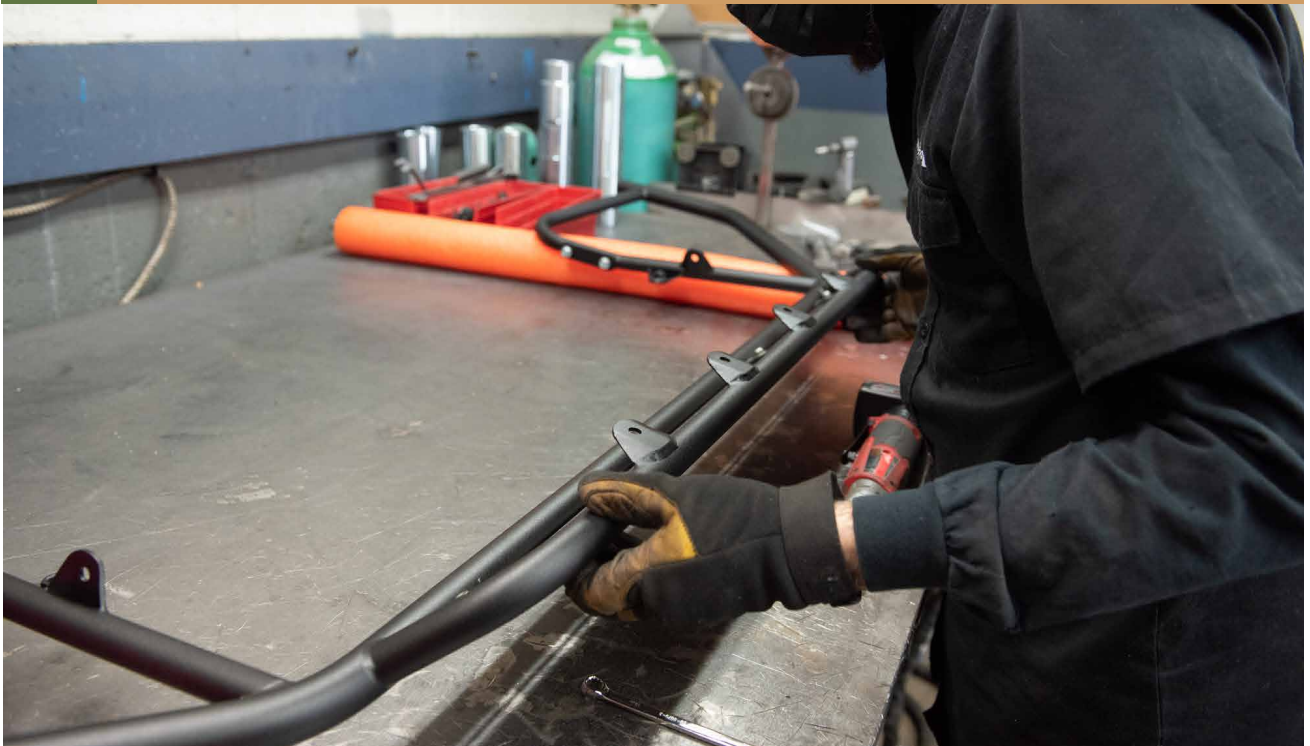

6

NOW TIGHTEN ALL THE HARDWARE






7

## ASSEMBLE BUMPER GUARD



8

## REMOVE REAR BOLTS AND UNFOLD

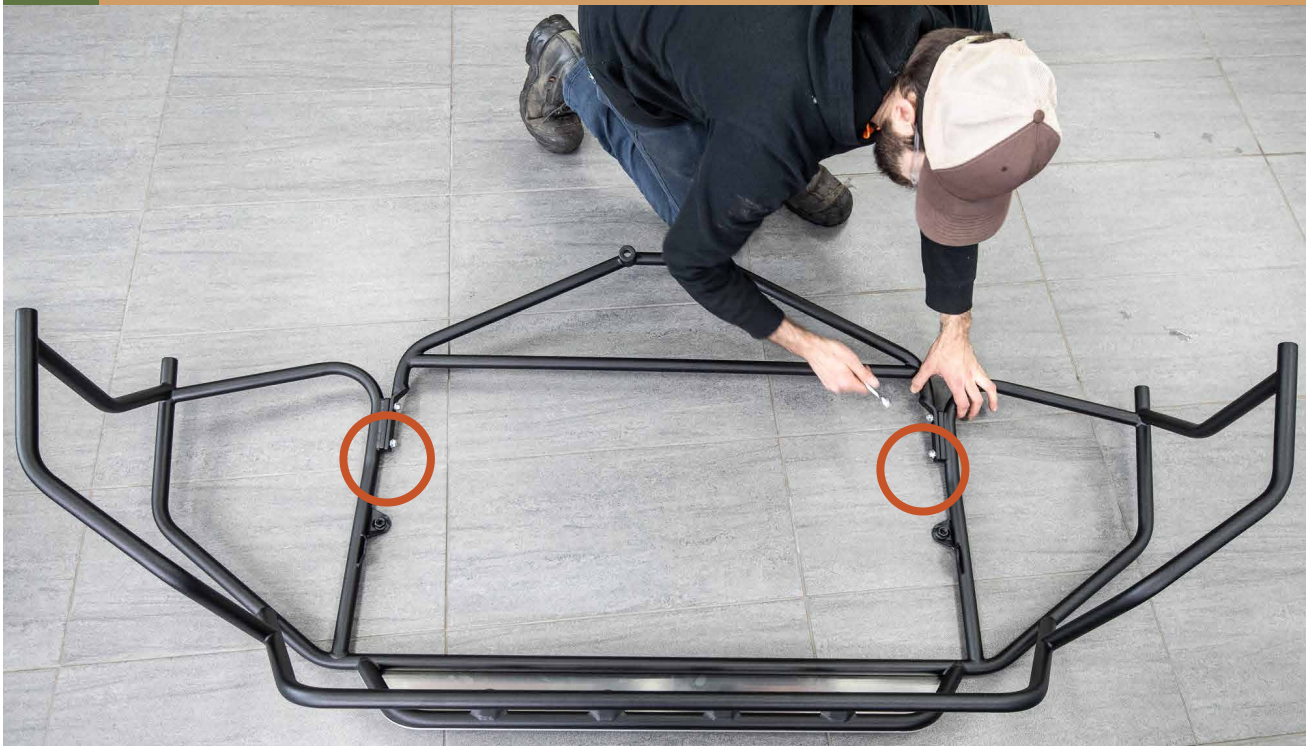

9

TIGHTEN BOLTS



10

READY TO INSTALL




\*\* This guide was made using a 2020 Crosstrek, The 2024 Crosstek is slightly different but the steps are the same.


11


### TRIM THE OEM SPLASH GUARD

\*YOU CAN REMOVE THE SPLASH GUARD FIRST BEFORE TRIMMING IF IT EASIER FOR YOU

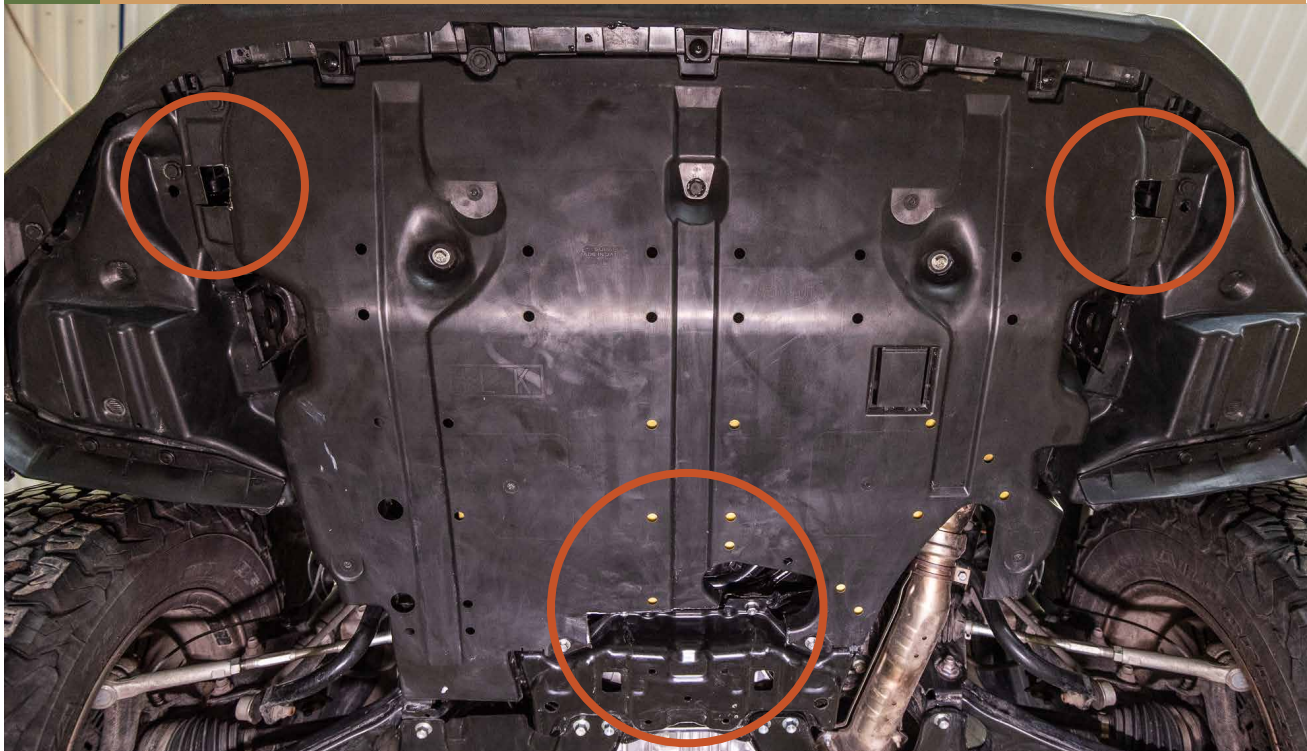


12


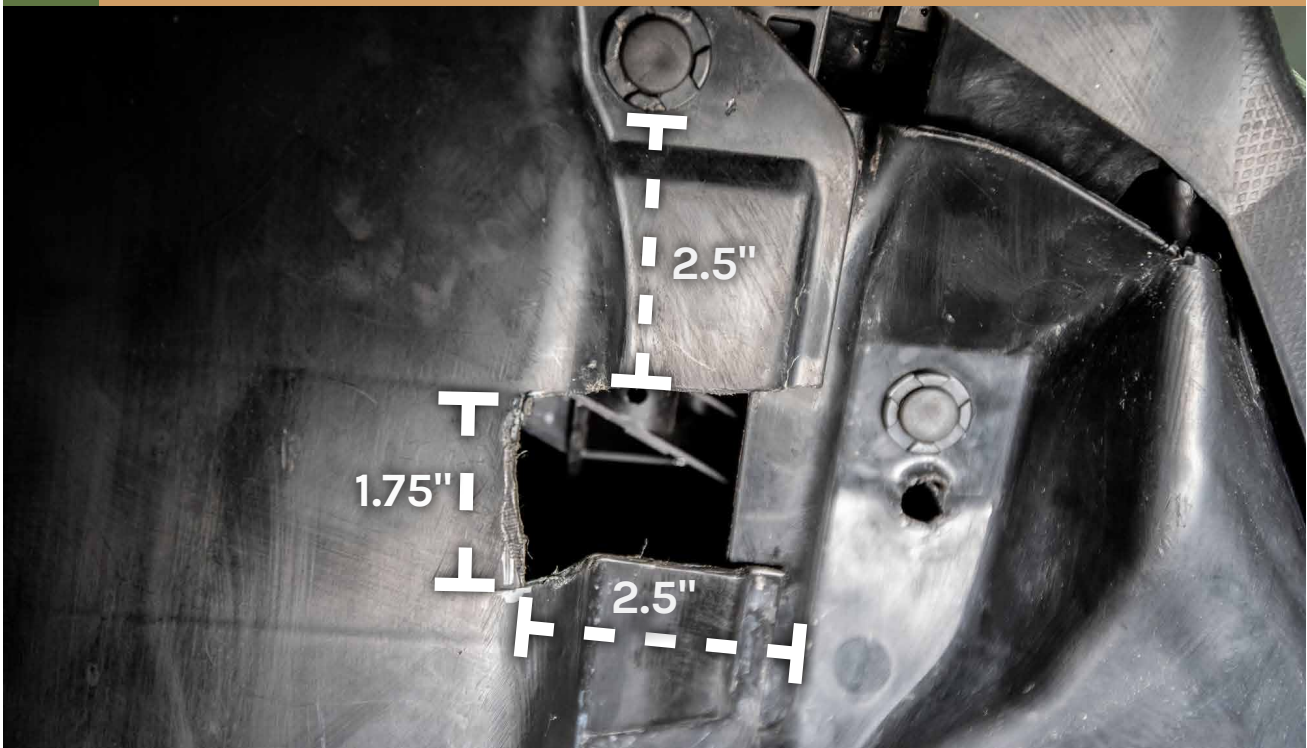


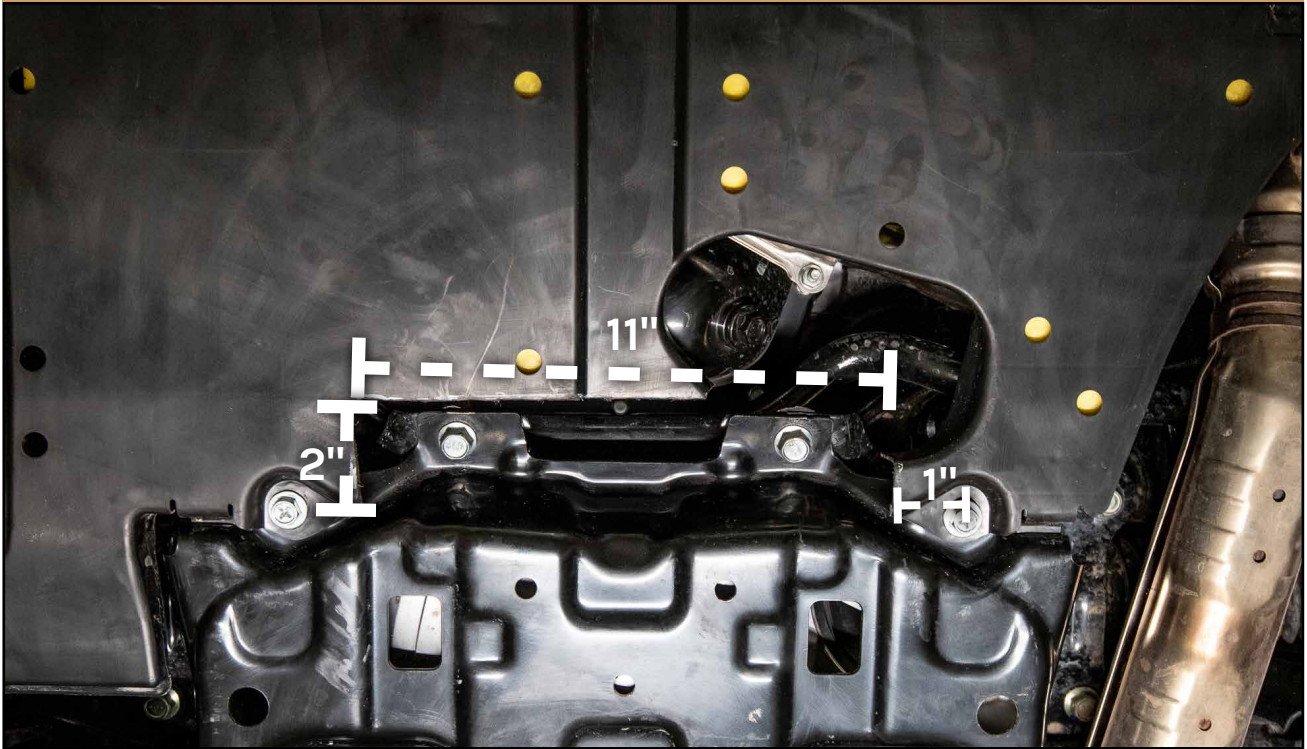

13


REMOVE SPLASH GUARD

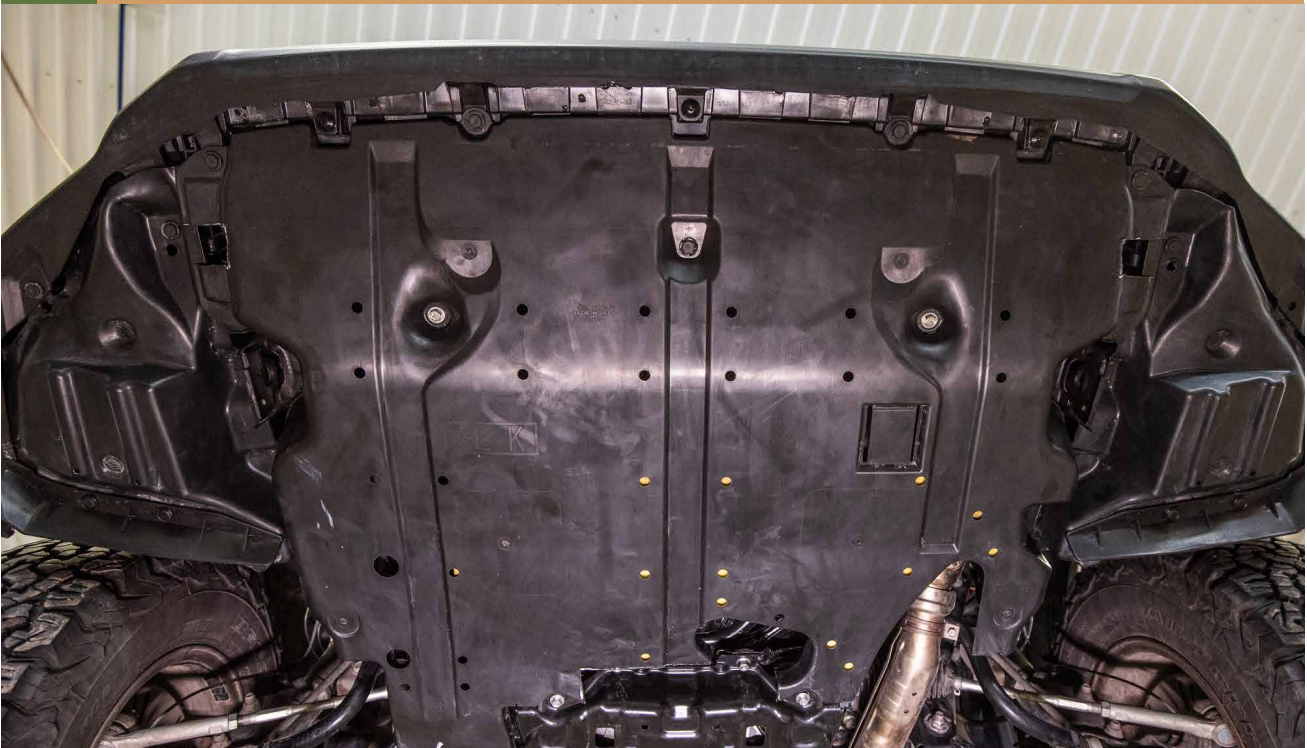

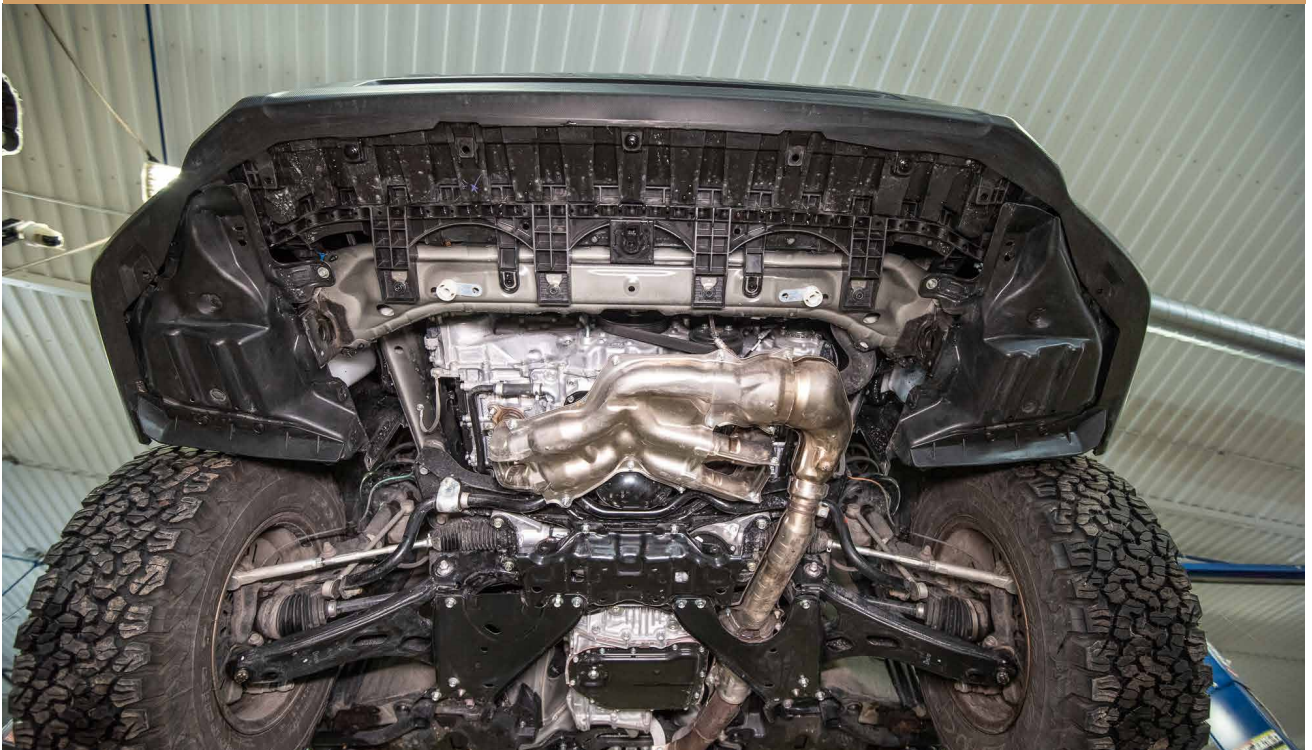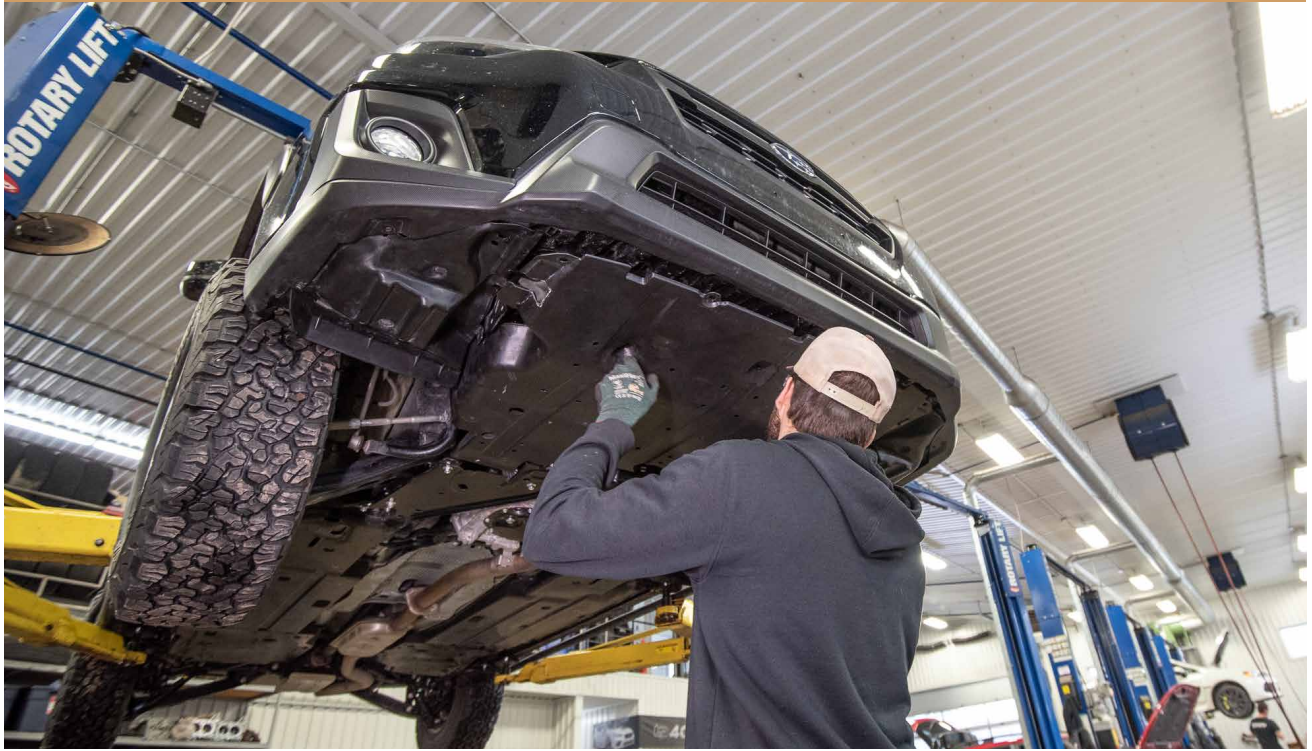

14

REMOVE BOLT

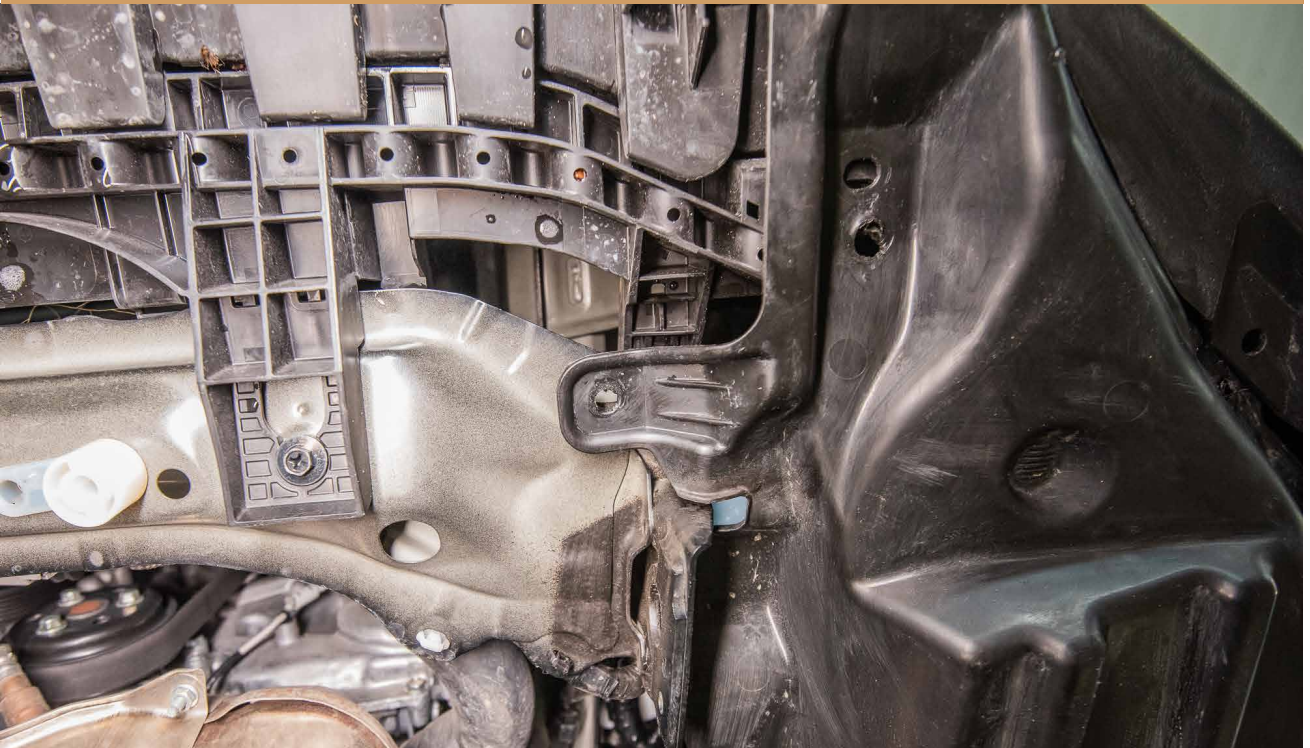

15


## LOWER PLASTIC COVERS




16

## REMOVE BOLTS


\*MAKE SURE TO REMOVE THE CORRECT BOLT DEPENDING ON THE YEAR OF YOUR CAR  
#1: 2020-2023 CROSSTREKS #2: 2024+ CROSSTREKS

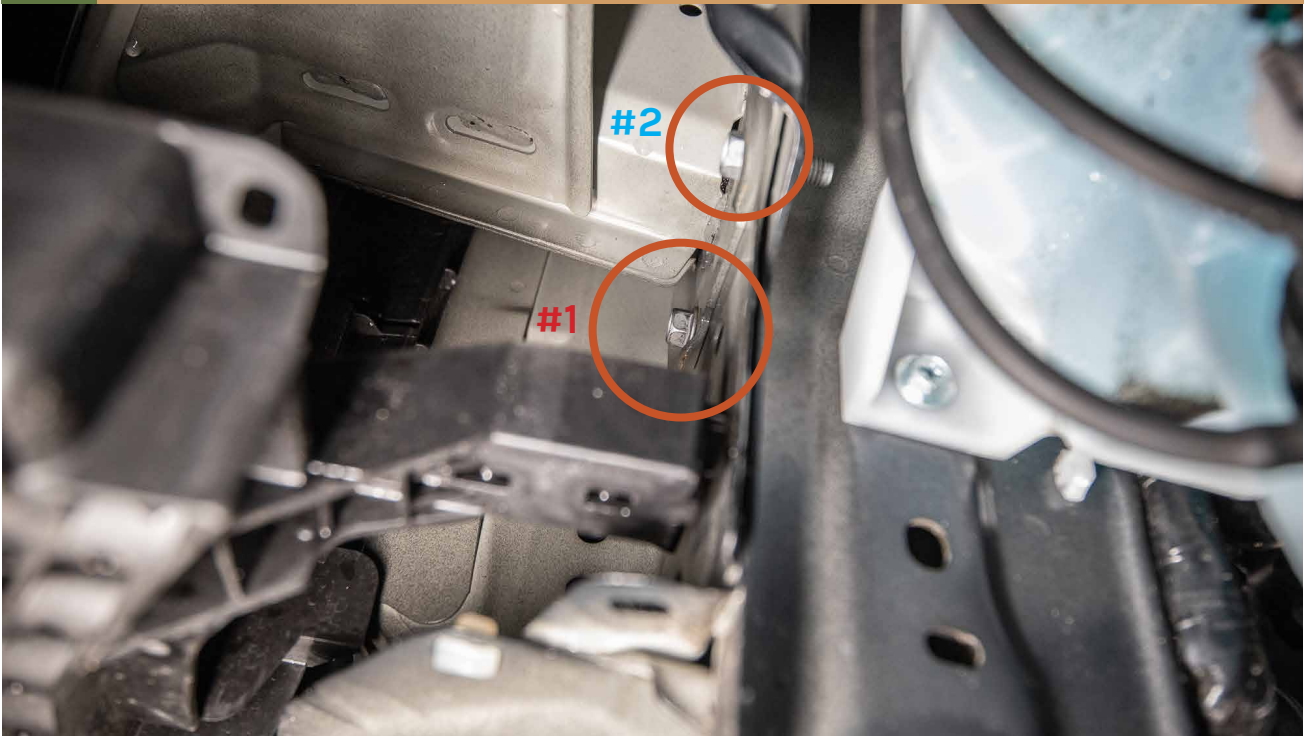

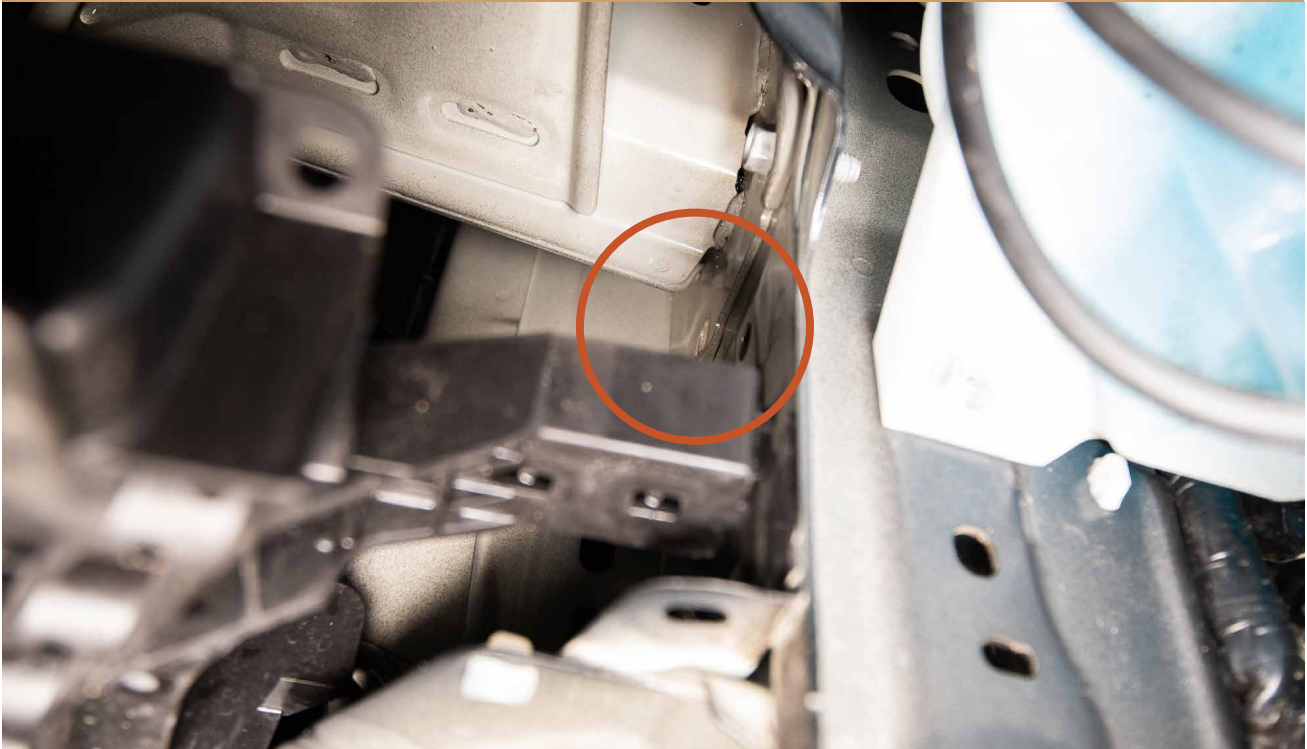


17

**INSTALL BUMPER GUARD SUPPORT RODS**  
2020-2023 CROSSTREK      2024+ CROSSTREK

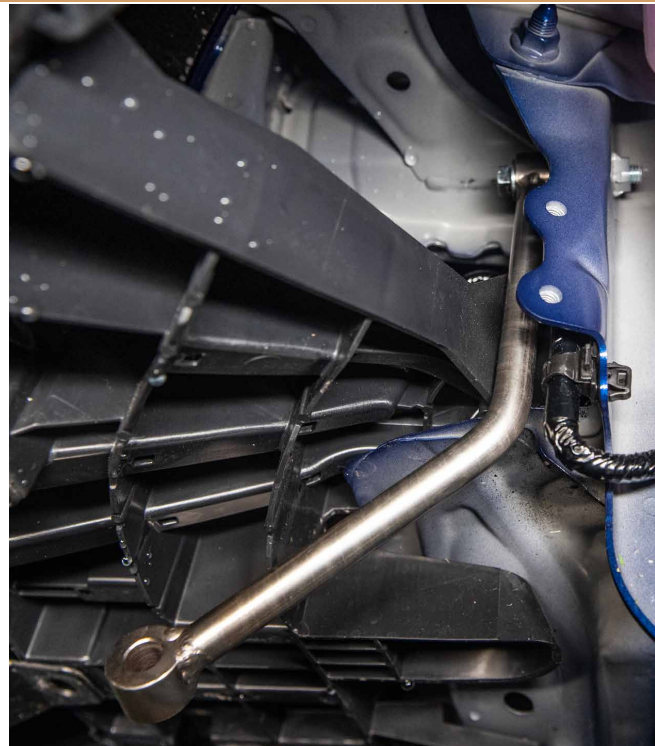





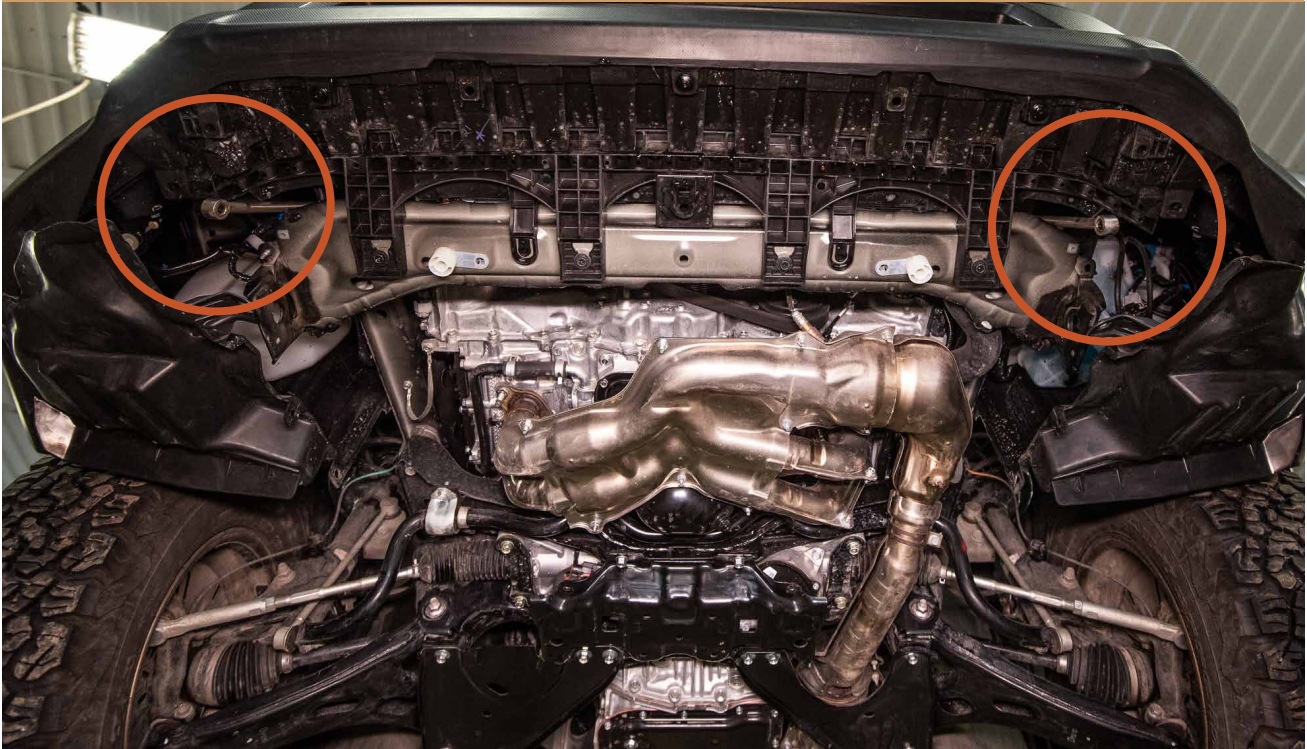

18



REMOVE BOLTS

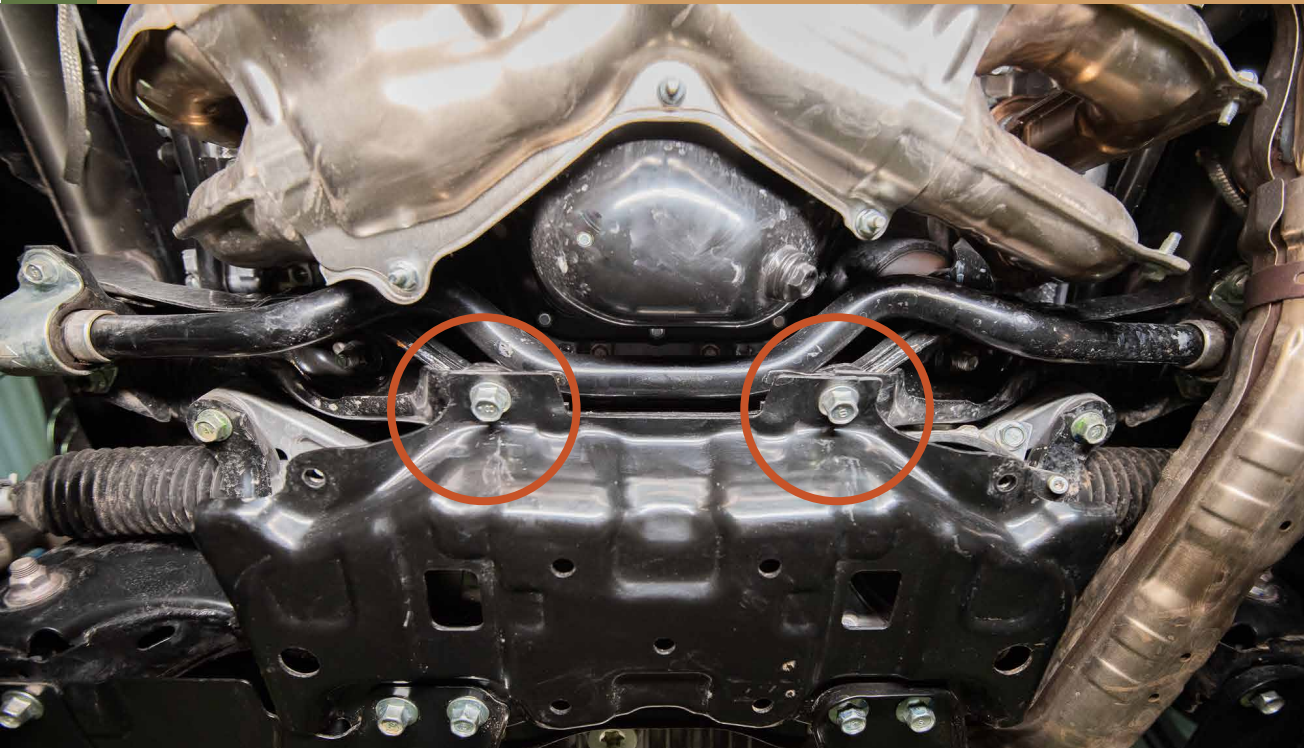

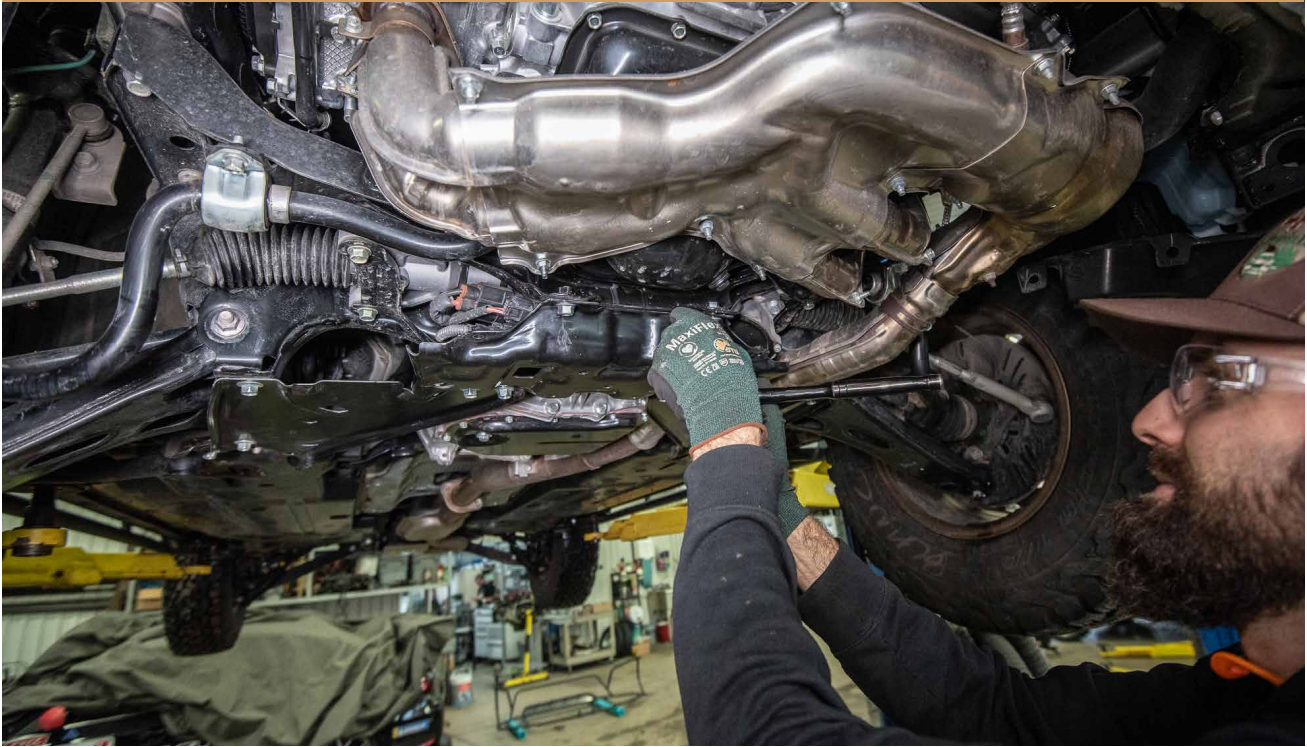



19

## RE INSTALL PLASTIC COVERS

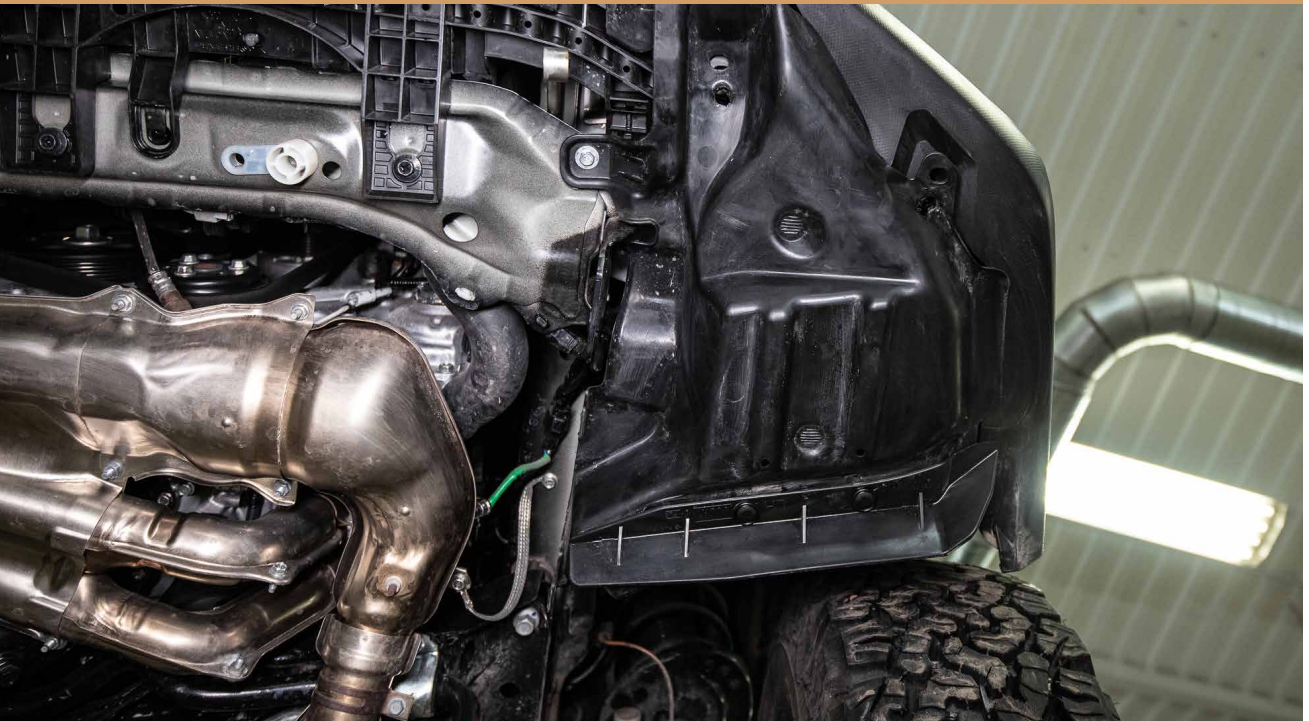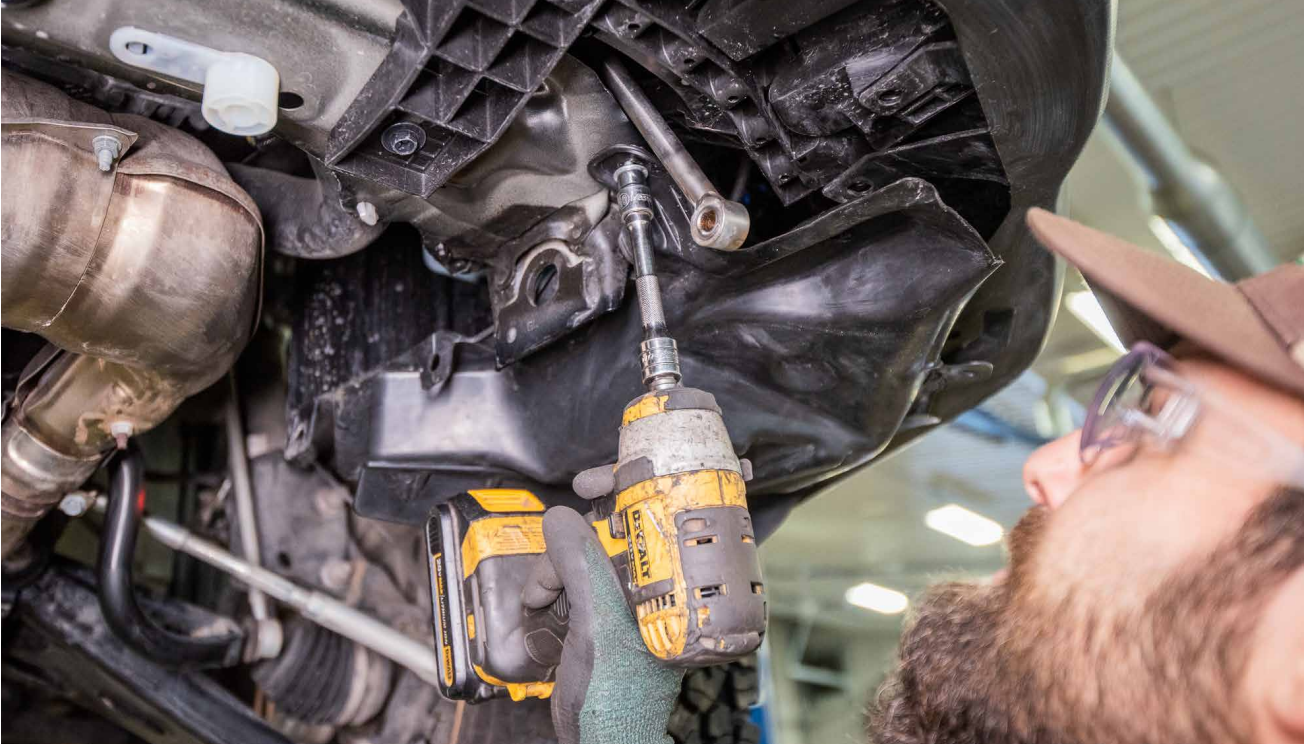



20

## RE INSTALL FACTORY SKIDPLATE

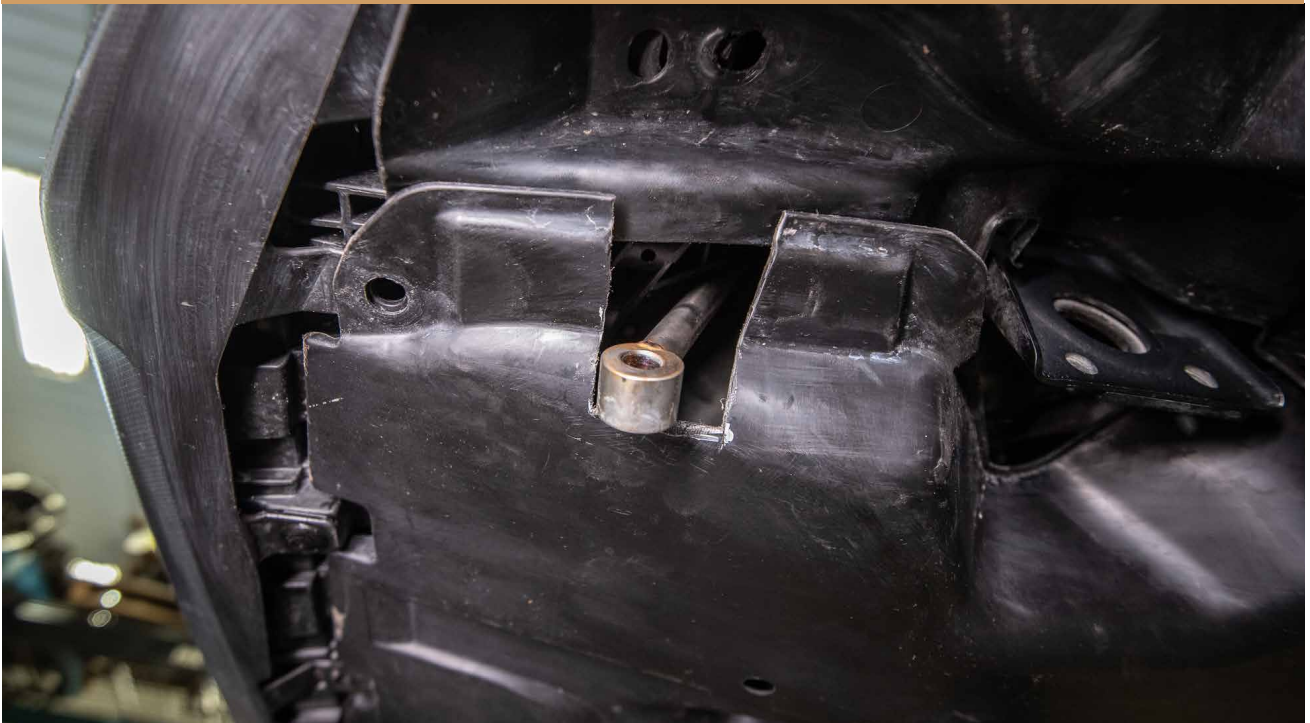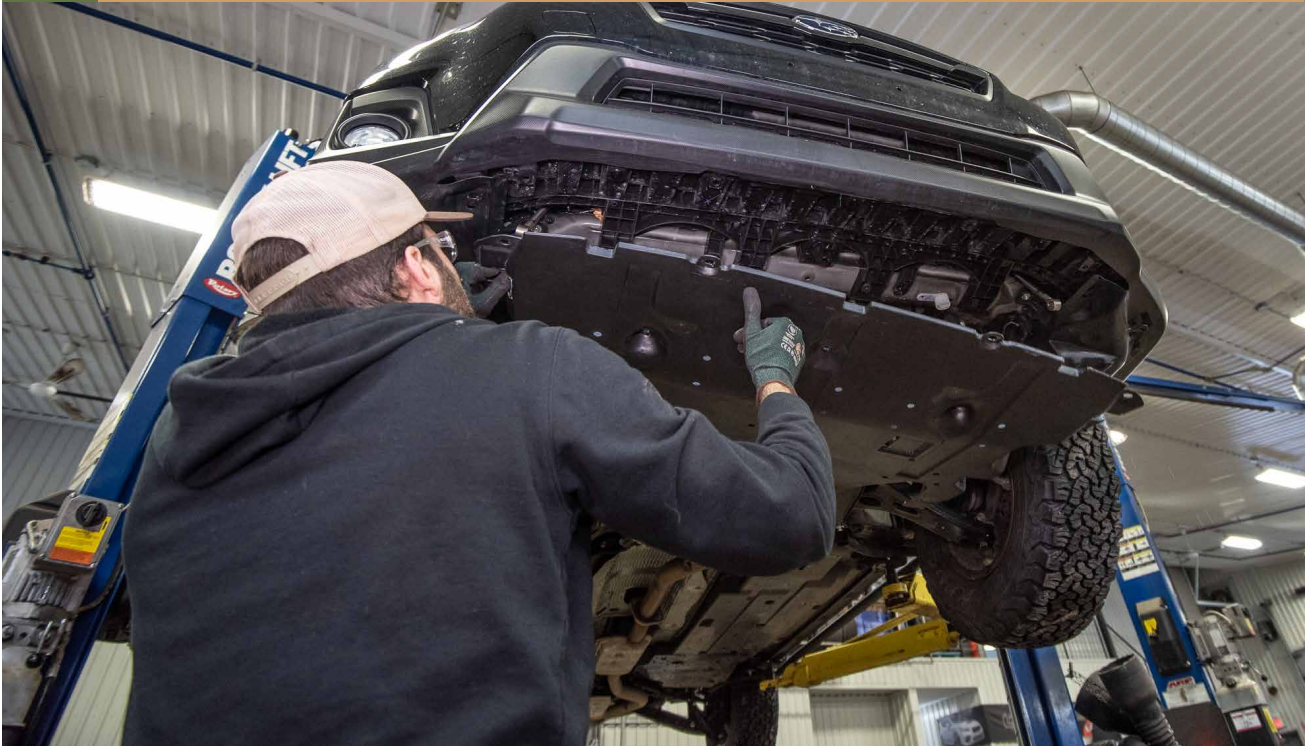

21

USE A JACK TO SUPPORT THE BUMPER GUARD DURING INSTALATION

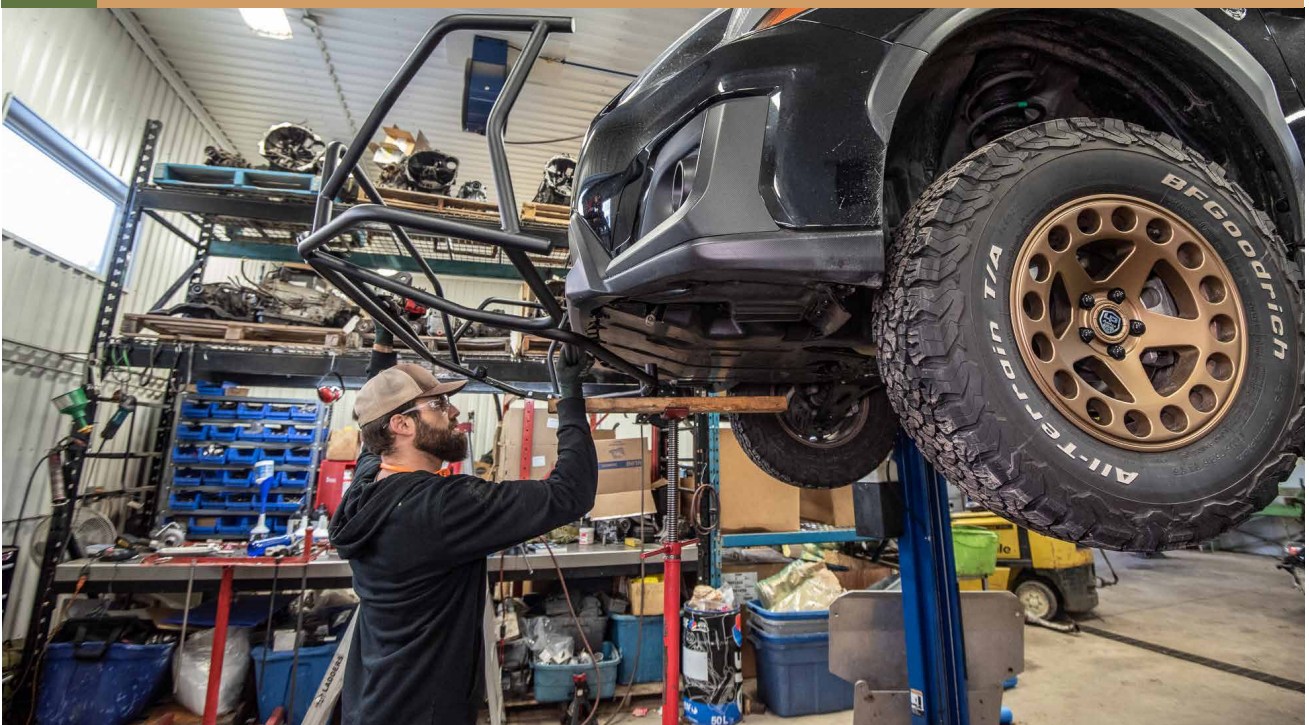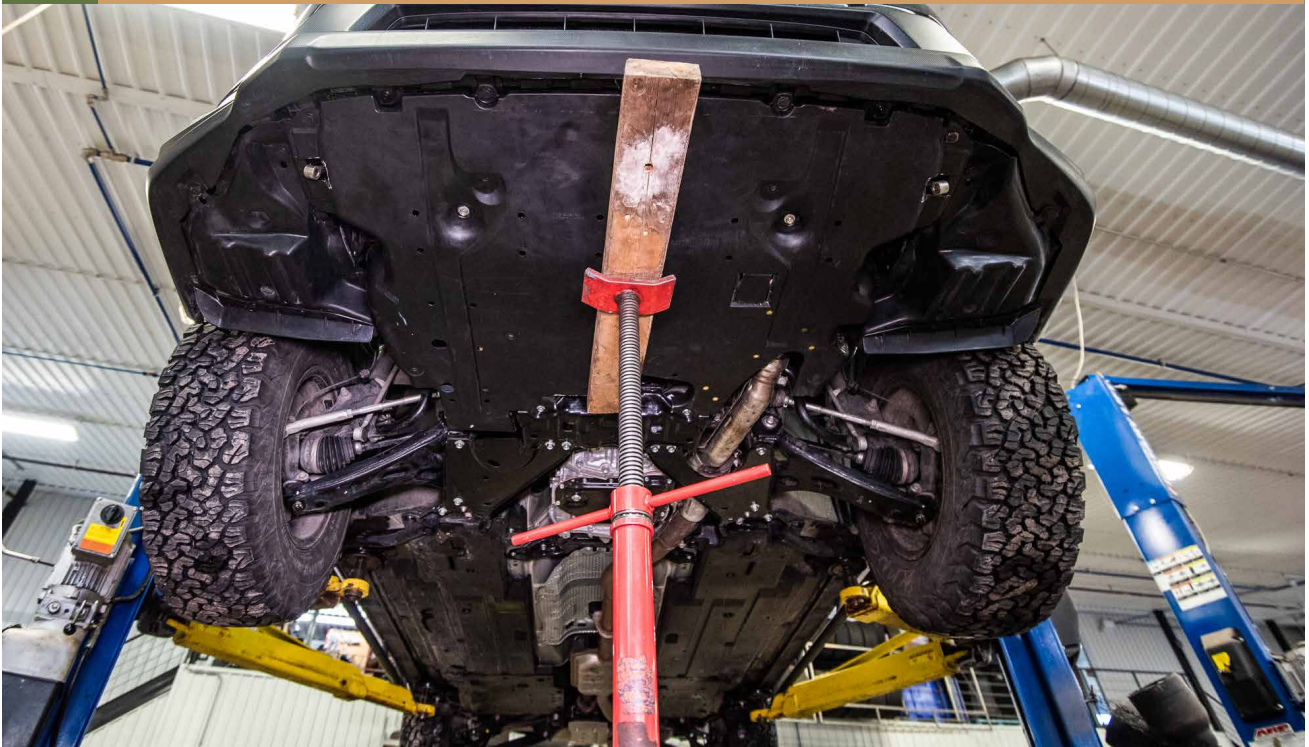




22

ATTACH BUMPER GUARD TO THE BRACKETS




23

BOLT UP THE REAR OF THE BUMPER GUARD

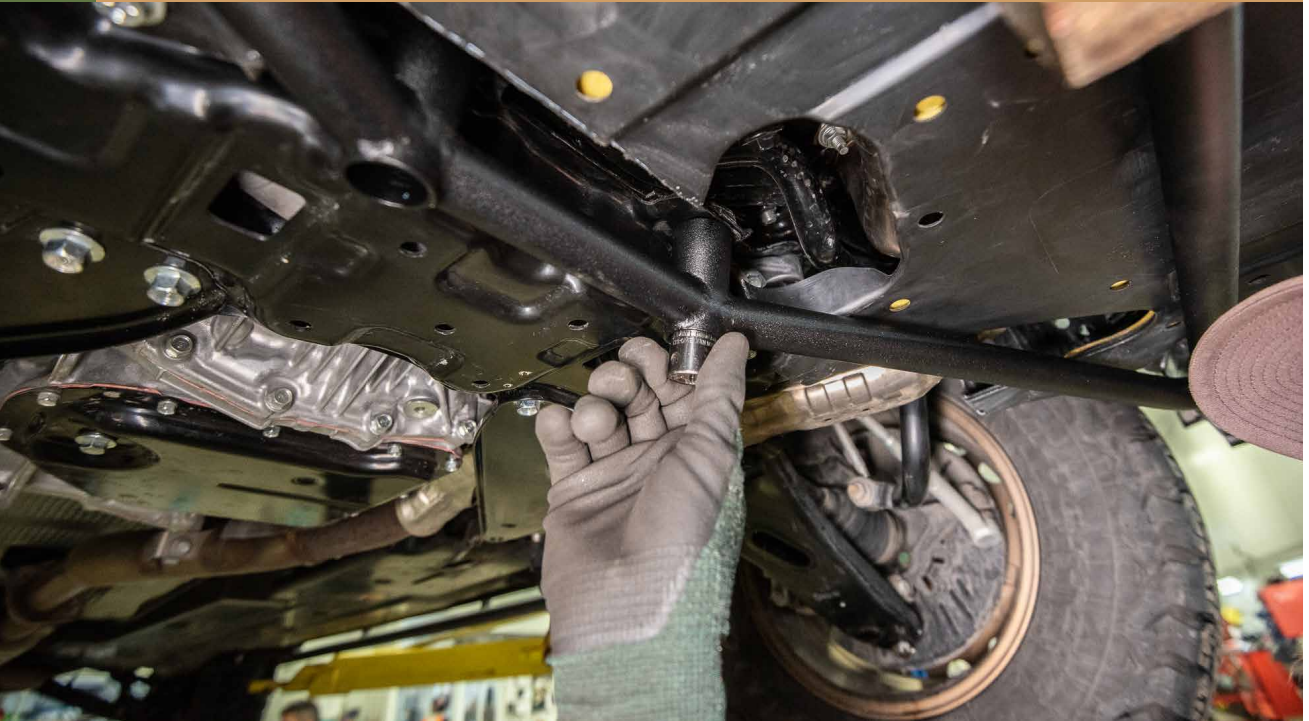

INSTALLATION COMPLETE!

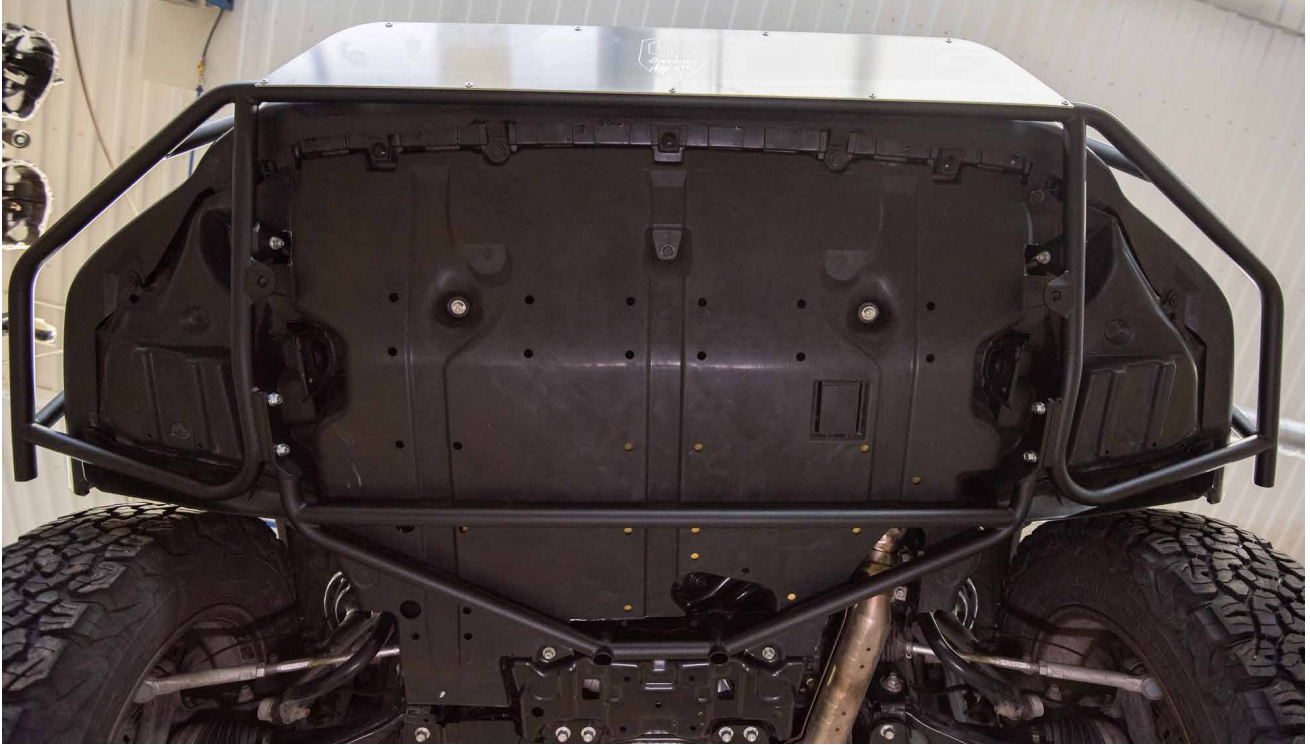





**You have completed the installation.  
Thank you for your interest  
in our products.**

**For all requests, information or  
assistance: Contact our team  
by phone at  
**1 (866) 562-1316****

**We are available Monday to Friday  
Between 8AM and 5PM (EST).**

**Or by email at :  
**SALES@LPAVENTURE.COM**  
**WWW.LPAVENTURE.COM****

**NOW, ENJOY THE RIDE!**