


SUBARU FORESTER 2019-2022 FORESTER WILDERNESS 2022 +

CONGRATULATIONS FOR YOUR NEW LP AVENVENTURE ROCK SLIDERS KIT!

If you have any questions or need assistance during the installation please contact our team. You can find the infomation on the last page.

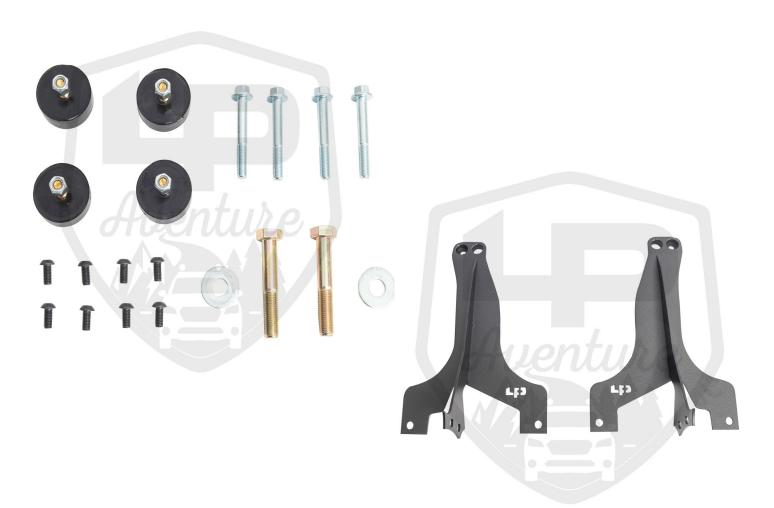

*Brackets for the Wilderness edition are slightly different

IN THE BOX


NECESSARY TOOLS


- We recommend the use of a lift
- Jack
- -Ratchet
- 9/16" Socket
- 12mm Socket
- 14mm Socket
- 19mm Socket
- 22mm Socket
- -5mm Hex
- Torque wrench







INSTALL FRONT BUMP STOPS

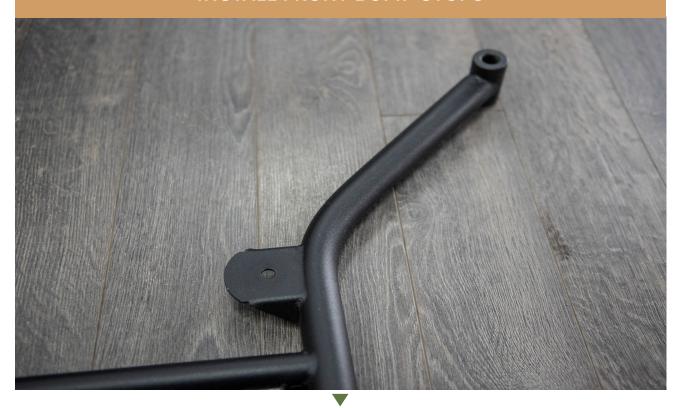


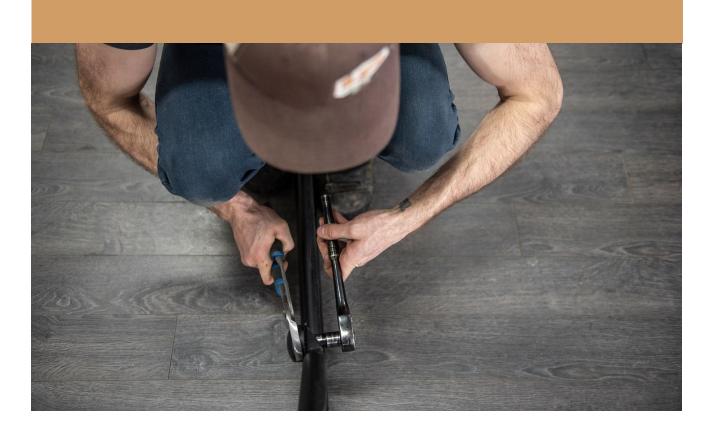

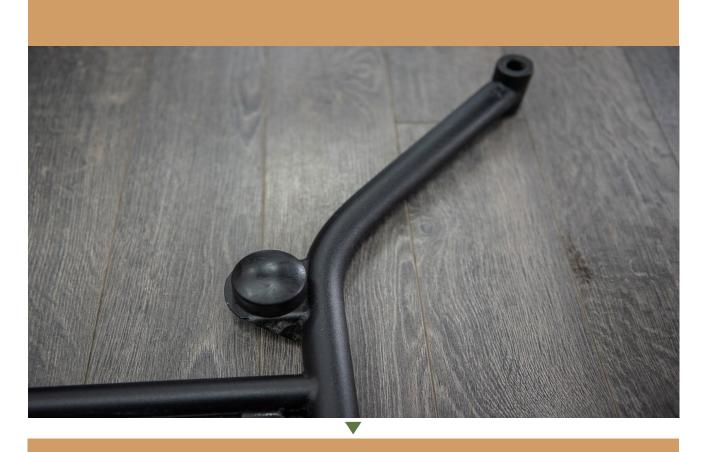

INSTALL REAR BUMP STOPS

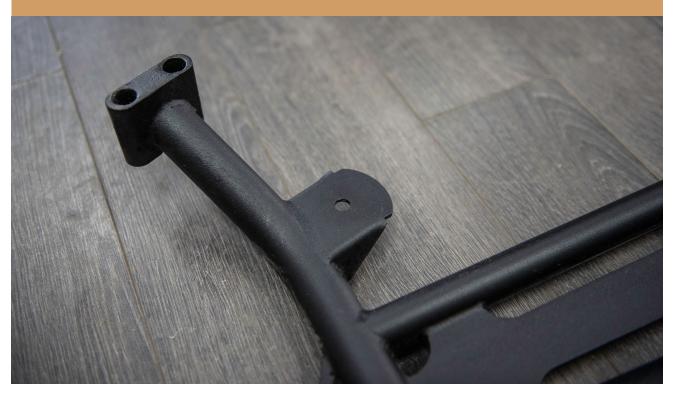

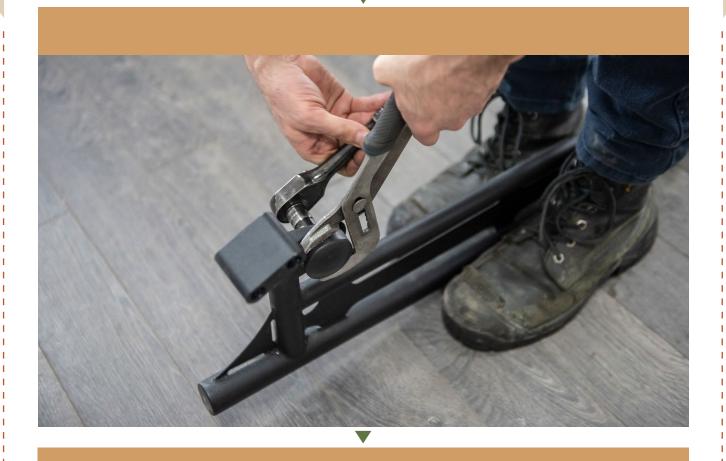




LEFT AND RIGHT SIDE BRACKETS





RIGHT SIDE BRACKET

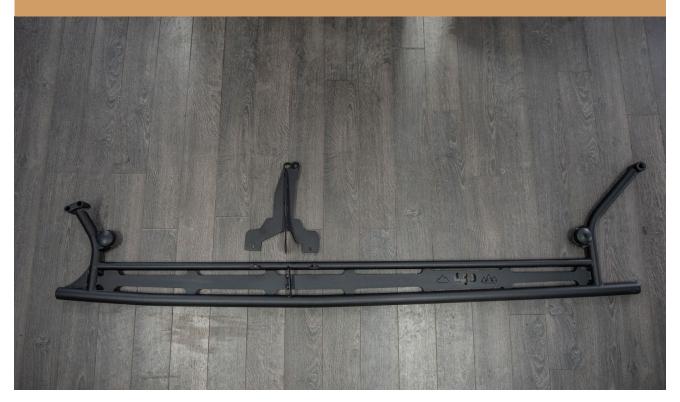


2 REMOVE OUTER BOLT FROM FRONT SUB FRAME SUPPORT




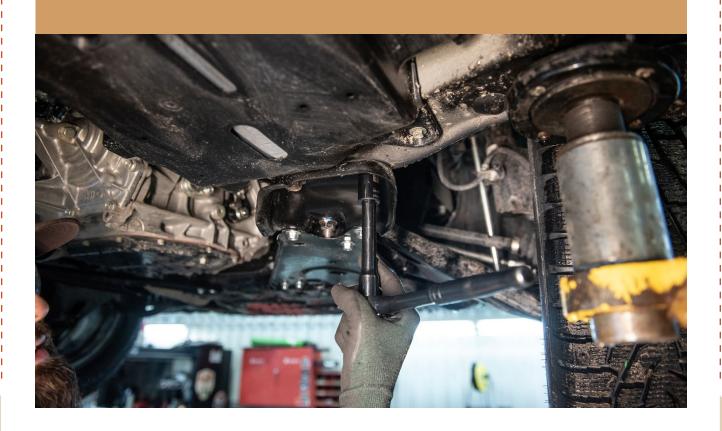

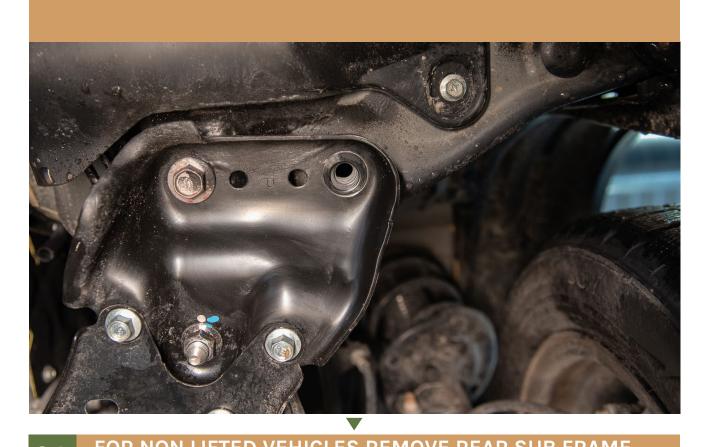




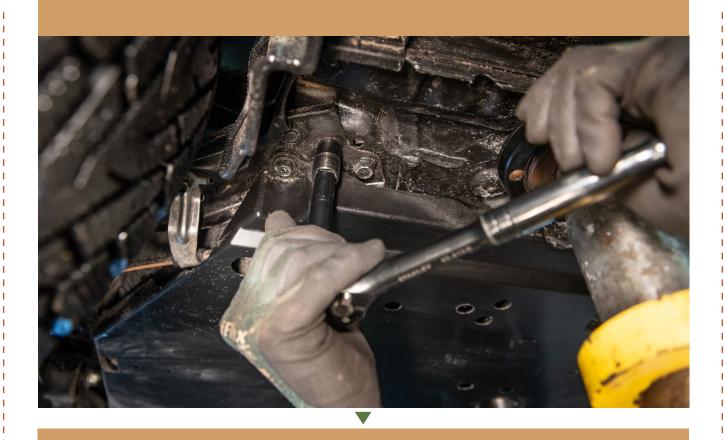


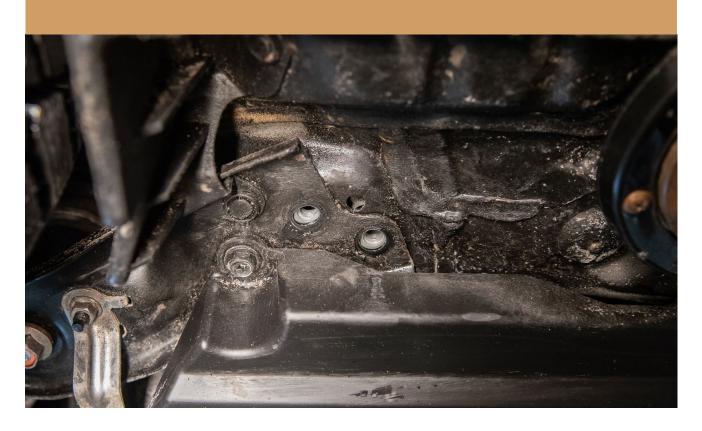


FOR VEHICLES WITH LP AVENTURE LIFT KIT REMOVE REAR SUB FRAME SUPPORT BAR SPACER



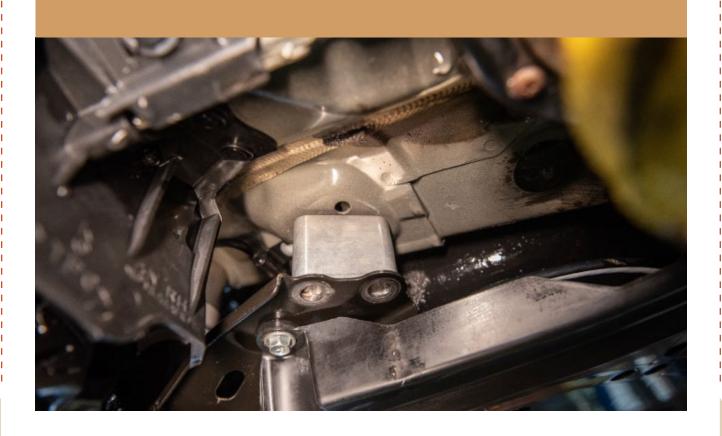

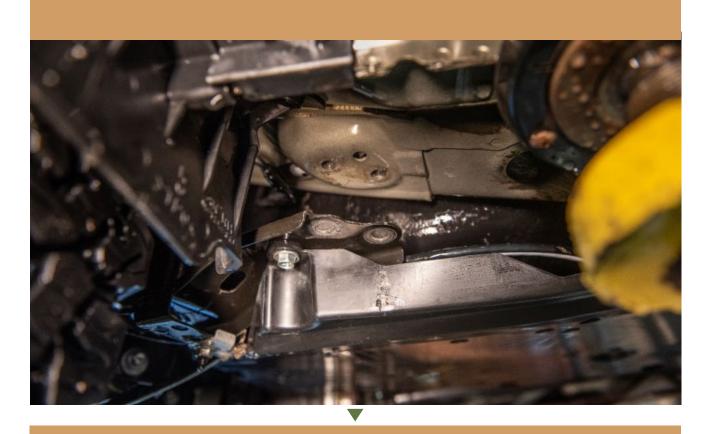

LOOSEN SUB FRAME BOLT

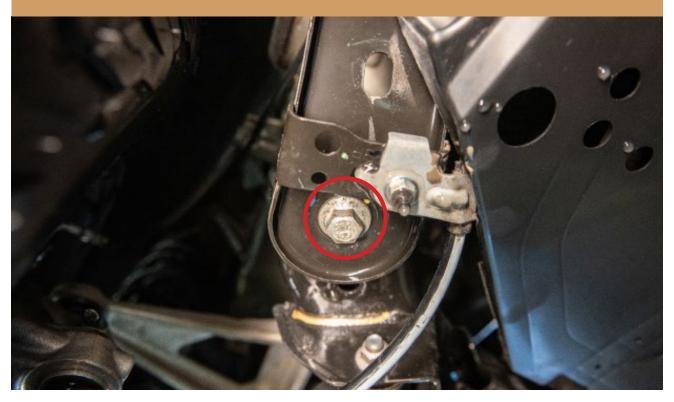



INSTALL ROCK SLIDERS




5 BOLT UP FRONT OF THE ROCK SLIDER




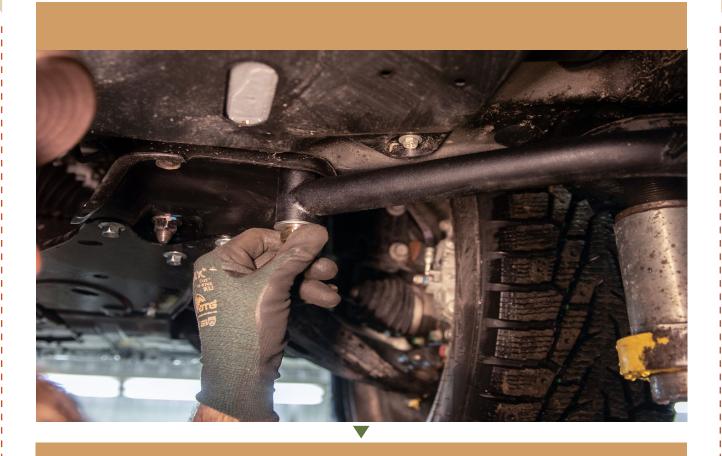

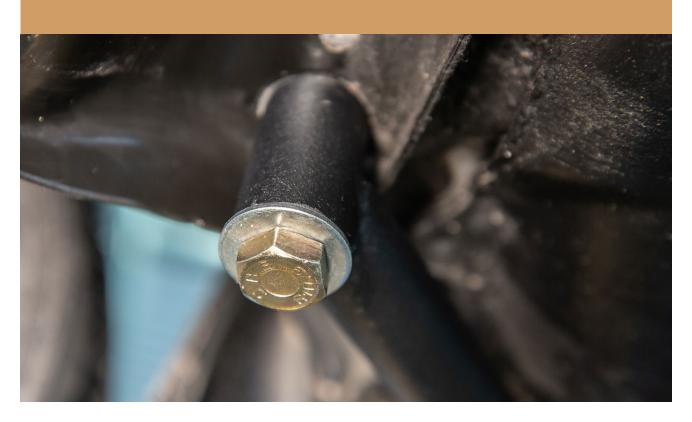


FOR NON LIFTED VEHICLES THE REAR OF THE ROCK SLIDER GOES UNDER THE SUBFRAME SUPPORT. USE THE BOLTS PROVIDED IN THE ROCK SLIDER KIT TO INSTALL

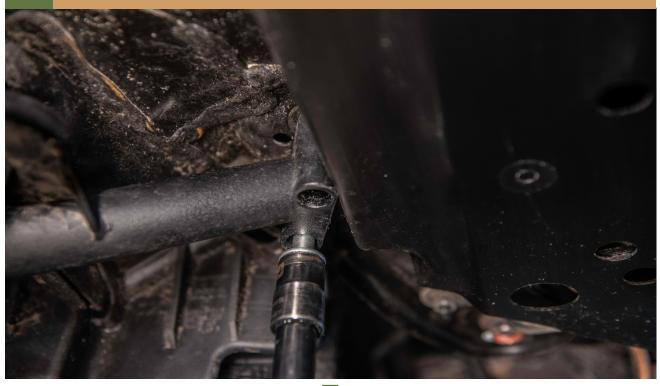

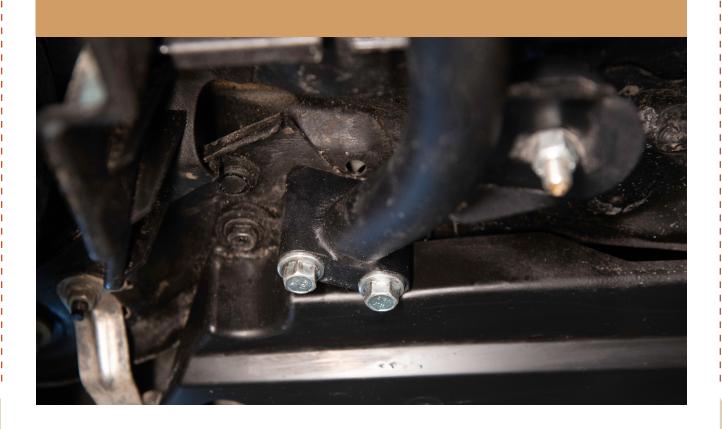



6B FOR LIFTED VEHICLES THE ROCK SLIDER GOES INBETWEEN THE SUB FRAME SUPPORT AND THE UNIBODY. USE THE BOLTS FROM THE LIFT KIT TO INSTALL



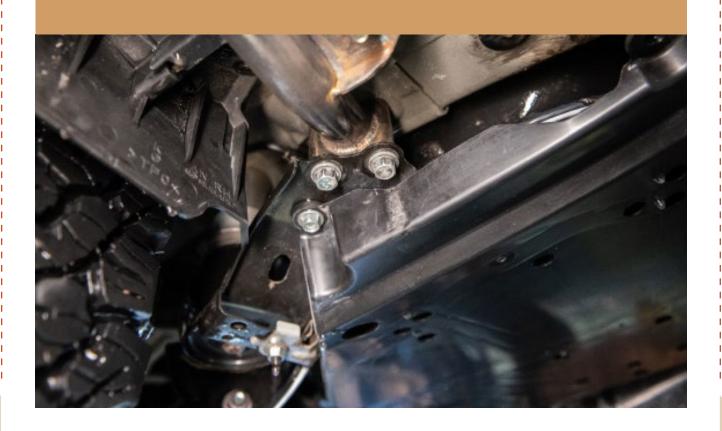


TIGHTEN BACK UP THE REAR SUB FRAME BOLT

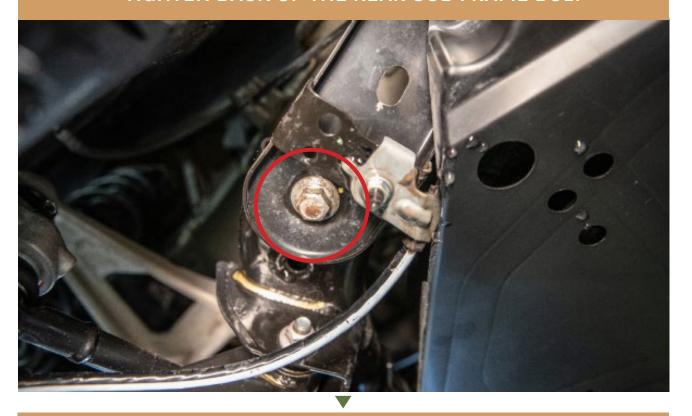

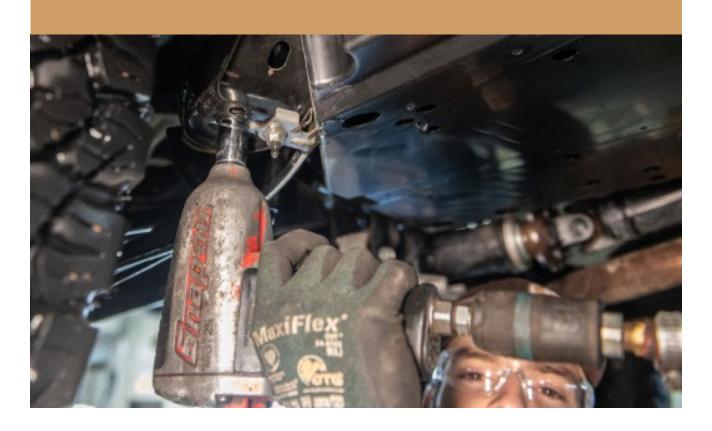

OPEN FRONT DOORS AND REMOVE REAR DOOR HINGE BOLT



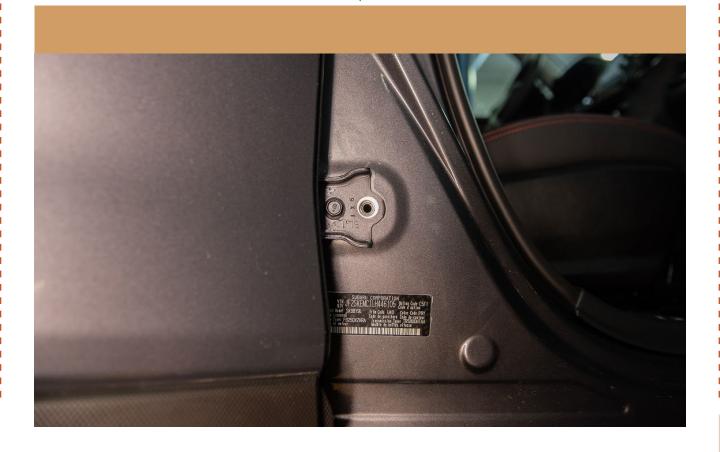






9 SECURE THE ROCKSLIDER TO THE BRACKET USING THE INCLUDED HARDWARE.
THE HELP OF A JACK MIGHT BE NEEDED TO GET THE ROCK SLIDER INPLACE.




* ON THE WILDERNESS EDITION;
YOU ONLY NEED TO SECURE THE BRACKET WITH THE TWO MOUNTING POINTS



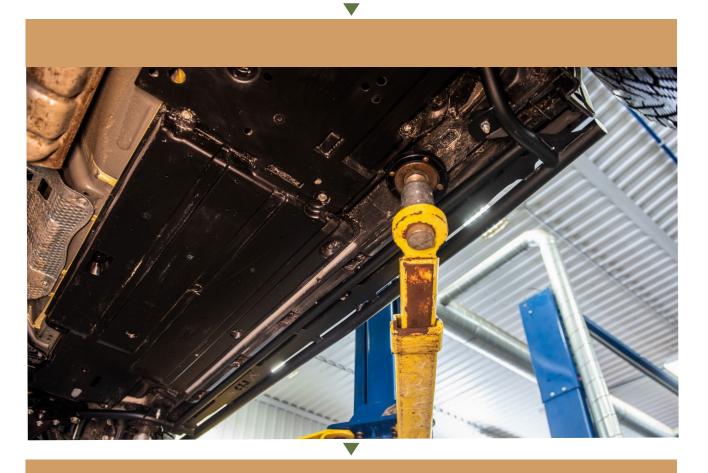

INSTALLATION COMPLETE!

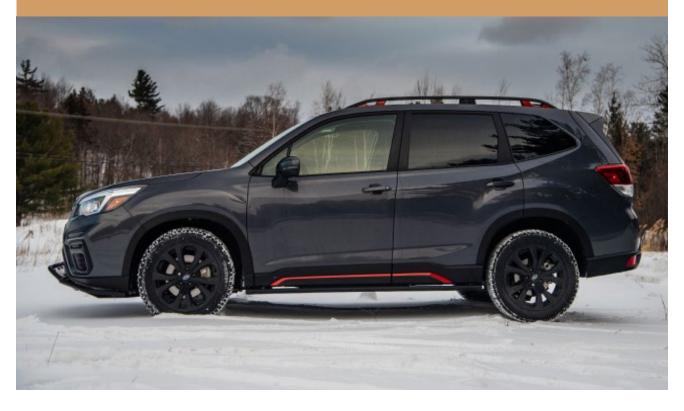

NOTES:

Tighten all the bolts to the manufacturer's specifications with a Torque Wrench

Double check your work.
Reinstall the wheels and be sure to tighten
the nuts with a torque wrench.

Products warnings: https://lpaventure.com/pages/products-warnings

Limited product warranty: https://lpaventure.com/pages/limited-prod-



You have completed the installation.
Thank you for your interest
in our products.

For all requests, information or assistance: Contact our team by phone at 1 (866) 562-1316

We are available Monday to Friday Between 8AM and 5PM (EST).

Or by email at : SALES@LPAVENTURE.COM WWW.LPAVENTURE.COM

NOW, ENJOY THE RIDE!