



Installation guide

LP Aventure Bumper guard

(small & big)

Subaru Crosstrek 2013-2017



Necessary tools :

- Ratchet
- 12mm Socket
- 14mm Socket
- 12mm wrench
- 14mm wrench
- Long nose pliers
- A small knife, or a dremel

Please note that you can keep the original skid plate, you just have to cut it. (See step # 1)

Here we removed the original skid plate, to better show you the bolts that must be removed during the installation.




#1. Cut the OEM skid plate





#2 : Unscrew these two bolts

*** Keep them, you will need them in step # 5 ***

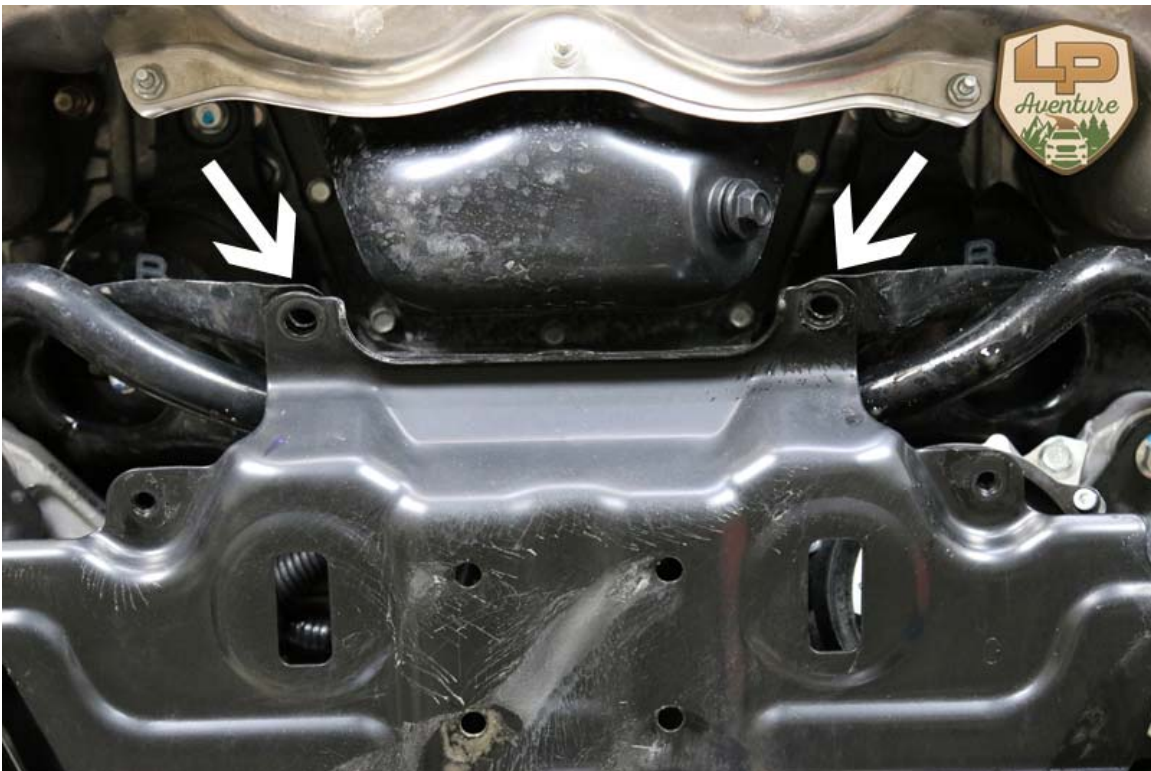

#3 : Unscrew the bolt of the bumper beam, the bottom one.

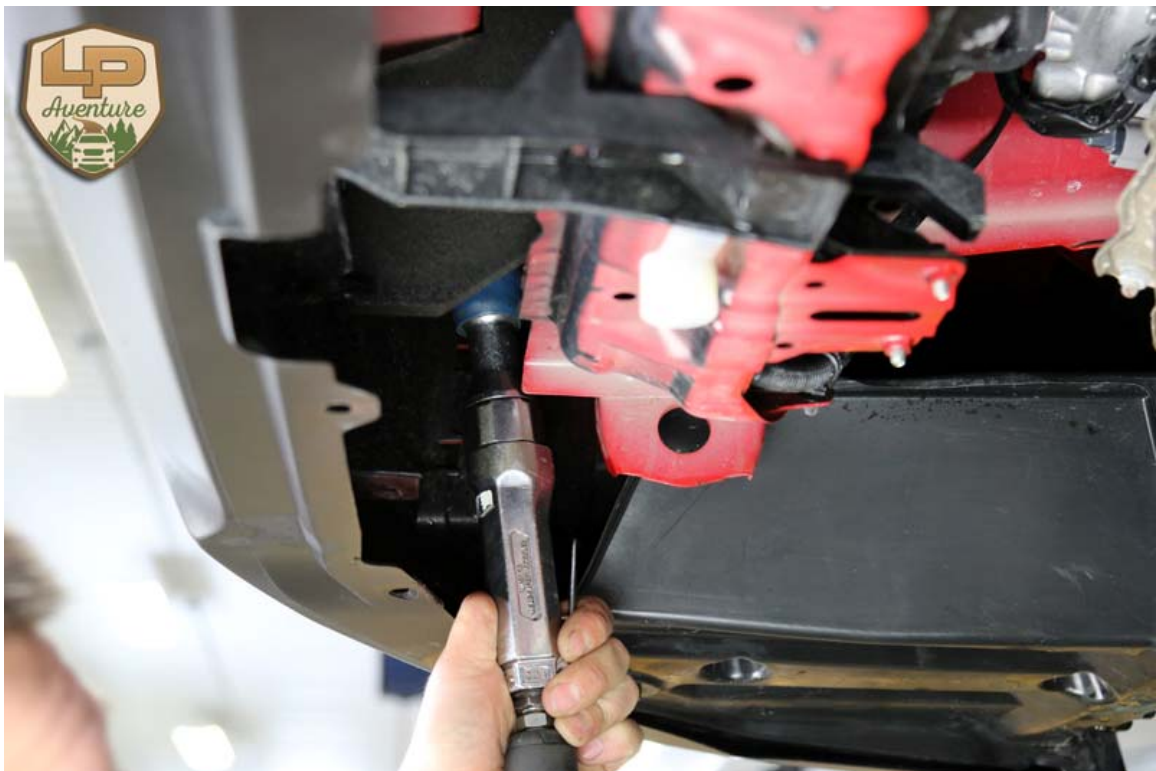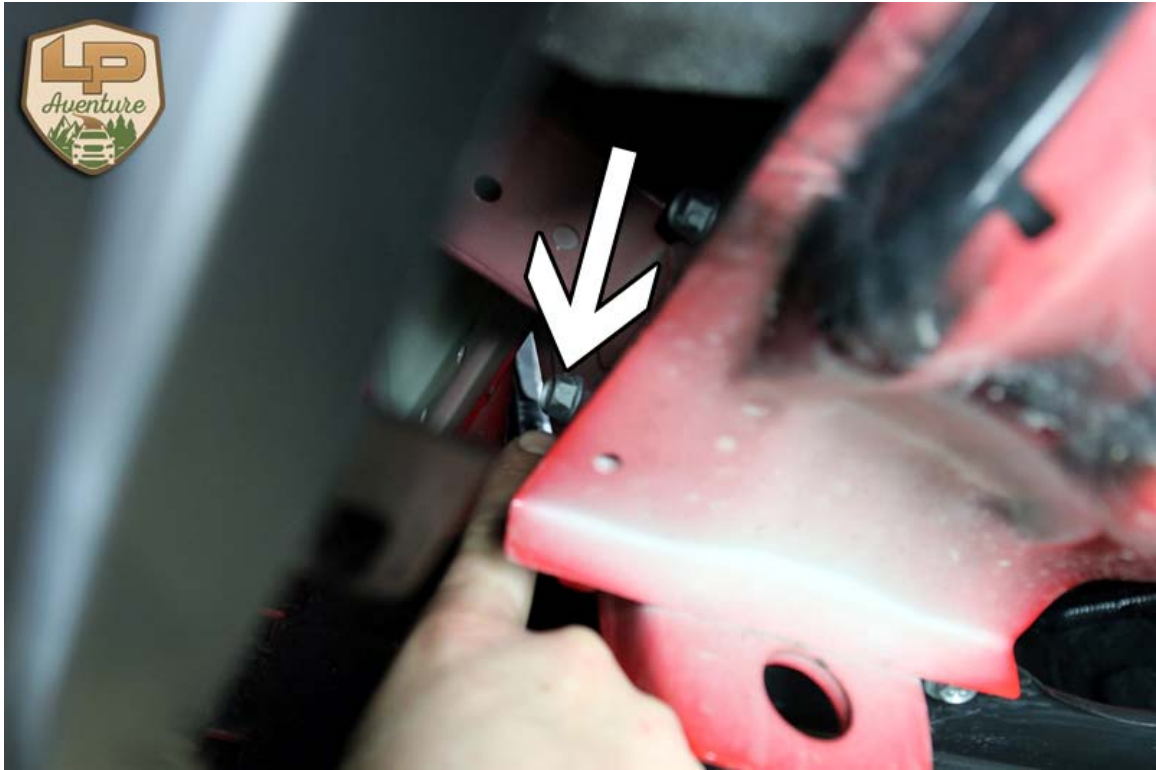

#4 : Install the bracket.

*** Replace the bolts of the bumper beam with bolts # 1 ***



**#4 : Attach the bumper guard to the bracket,
using nuts and bolts # 2.**

***** Do not screw the bolts to the end (you can tighten these after step # 5) *****



#5 : Bolt up the rear section of the bumper guard.

***** (Reuse bolts from step 2) *****




#6 : You can now completely bolt the bolts of the bracket



You have finalized the installation!



Here's what it's like when you keep the plastic skid plate

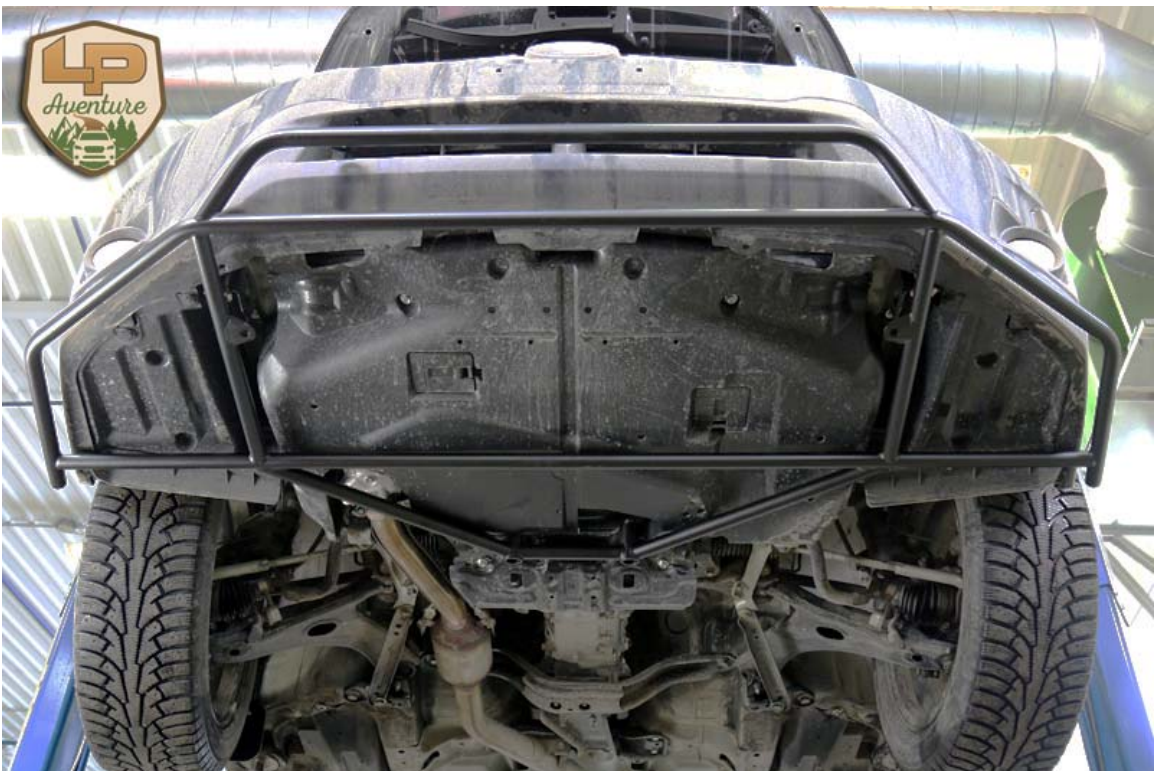

Thank you for your interest in our products.

For all requests for information or for assistance:

Contact our team by phone at

1 - (450) 562-0344

**We are available Monday to Friday between 8:00
and 17:00.**

Or by email at :

sales@lachuteperformance.com

www.lpaventure.com

