



-INSTALLATION- INSTRUCTIONS

▶ LP AVENTURE BUMPER GUARD ◀

TOYOTA RAV4 2016-2018

CONGRATULATIONS FOR YOUR NEW LP AVENTURE BUMPER GUARD!

If you have any question or need assistance during the installation please contact our team. You can find the information on the last page.



IN
THE
BOX





NECESSARY TOOLS

- Ratchet
- 10 mm Socket
- 12 mm Socket
- 17 mm Socket
- 19 mm Socket
- Flat head screw driver

1

REMOVE THE PLASTIC UNDER PANEL

A



1

REMOVE ALL CLIPS AND SCREWS THAT HOLD THE PANEL

B



1

REMOVE ALL SCREWS THAT HOLD THE PANEL

C



1

REMOVE ALL SCREWS THAT HOLD THE PANEL

D



1

REMOVE ALL CLIPS THAT HOLD THE PANEL

E



1

REMOVE ALL CLIPS THAT HOLD THE PANEL


F



2

REINSTALL THE SCREWS THAT HOLD THE BUMPER COVER

A

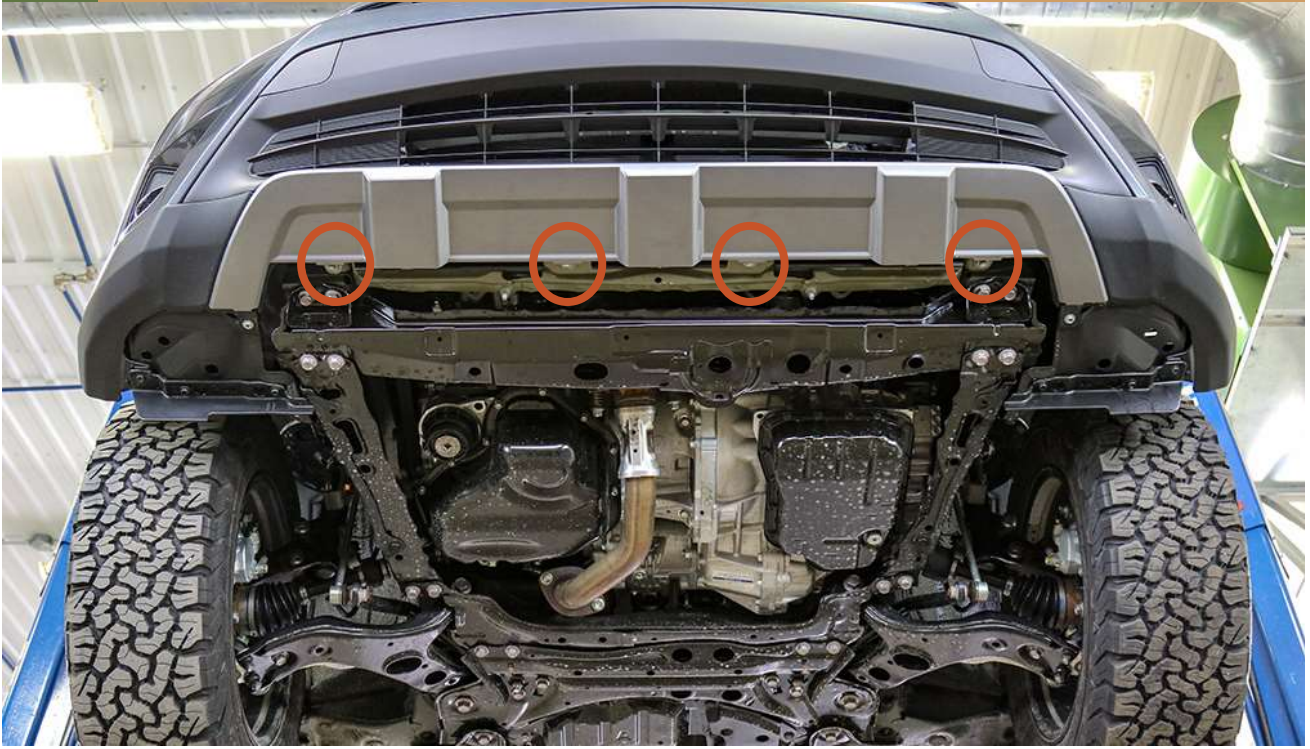

2

REINSTALL THE SCREWS THAT HOLD THE BUMPER COVER

B



2

REINSTALL THE SCREWS THAT HOLD THE BUMPER COVER

C



3

REMOVE THESE 4 BOLTS

A



3

HERE IS ANOTHER PICTURE TO SHOW BETTER THE BOLTS

B



3

HERE IS ANOTHER PICTURE TO SHOW BETTER THE BOLTS

C



4

INSTALL THE BUMPER GUARD


A



4

USE THE BOLTS PROVIDED TO REPLACE THE FRONT BOLTS

B

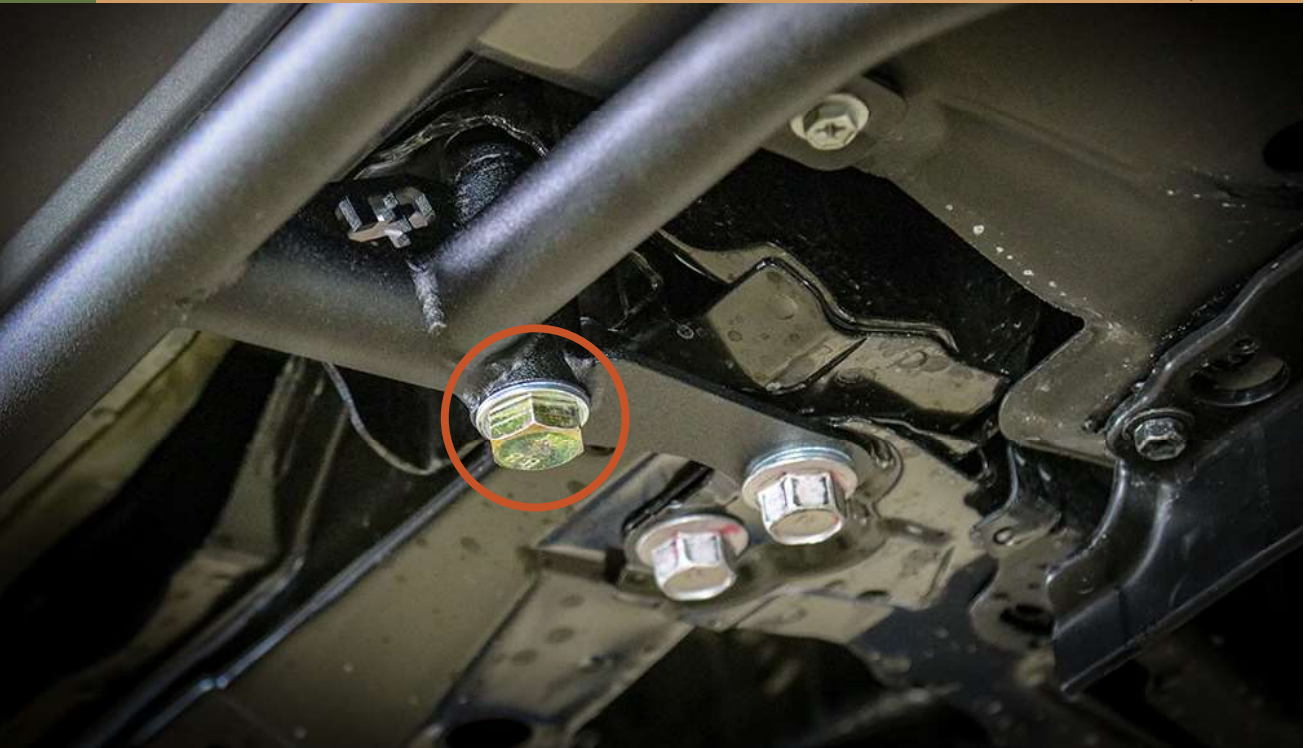

5

YOU HAVE COMPLETED THE INSTALLATION



OPTIONS: FRONT PLATE & SKID PLATE (AVAILABLE ON OUR WEBSITE)





NOTES:

Products warnings:

<https://lpaventure.com/pages/products-warnings>



Limited product warranty:

<https://lpaventure.com/pages/limited-product-warranty>



You have completed the installation.
Thank you for your interest
in our products.

For all requests, information or
assistance: Contact our team
by phone at
1 (866) 562-1316

We are available Monday to Friday
Between 8AM and 5PM (EST).

Or by email at :
LPAVENTURE@LACHUTEPERFORMANCE.COM
WWW.LPAVENTURE.COM

NOW, ENJOY THE RIDE!