



-INSTALLATION- INSTRUCTIONS



LP ADVENTURE ROCK SLIDERS



SUBARU CROSSTREK 2018+

CONGRATULATIONS FOR YOUR NEW LP AVENTURE ROCK SLIDERS!

If you have any question or need assistance
during the installation please
contact our team. You
can find the information
on the last
page.



IN
THE
BOX



IN THE BAGS

1



2



NECESSARY TOOLS

- We recommend the use of a lift
- Ratchet / Impact driver
- Breaker Bar
- 15mm Socket
- 18 mm Socket
- 19mm long Socket
- Torque wrench





1

UNSCREW THIS BOLT



2

UNSCREW THIS BOLT OF THE REAR SUBFRAME




3

INSTALL THE ROCK SLIDER IN PLACE



2

UNSCREW THIS BOLT OF THE REAR SUBFRAME

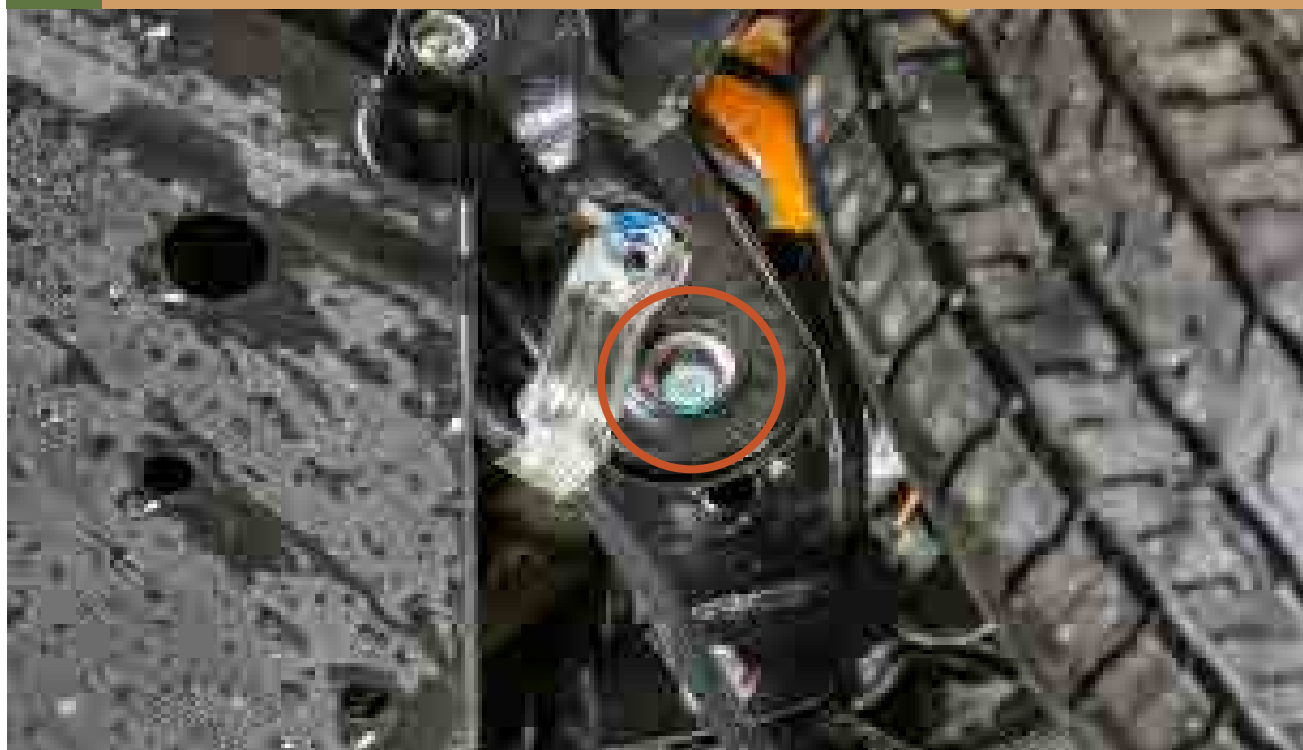

3

INSTALL THE PROVIDED SPACER AND THE ROCK SLIDER -





4

INSTALL THE ROCK SLIDER IN PLACE - FRONT



INSTALLATION COMPLETED





NOTES:

****Tighten all the bolts to the manufacturer's specifications with a Torque Wrench****

Products warnings:
<https://lpaventure.com/pages/products-warnings>

Limited product warranty:
<https://lpaventure.com/pages/limited-prod->



**You have completed the installation.
Thank you for your interest
in our products.**

**For all requests, information or
assistance: Contact our team
by phone at
1 (866) 562-1316**

**We are available Monday to Friday
Between 8AM and 5PM (EST).**

**Or by email at :
SALES@LPAVENTURE.COM
WWW.LPAVENTURE.COM**

NOW, ENJOY THE RIDE!