



-INSTALLATION- INSTRUCTIONS

▶ LP ADVENTURE BUMPER GUARD ◀


SUBARU WRX 2022+

CONGRATULATIONS FOR YOUR NEW LP AVENTURE BUMPER GUARD!

If you have any questions or need assistance during the installation please contact our team. You can find the information on the last page.



IN THE BAG

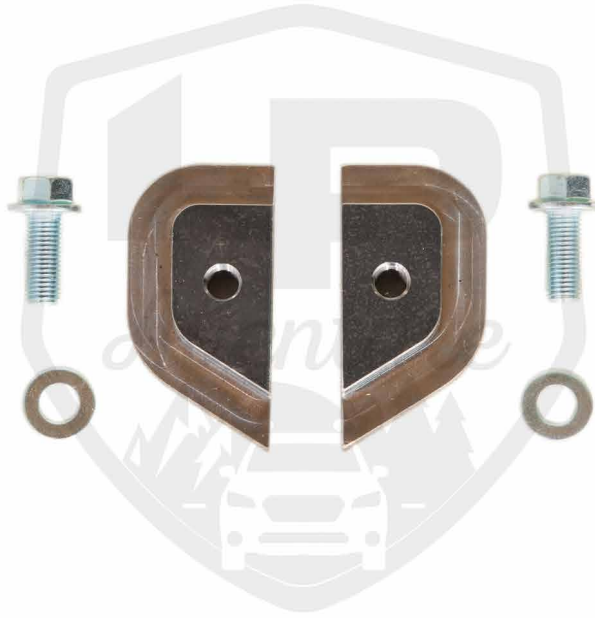

BARE BUMPER GUARD SHIPS WITH FRONT PLATE UNINSTALLED





NECESSARY TOOLS

- We recommend the use of a lift
- Push pin removal pliers or pry bar
- Ratchet
- Ratchet extension
- 12mm socket
- 14mm shallow socket
- Drill
- 1 1/2" hole saw
- Measuring tape

**** A BIG BUMPER GUARD WAS USED FOR THIS GUIDE
BUT THE STEPS FOR A SMALL BUMPER GUARD ARE THE SAME**


1


REMOVE FACTORY SPLASH GUARD



**YOU NEED TO REMOVE THE SPLASH GUARD IN ORDER TO MAKE TWO HOLES
IN IT TO BE ABLE TO MOUNT THE BUMPER GUARD TO THE RAD SUPPORT**



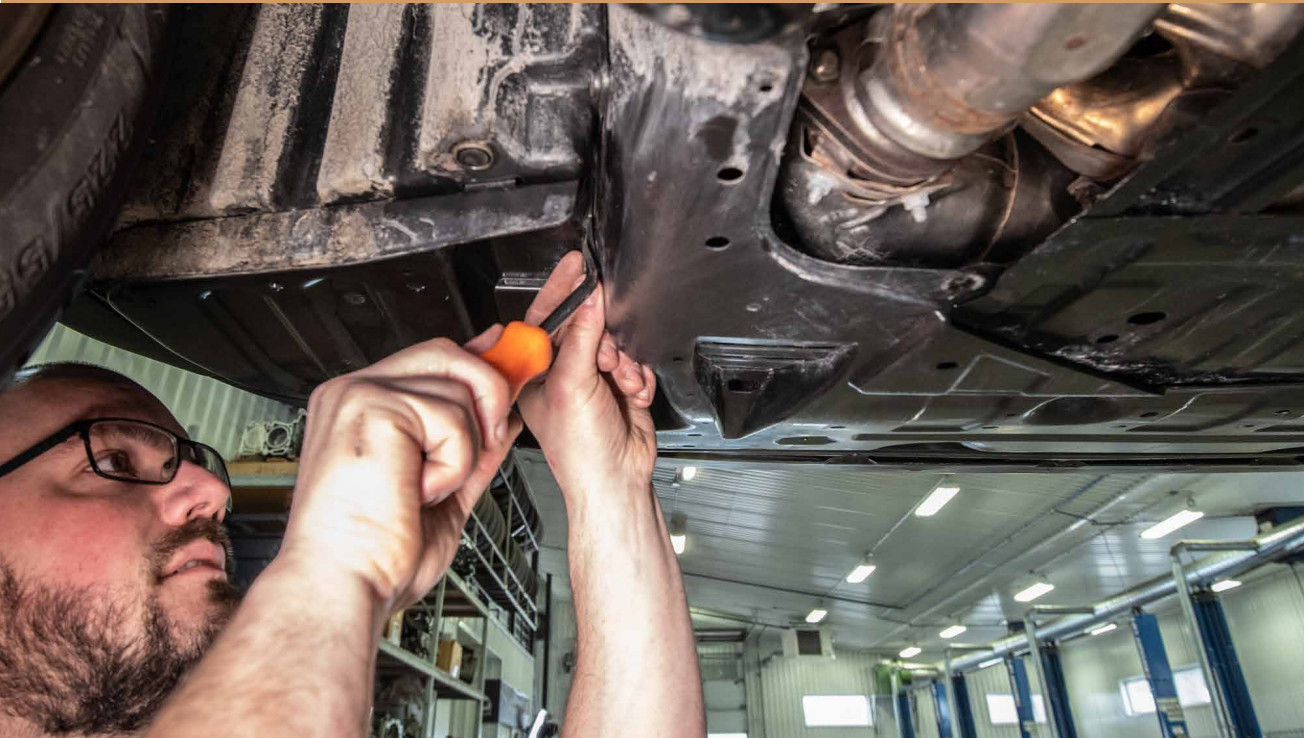

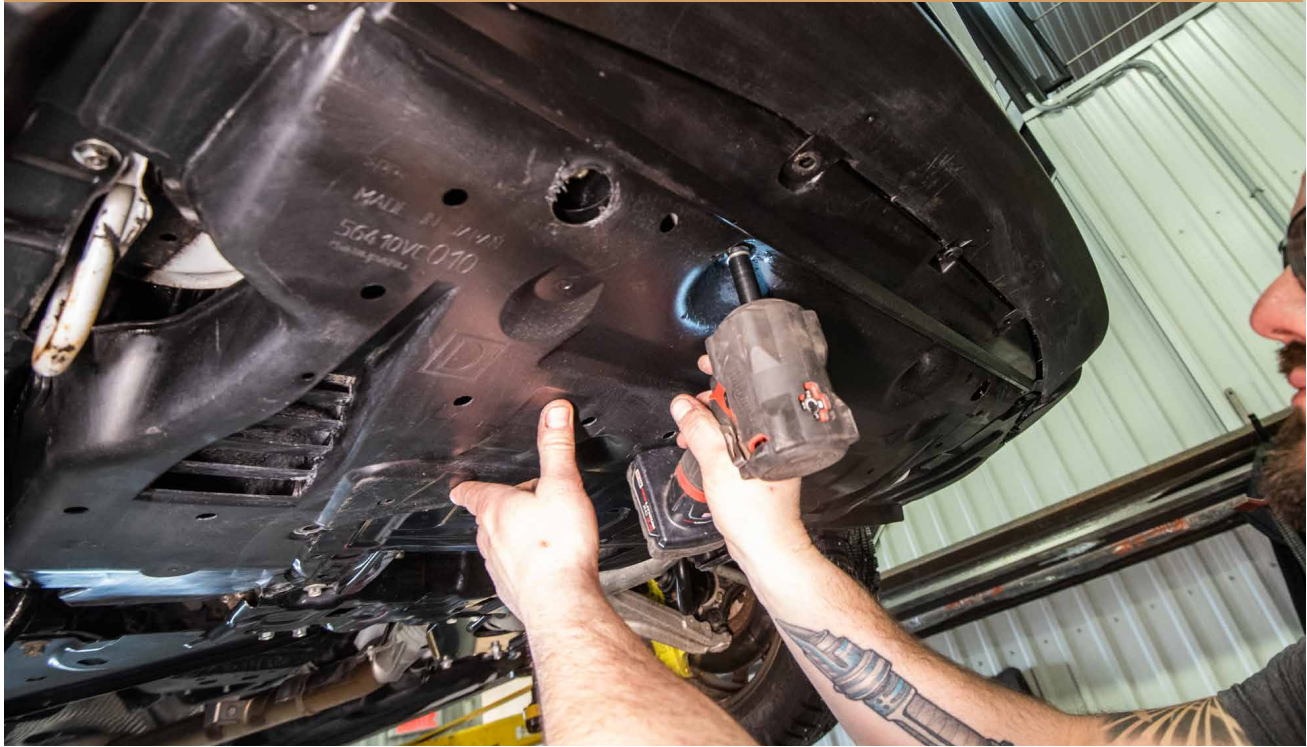

2

MEASURE WHERE THE HOLES WILL GO



MEASURE 12 7/8" ACROSS STARTING FROM THE NOTCH IN THE SPLASH GUARD. STEPS ARE THE SAME FOR BOTH SIDES



*WE HAD PREVIOUSLY MADE THE HOLES IN OURS DURING THE DEVELOPMENT STAGES

MEASURE 1 1/8" DOWN FROM THE RIDGE





3

USING A HOLE SAW, DRILL OUT THE HOLES




4

REMOVE THE TWO RAD SUPPORT BOLTS BUT KEEP THEM CLOSE, THEY WILL BE USED TO SECURE THE BUMPER GUARD

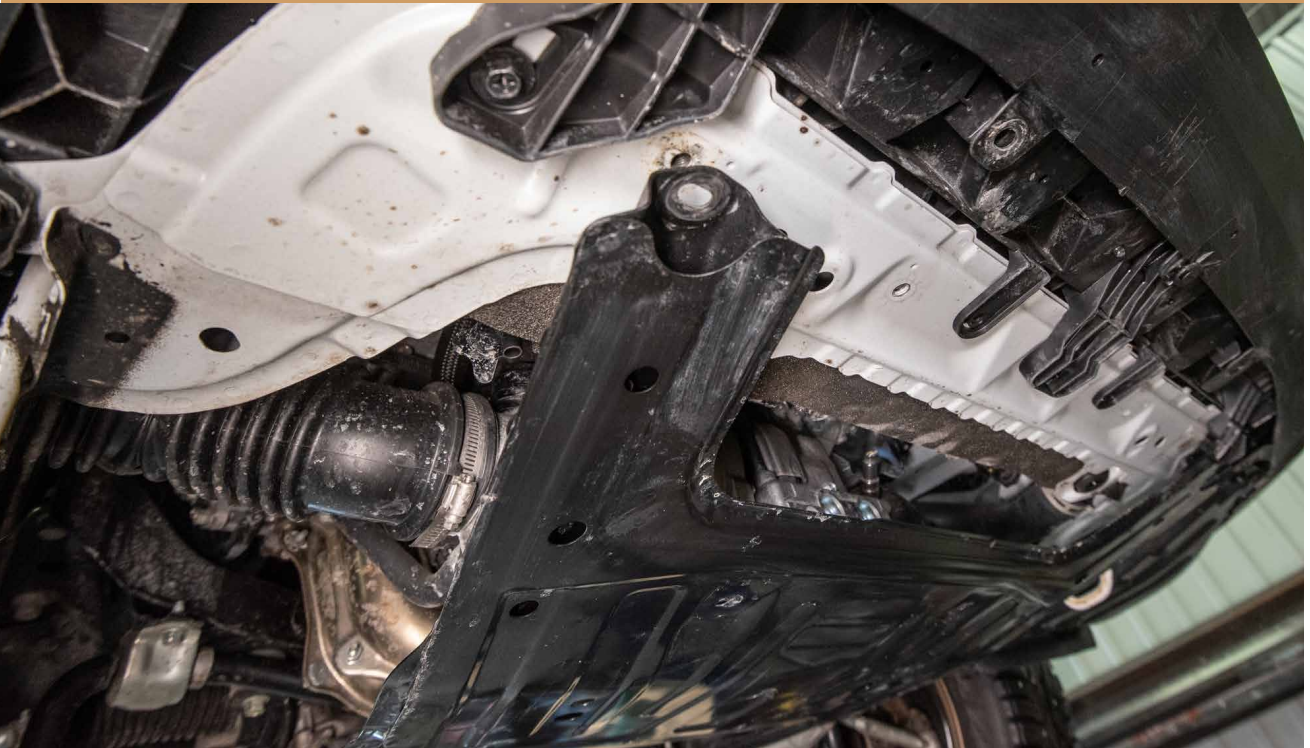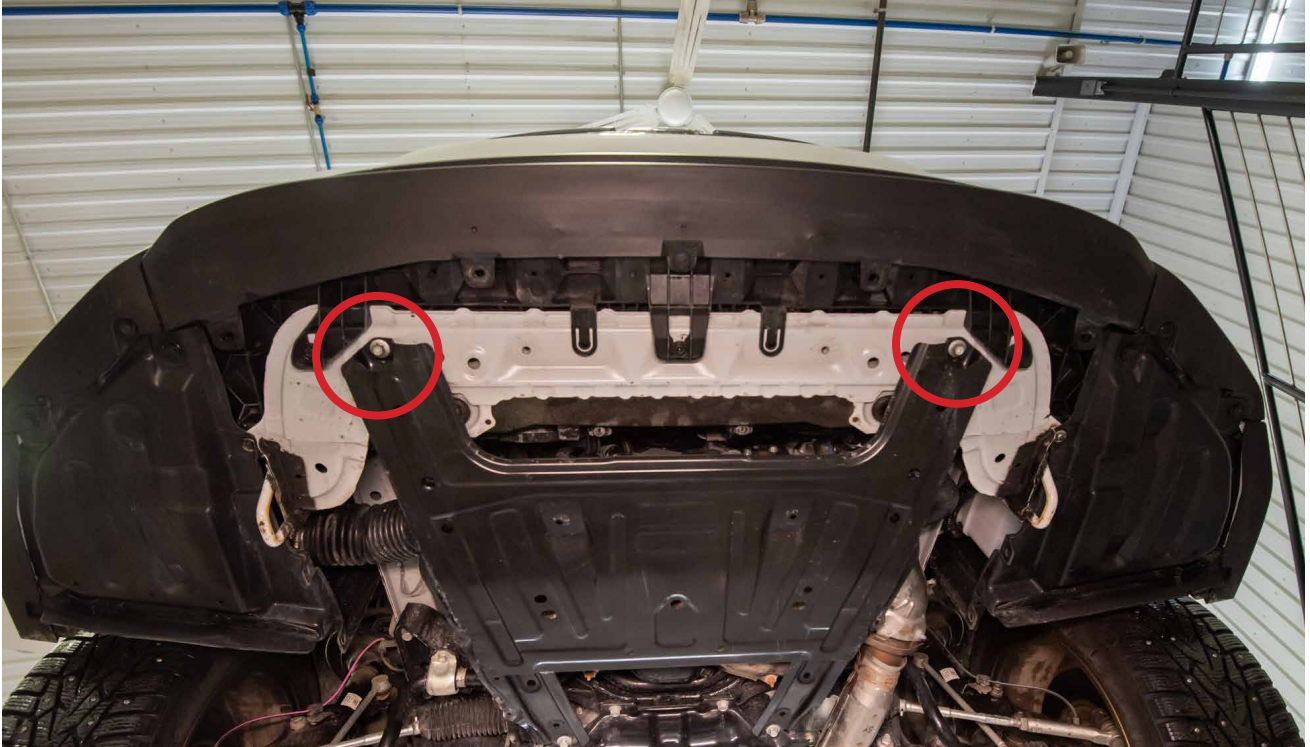

5

LEAVE THE UNDER TRAY UN BOLTED AND RE INSTALL THE PLASTIC SPLASH GUARD

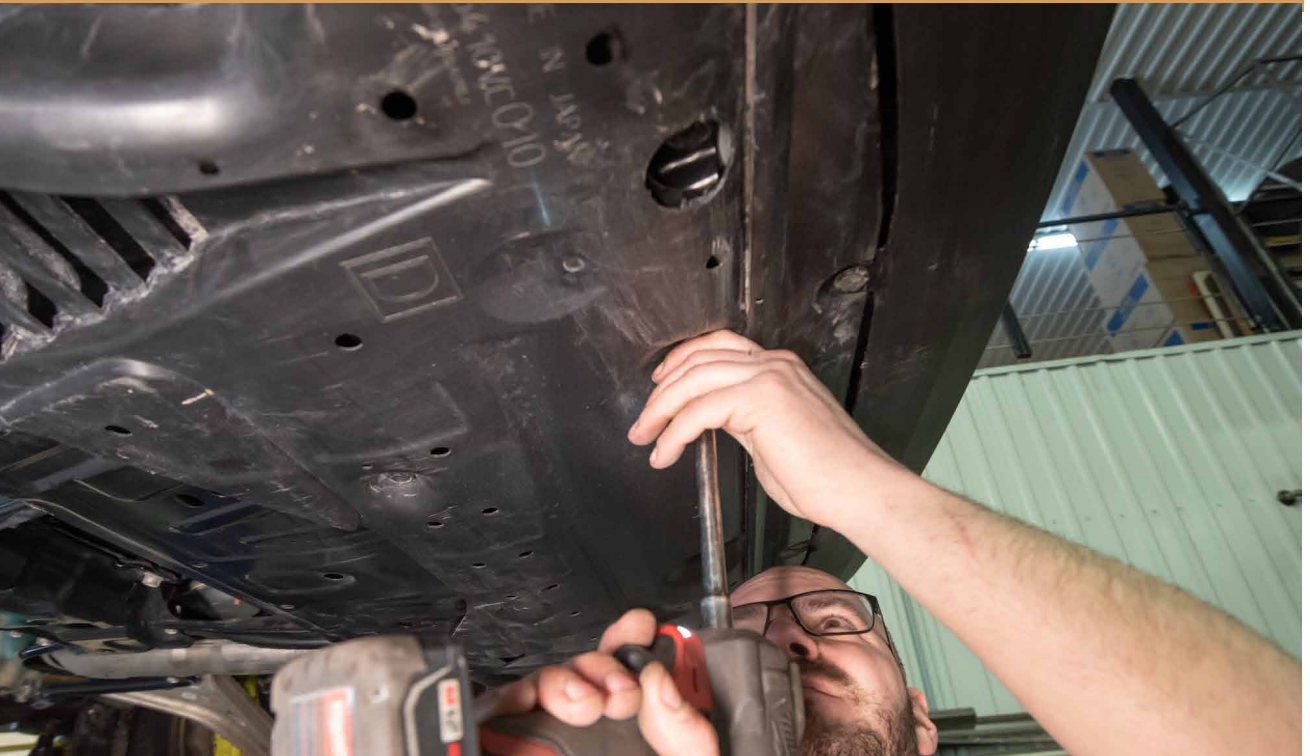

6

USING A JACK (OR A FRIEND) RAISE THE BUMPER
GUARD INTO PLACE



THE TABS WILL ALIGN WITH THE FACTORY TOW HOOKS



7

INSTALL THE BUMPER GUARD BRACKETS.
-MAKE SURE TO HAVE THE CORRECT BRACKET FOR THE CORRECT SIDE



THE BRACKET GOES ON THE OUTSIDE OF THE TWO HOOK




THREAD IN THE BOLT BUT DO NOT TIGHTEN YET







8

RE INSTALL THE FACTORY RAD SUPPORT BOLTS

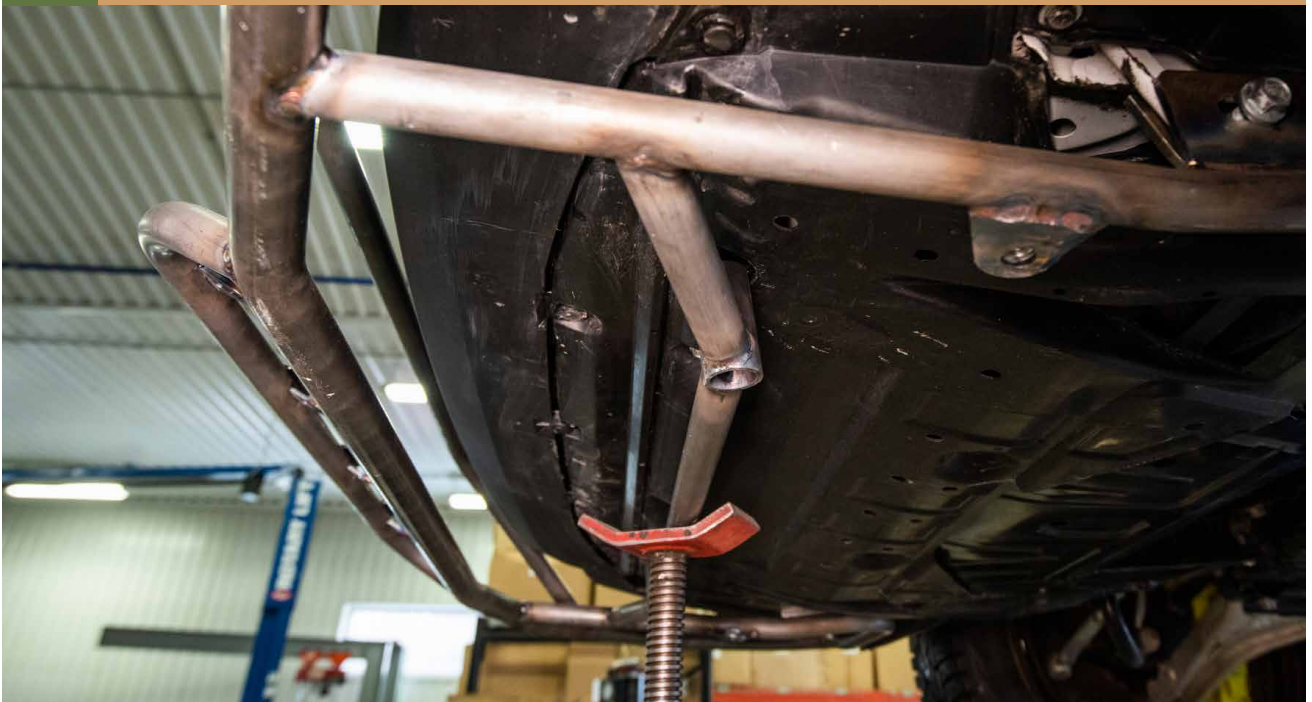

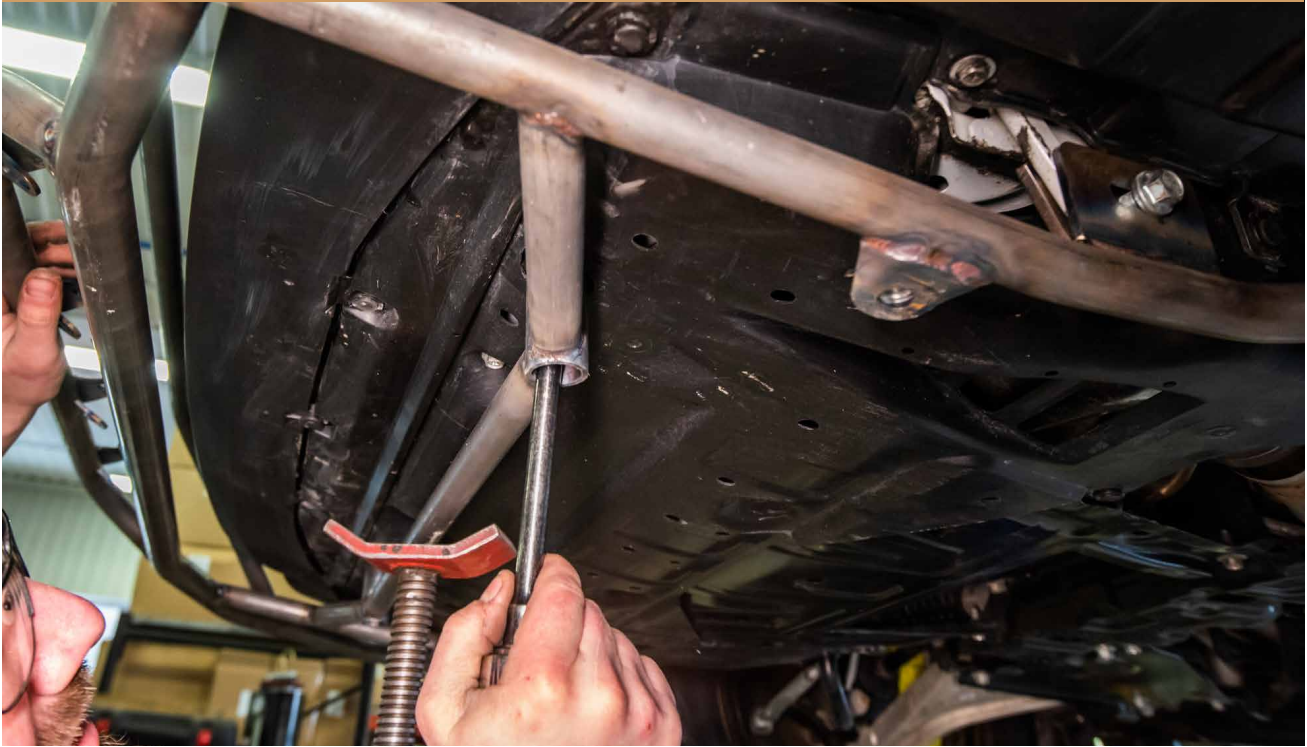

DO NOT TIGHTEN YET

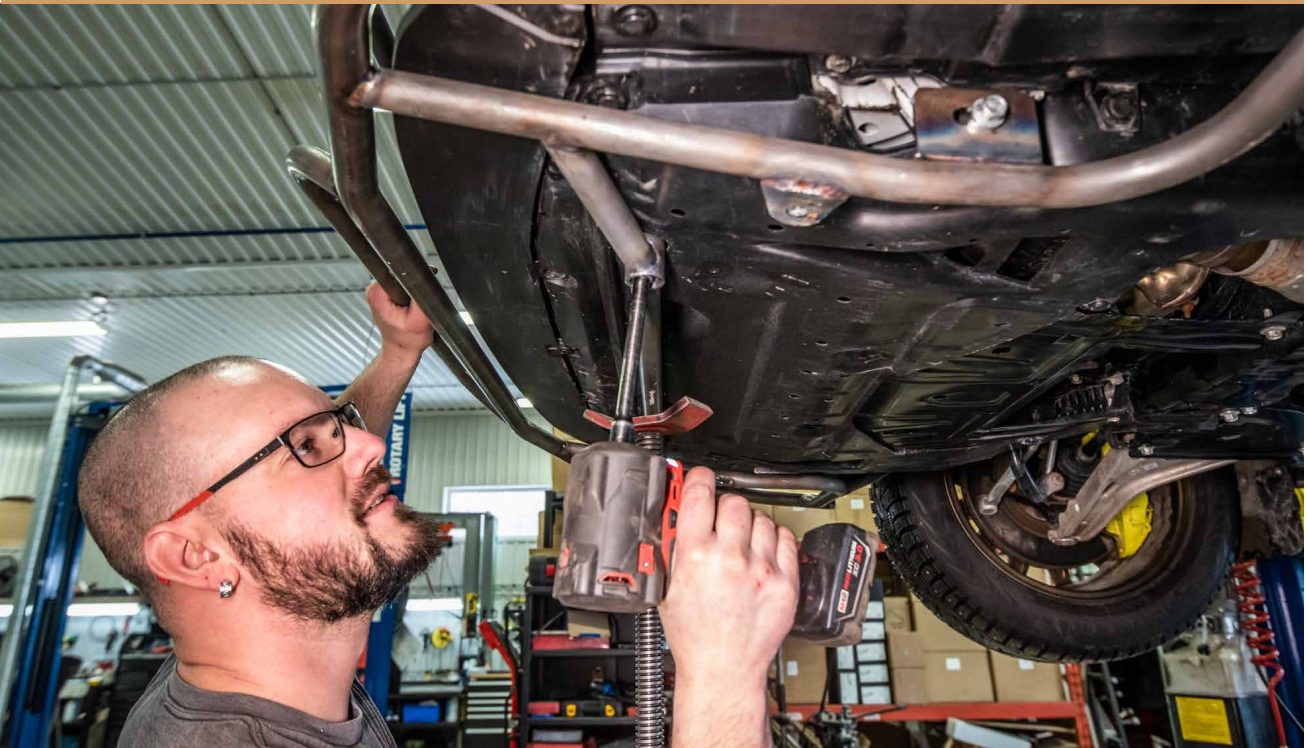

9

MAKE SURE THE BUMPER GUARD IS SITTING LEVEL THEN TIGHTEN THE BUMPER GUARD BRACKETS FIRST.



10

NOW YOU CAN TIGHTEN THE RAD SUPPORT BOLTS



9

INSTALLATION COMPLETE!



LP Adventure



▼
NOTES:

****Tighten all the bolts to the manufacturer's specifications with a Torque Wrench****

**Double check your work.
Reinstall the wheels and be sure to tighten
the nuts with a torque wrench.**

**Products warnings:
<https://lpaventure.com/pages/products-warnings>**

**Limited product warranty:
<https://lpaventure.com/pages/limited-product-warranty>**



**You have completed the installation.
Thank you for your interest
in our products.**

**For all requests, information or
assistance: Contact our team
by phone at
1 (866) 562-1316**

**We are available Monday to Friday
Between 8AM and 5PM (EST).**

**Or by email at :
SALES@LPAVENTURE.COM
WWW.LPAVENTURE.COM**

NOW, ENJOY THE RIDE!