



# -INSTALLATION- INSTRUCTIONS

▶ LP AVENTURE ◀

REAR DIFFERENTIAL SKID PLATE

# CONGRATULATIONS FOR YOUR NEW LP AVENTURE PRODUCT!

If you have any question or need assistance during the installation please contact our team. You can find the information on the last page.



IN  
THE  
BOX




## NECESSARY TOOLS

- Ratchet
- 17 mm Socket
- Pry bar



1

HERE ARE THE 4 BOLTS YOU WILL NEED TO UNSCREW

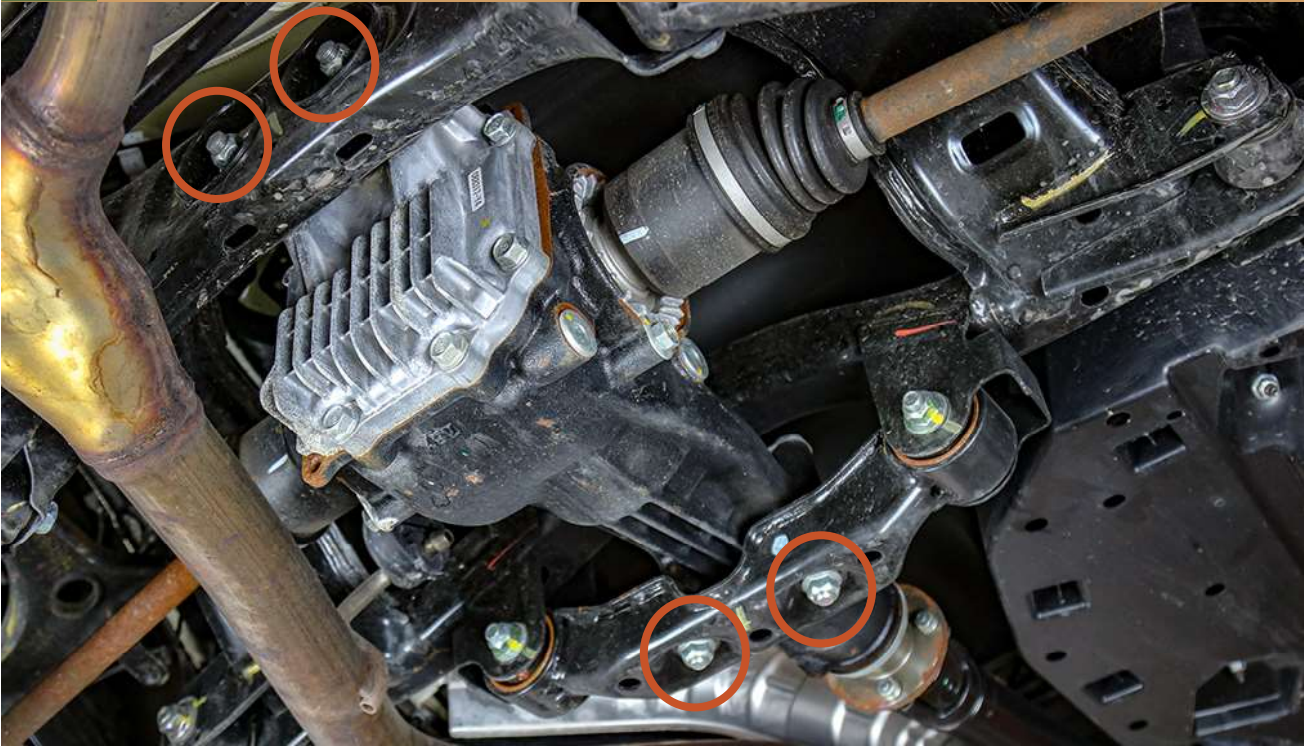

1

FIRST; UNSCREW THE TWO REAR BOLTS AT 75%



2

SECONDLY; UNSCREW THESE TWO BOLTS




2



3

WITH THE HELP OF THE PRY BAR, INSTALL THE SKID PLATE

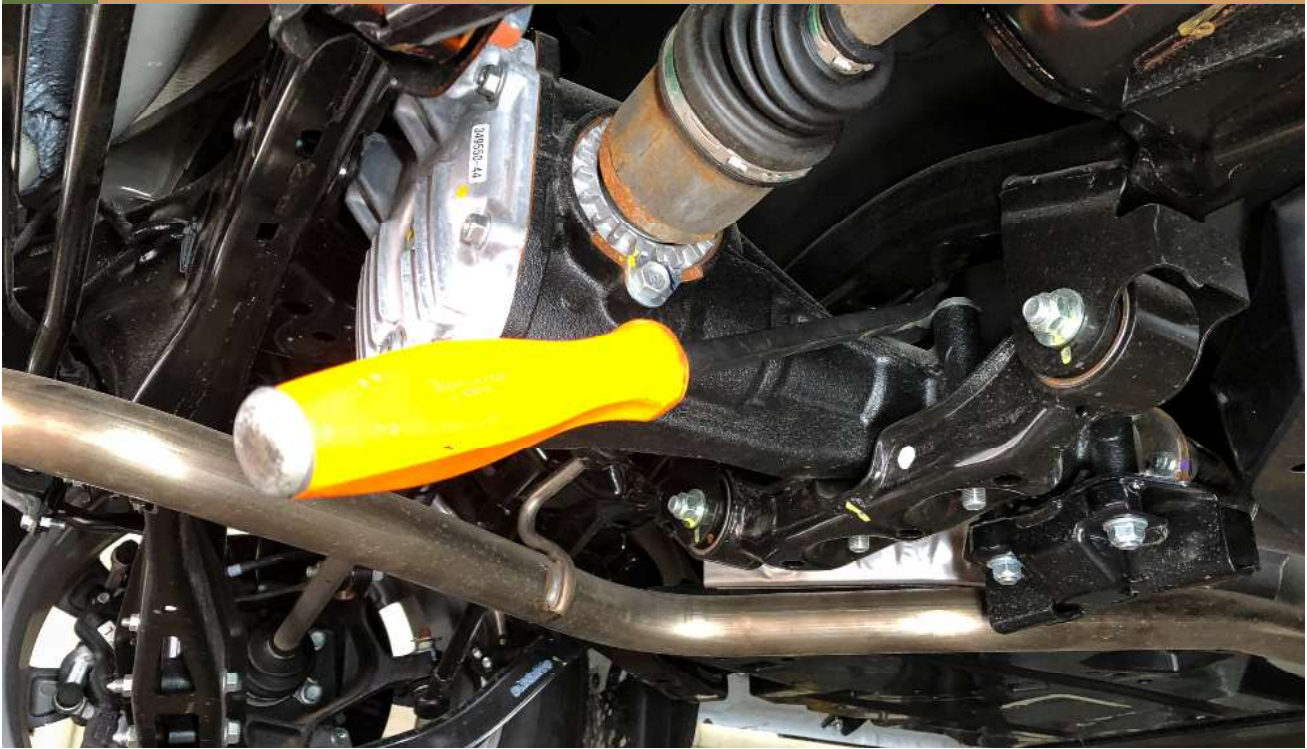

3

ZOOMED VIEW



3

PICTURE OF THE SKID PLATE IN PLACE




4

ONCE IN PLACE, YOU CAN SCREW THE 4 BOLTS



YOU HAVE COMPLETED THE INSTALLATION

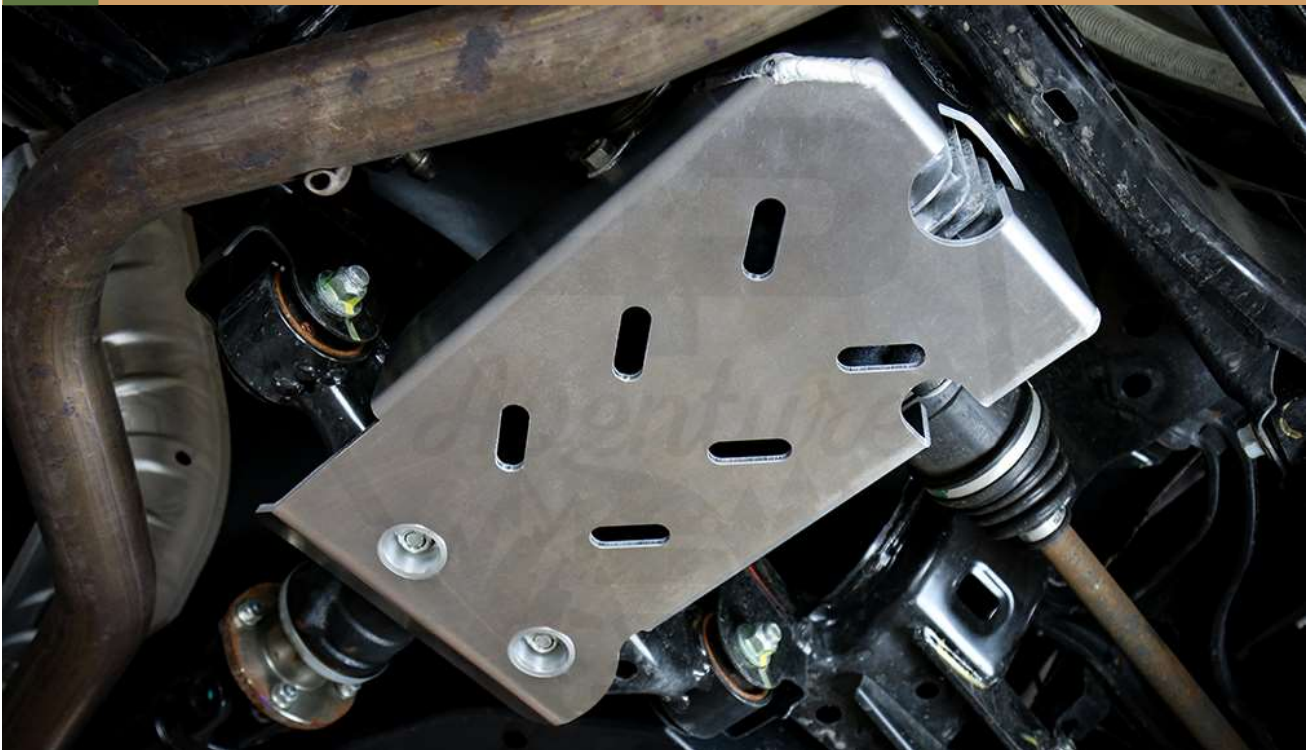





1

YOU NEED TO REMOVE THE ARMONIC BLOC...




2

AND REINSTALL THE ARMONIC BLOC IN THE OTHER SIDE...



TO HAVE ENOUGH CLEARANCE FOR THE FRONT.

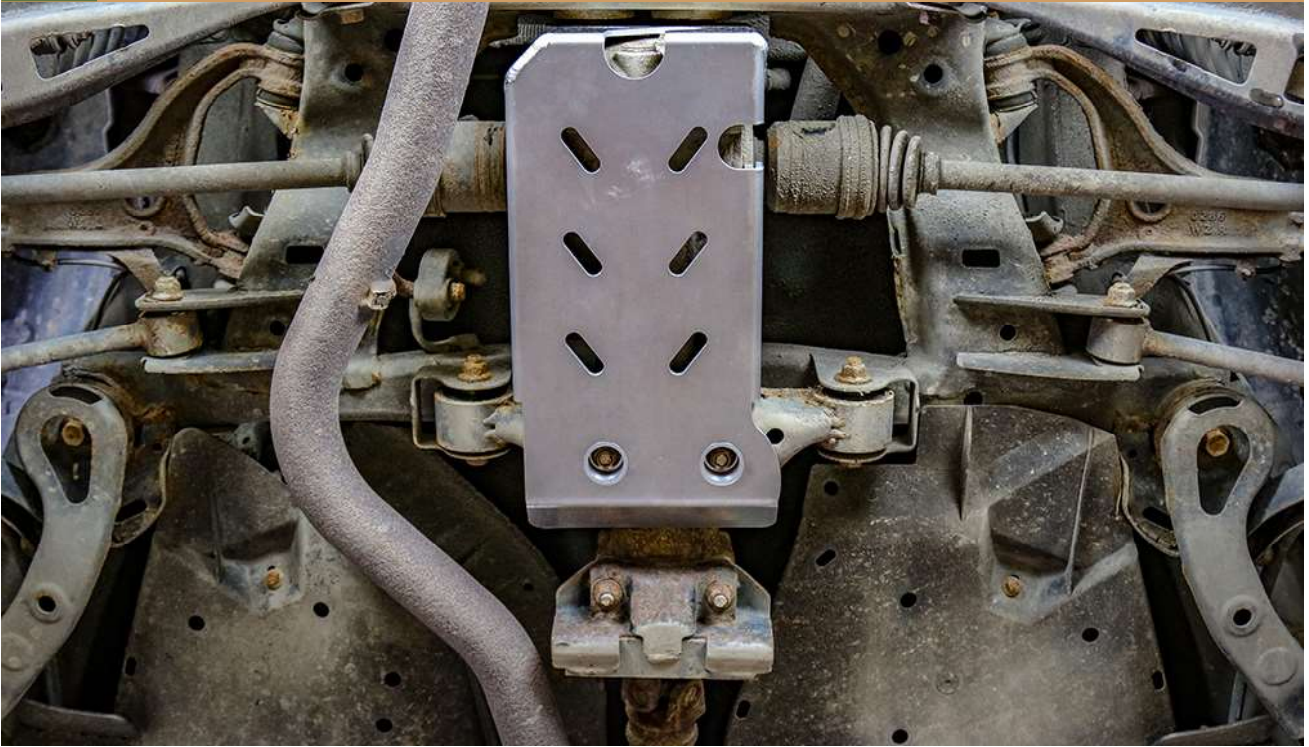

ZOOMED VIEW



HERE IS THE PHOTO FOR THE SMALL DIFFERENTIAL (2.5I)



HERE IS THE PHOTO FOR THE BIG DIFFERENTIAL (3.6R)



NOTES:

\*\*Tighten all the bolts to the manufacturer's specifications with a Torque Wrench\*\*

Double check your work.

Products warnings:  
<https://lpaventure.com/pages/products-warnings>

Limited product warranty:  
<https://lpaventure.com/pages/limited-product-warranty>



You have completed the installation.  
Thank you for your interest  
in our products.

For all requests, information or  
assistance: Contact our team  
by phone at  
**1 (866) 562-1316**

We are available Monday to Friday  
Between 8AM and 5PM (EST).

Or by email at :  
**SALES@LAVENTURE.COM**  
**WWW.LPAVENTURE.COM**

**NOW, ENJOY THE RIDE!**