



**Please have all accessories professionally installed, or have your assembly verified by a professional bicycle mechanic.**

**Step 1.** Ensure this process is done with the basket off the bicycle.

**Step 2.** Tighten the six (6) screws (black/white baskets – phillips screws, silver baskets – 4mm allen bolts) on the bottom of the basket which hold the mounting hardware to the basket.

**Step 3.** Remove the middle wooden slat using a phillips screwdriver and a 10mm wrench or socket.

**Step 4.** Install a washer and locking nut over each of the six (6) screws. Using one hand, hold each screw with the appropriate tool (black/white baskets – phillips screwdriver, silver baskets – 4mm allen wrench) and with the other hand tighten the locking nuts using a 10mm wrench or socket.

**Step 5.** Replace the middle wooden slat.

**Step 6.** Complete the installation of your basket as specified in our video at <http://www.prioritybicycles.com/instructions>

FOR BICYCLES WITH FRONT BRAKE AND OR FENDER, SEE OUR INSTRUCTIONS FOR HOW TO INSTALL MULTIPLE FRONT ACCESSORIES, ON OUR WEBSITE. IT'S CRITICAL THAT LOCKING NUTS BE USED THROUGHOUT THE PROCESS, INCLUDING SECURING THE FRONT BRAKE

Perform a safety check. Ride your bicycle in a controlled environment to ensure that everything is tight and secure.

Please remember that all weight bearing accessories can become loose with riding. We recommend that you check your basket for tightness before each ride.

Figure A.

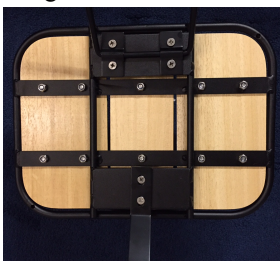


Figure B.

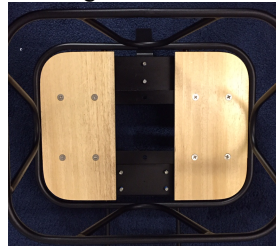


Figure C.



Figure D.

