


CUTLER

KITCHEN & BATH

FLOATING VANITY INSTALLATION GUIDE

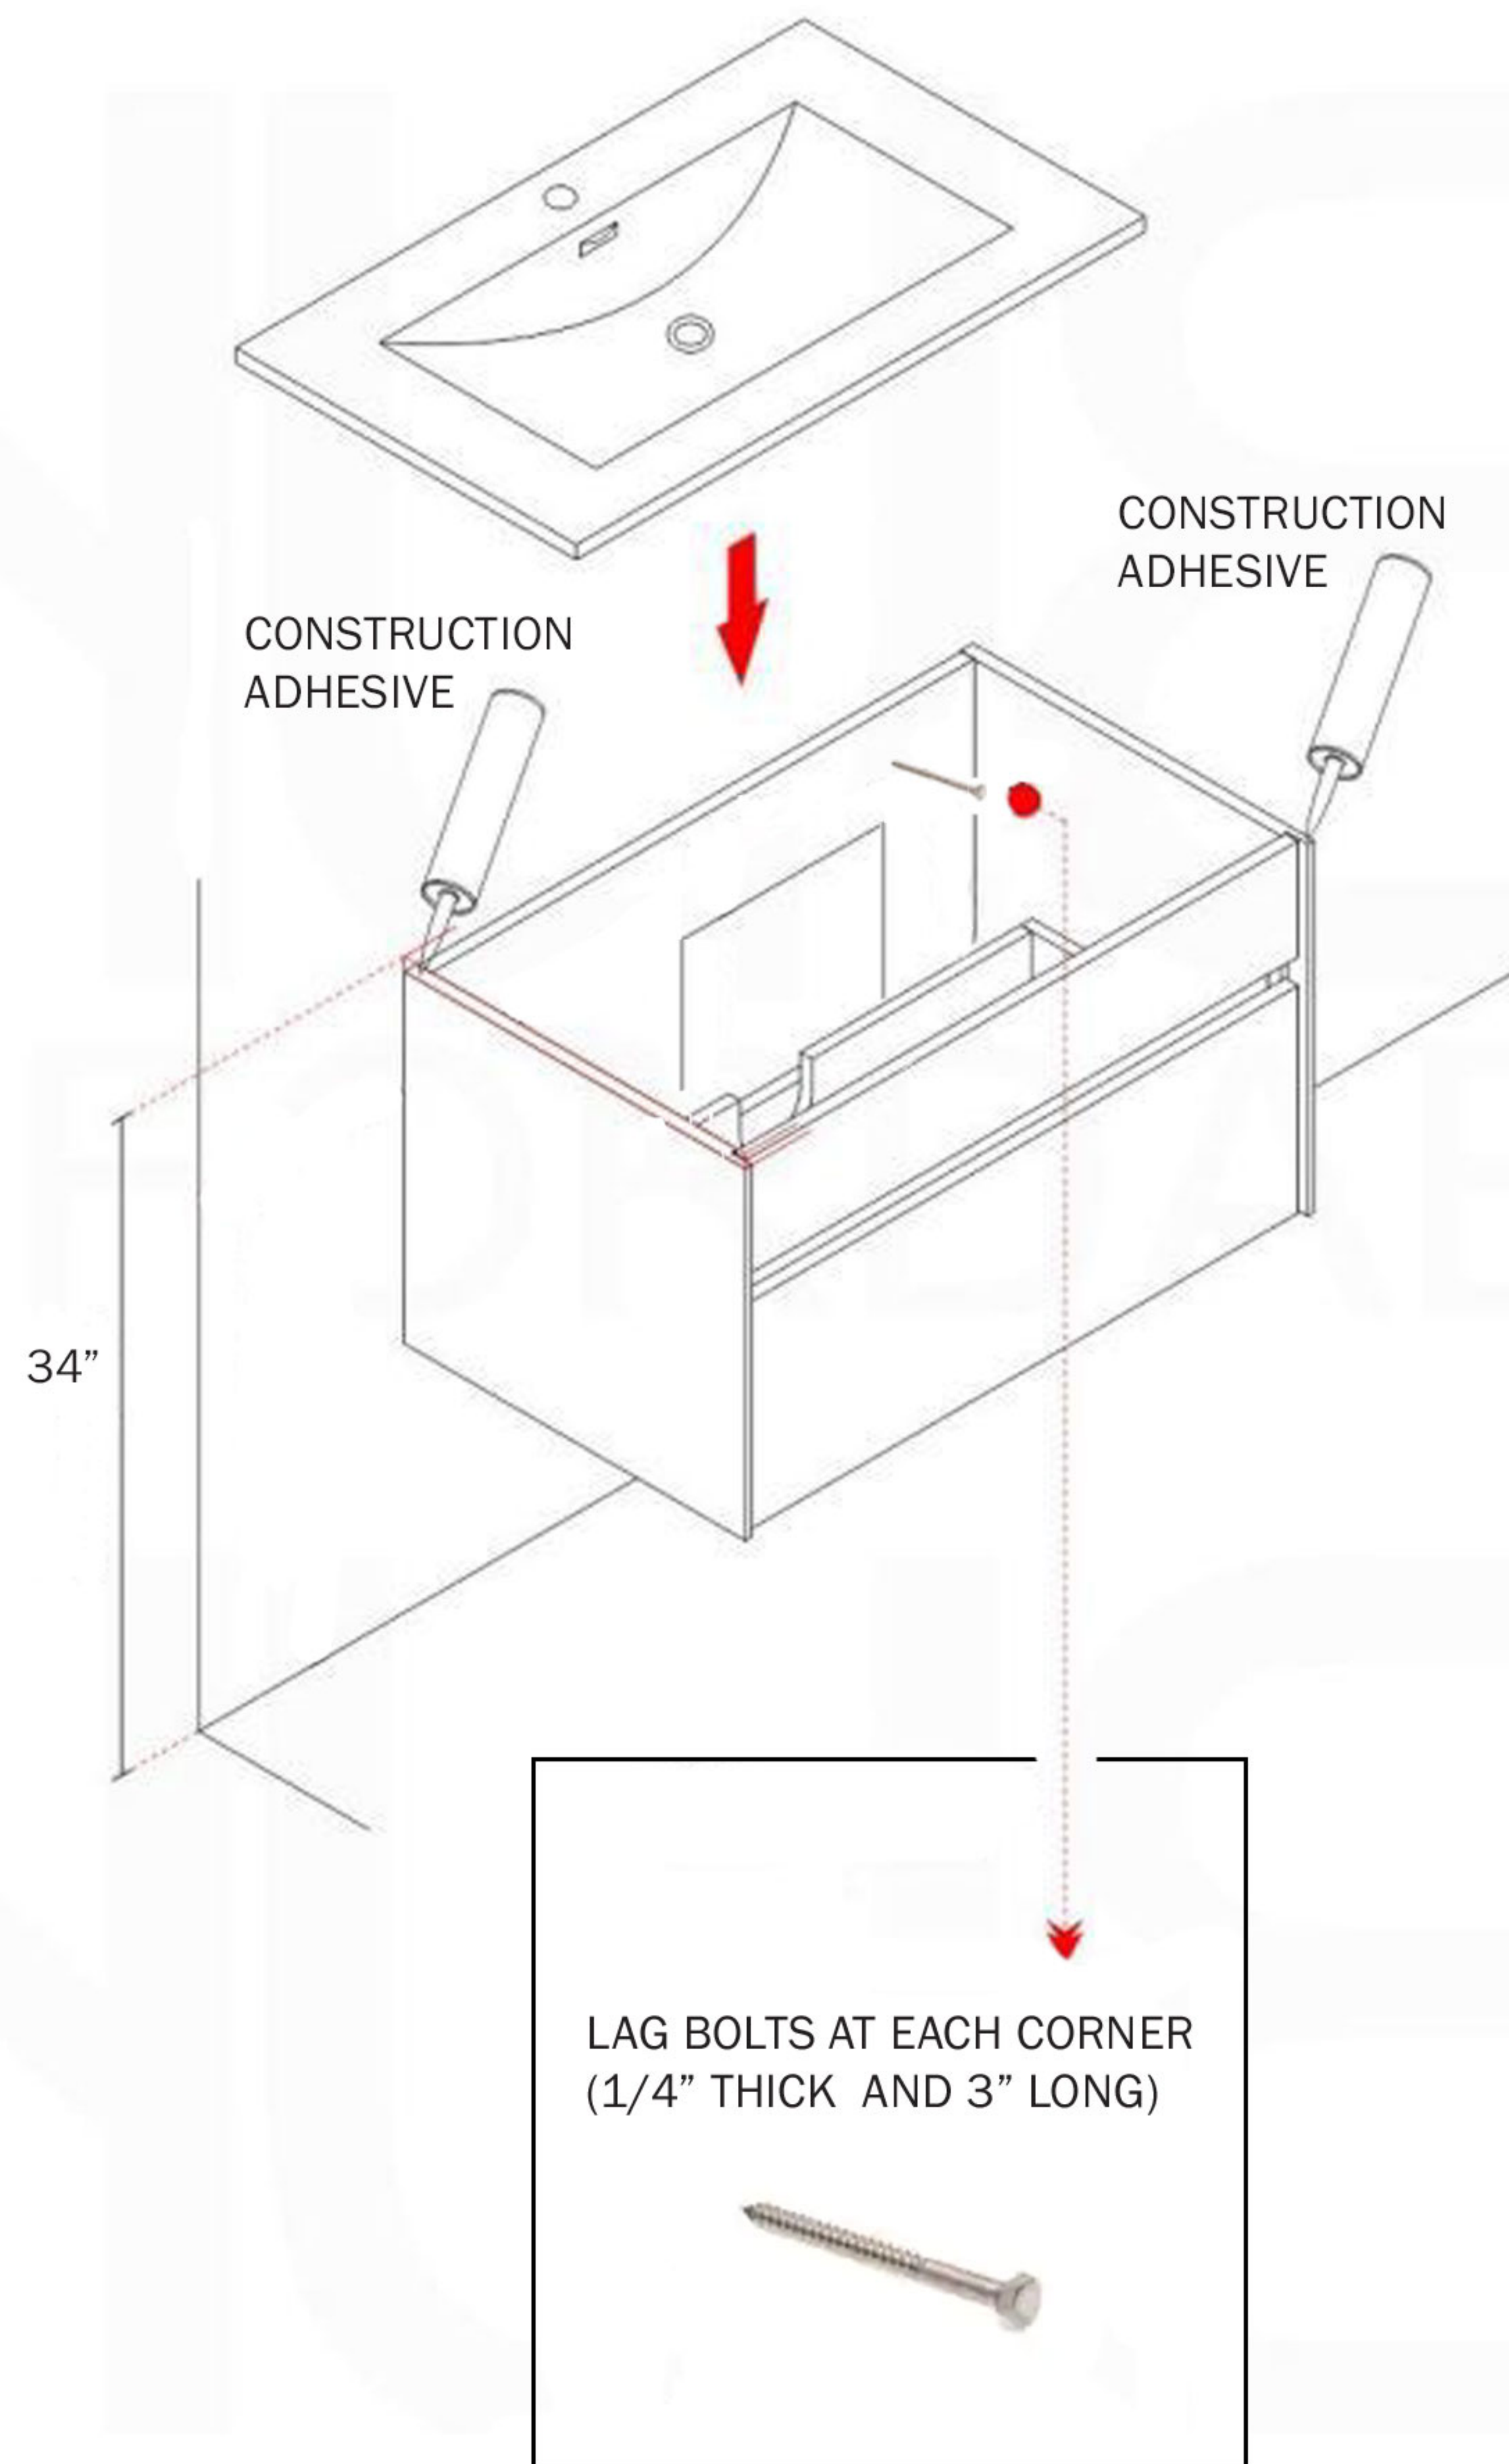

1. OUR VANITY BACKS ARE CONSTRUCTED USING A SOLID 3/4 UV PLYWOOD FOR MAXIMUM STRENGTH WHEN ATTACHED TO WALL STUDS.
2. FLOATING VANITIES MUST USE AT LEAST 4 LAG BOLTS AT EACH CORNER OF THE VANITY AND MOUNTED ON WALL STUDS.
3. DRILL LAG BOLTS THROUGH THE REAR PLYWOOD OF VANITY INTO WALL STUDS. VERIFY THAT THE VANITY IS LEVEL.
4. INSTALL THE SINK/VANITY TOP BY APPLYING CONSTRUCTION ADHESIVE ALONG THE TOP OF THE CABINET.
5. POSITION THE TOP ONTO THE VANITY AND PRESS FIRMLY INTO PLACE. WIPE AWAY ANY EXCESS ADHESIVE.
6. LET THE VANITY SIT FOR 24 HOURS OR UNTIL THE ADHESIVE IS DRY.

NOTE: WE HIGHLY RECOMMEND USING A QUALIFIED, EXPERIENCED CONTRACTOR OR PLUMBER TO INSTALL YOUR VANITY.