


CUTLER


KITCHEN & BATH

MEDICINE CABINET & LINEN TOWER INSTALLATION GUIDE

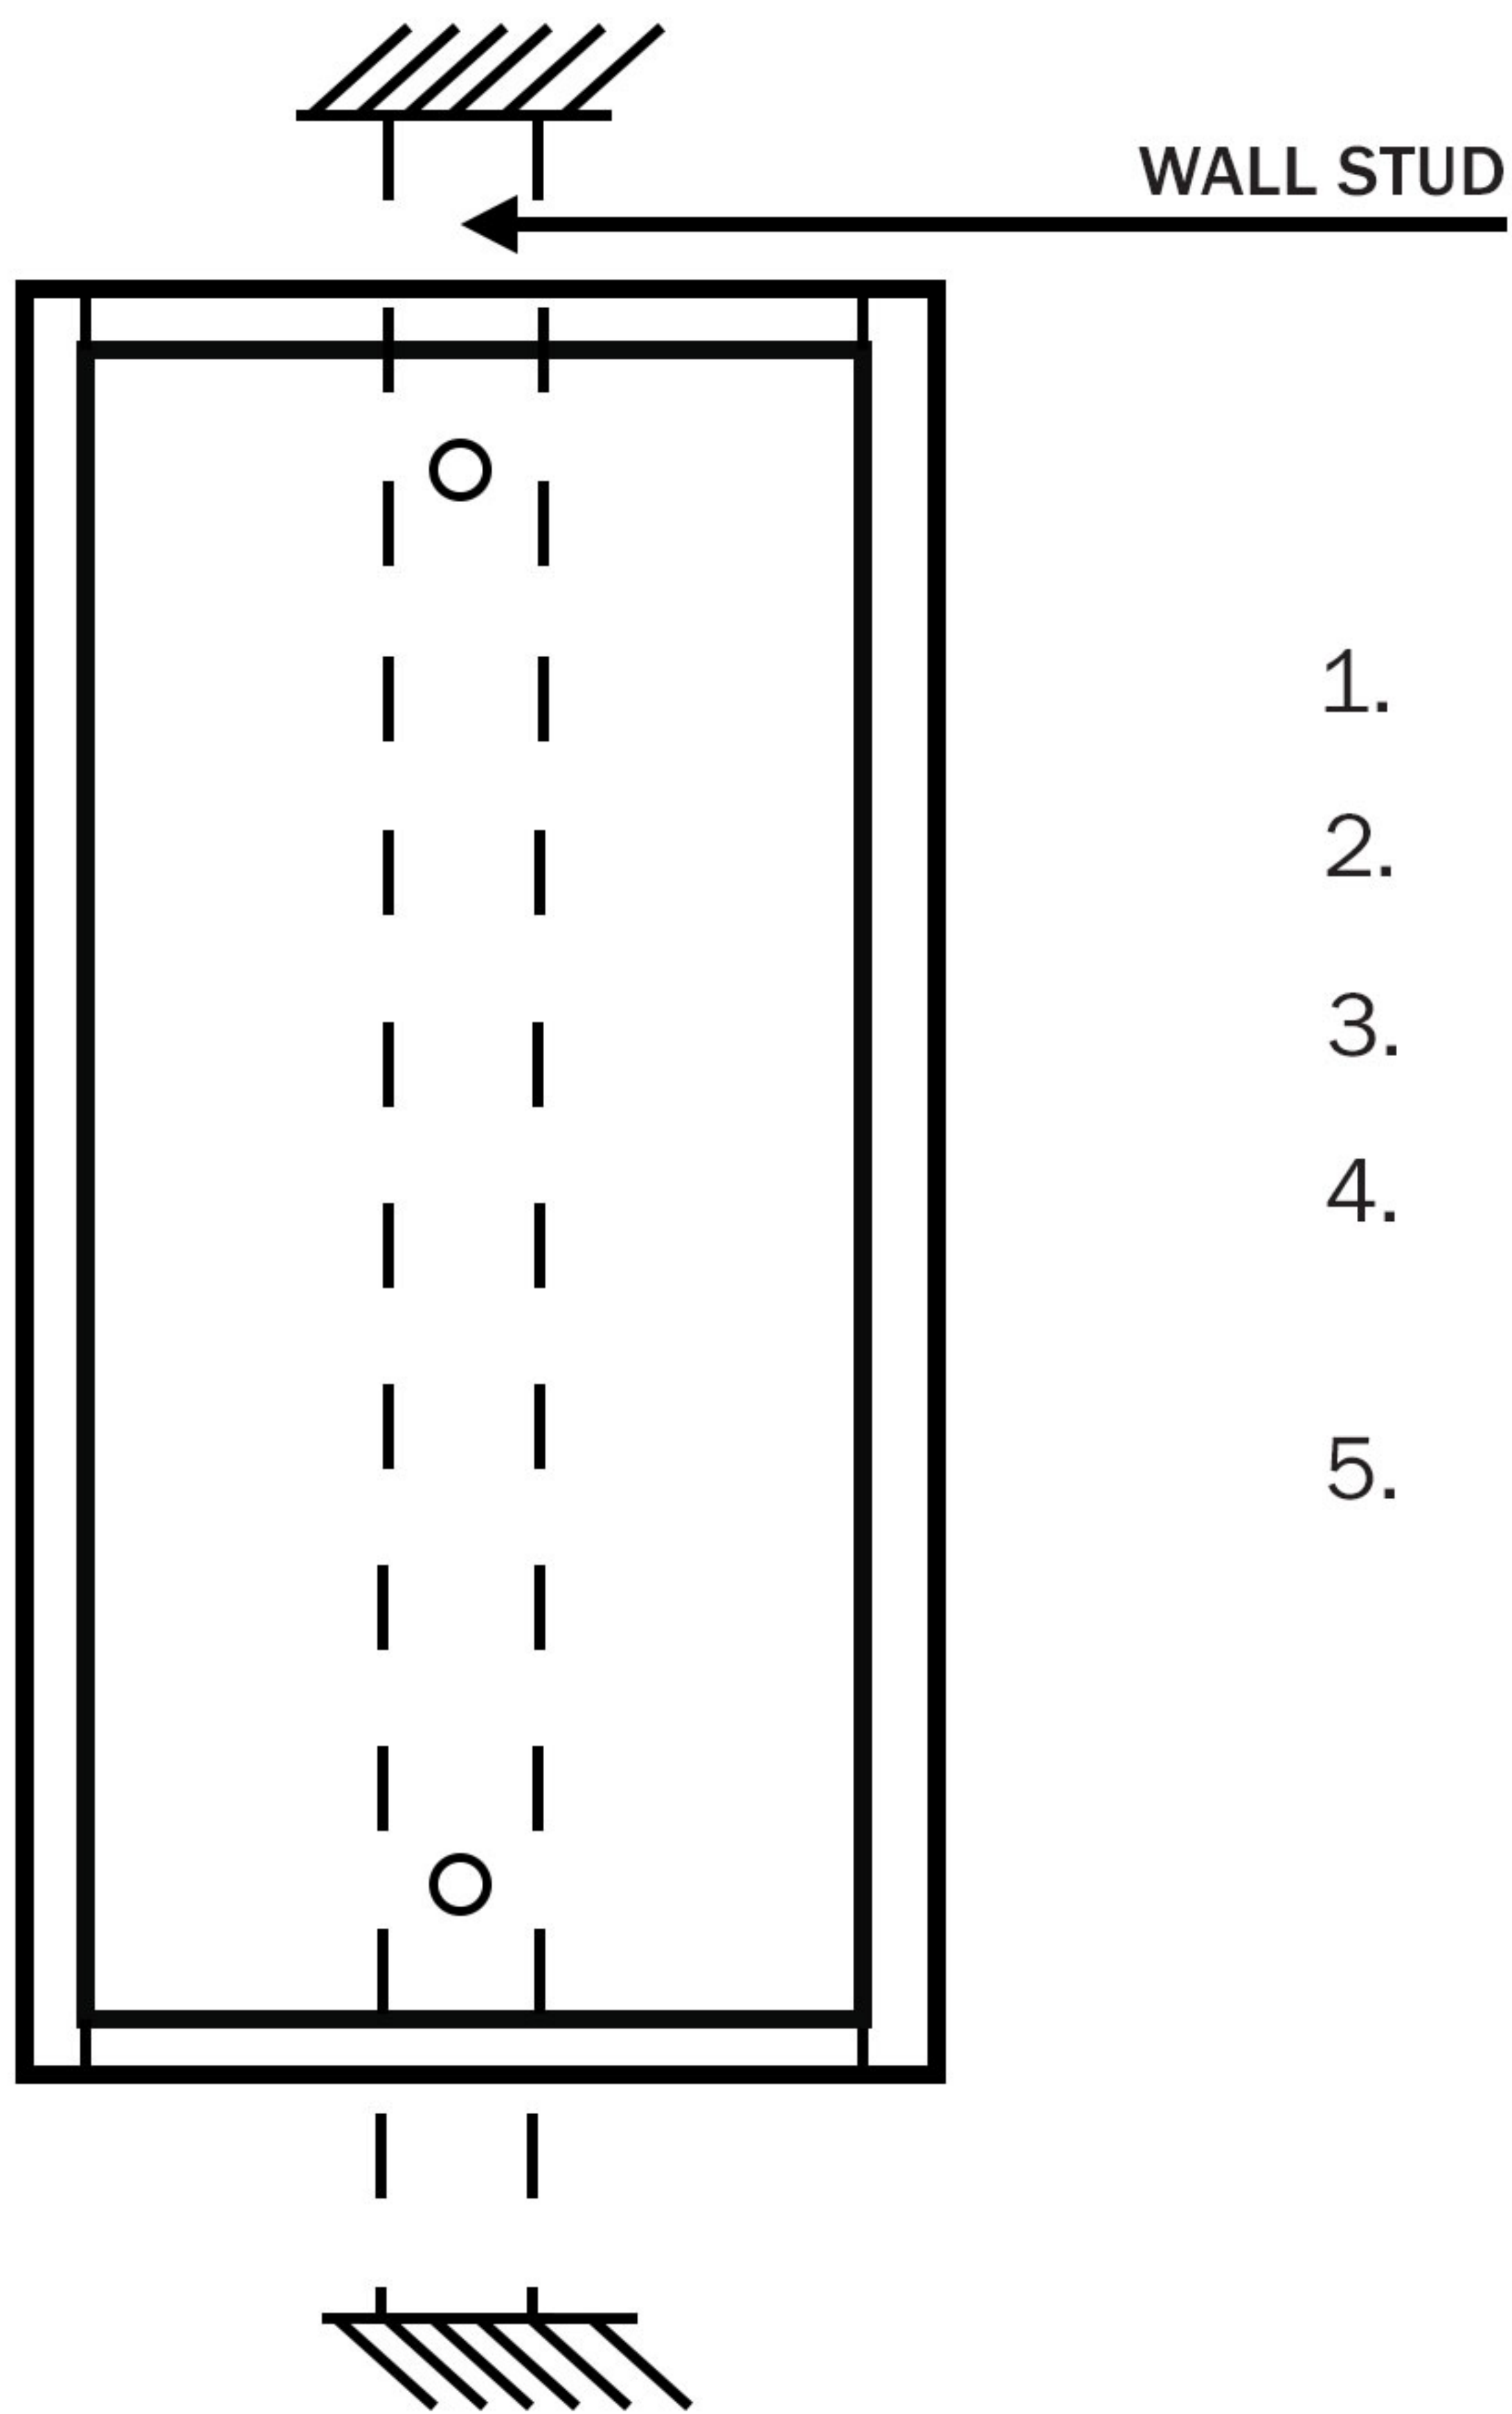

MEDICINE CABINET

1. LOCATE WALL STUD BEHIND DESIRED LOCATION OF CABINET
2. PRE-DRILL 1/8" OR 3MM AT THE TOP AND BOTTOM OF THE CABINET
3. USE TWO 2" OR 2.5" WOOD SCREWS
4. INSTALL TOP SCREW FIRST. MAKE SURE THE CABINET IS LEVEL AND THEN INSTALL BOTTOM SCREW
5. IF NO WALL STUD CAN BE LOCATED BEHIND DESIRED LOCATION OR STUD IS OFF-CENTRE - ADD ADDITIONAL DRYWALL ANCHORS (EXAMPLE: E-Z ANCOR®)

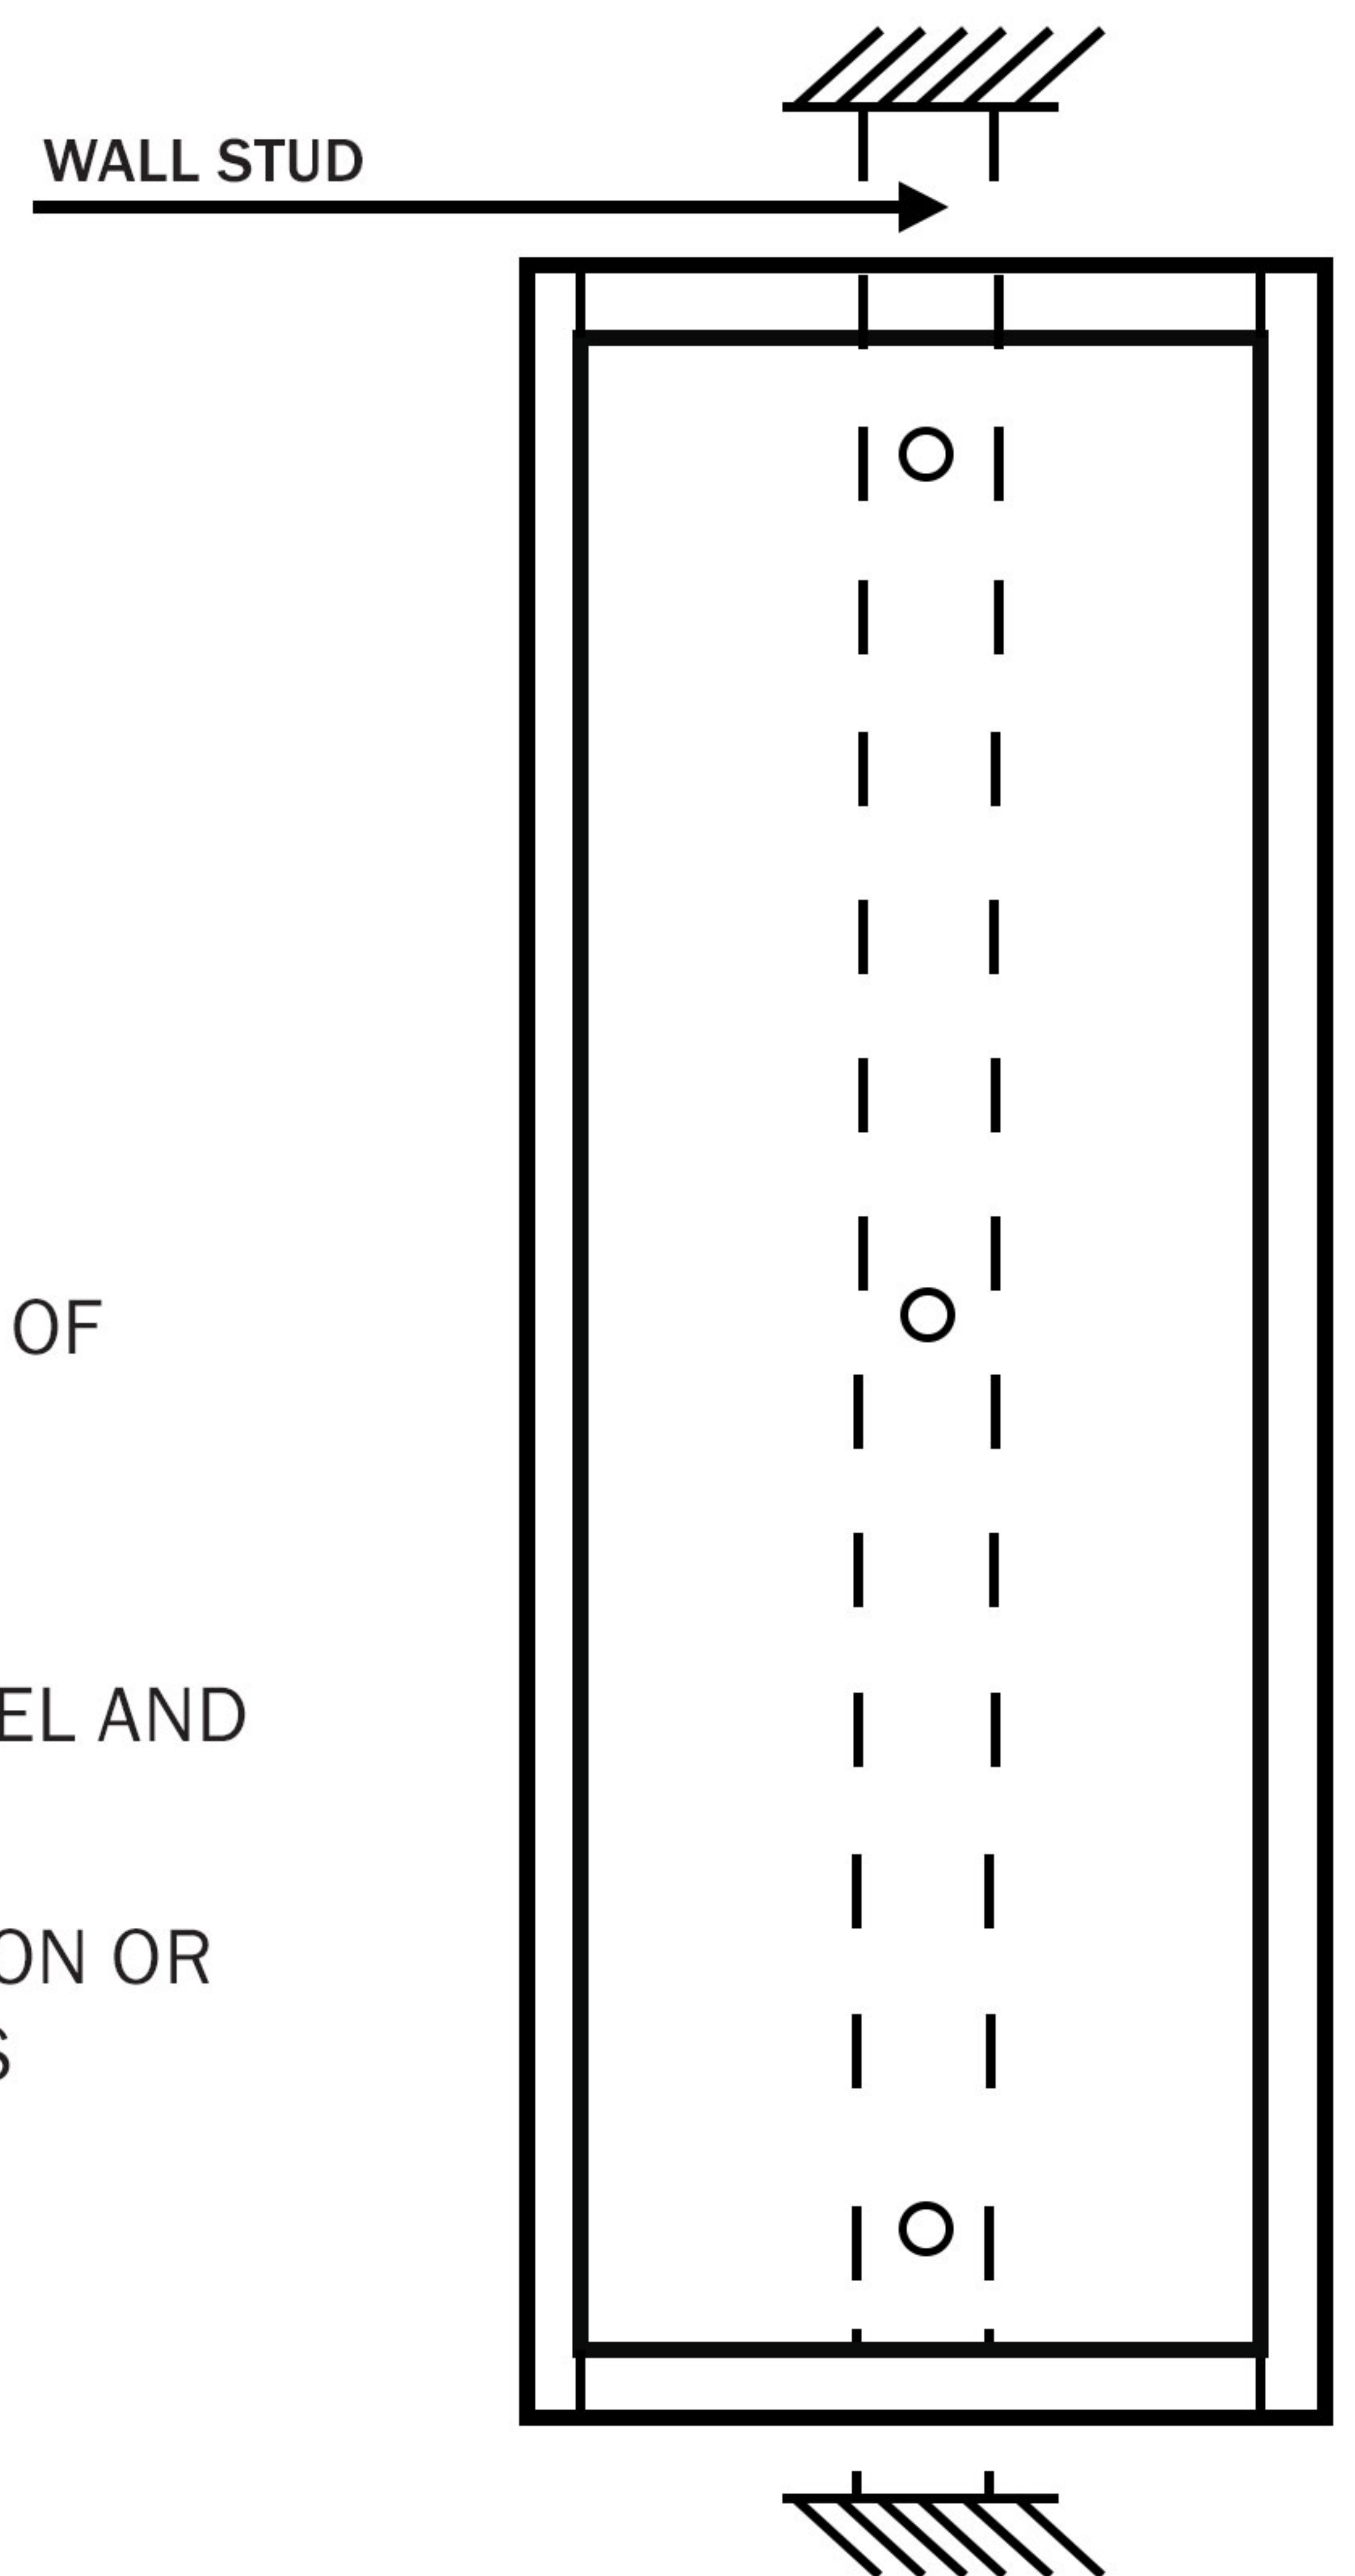

LINEN TOWER

1. LOCATE WALL STUD BEHIND DESIRED LOCATION OF CABINET
2. PRE-DRILL 1/8" OR 3MM AT THE TOP, MIDDLE AND BOTTOM OF THE CABINET
3. USE THREE 2" OR 2.5" WOOD SCREWS
4. INSTALL TOP SCREW FIRST. MAKE SURE THE CABINET IS LEVEL AND THEN INSTALL OTHER SCREWS
5. IF NO WALL STUD CAN BE LOCATED BEHIND DESIRED LOCATION OR STUD IS OFF-CENTRE - ADD ADDITIONAL DRYWALL ANCHORS (EXAMPLE: E-Z ANCOR®)