

Size: 1600mm

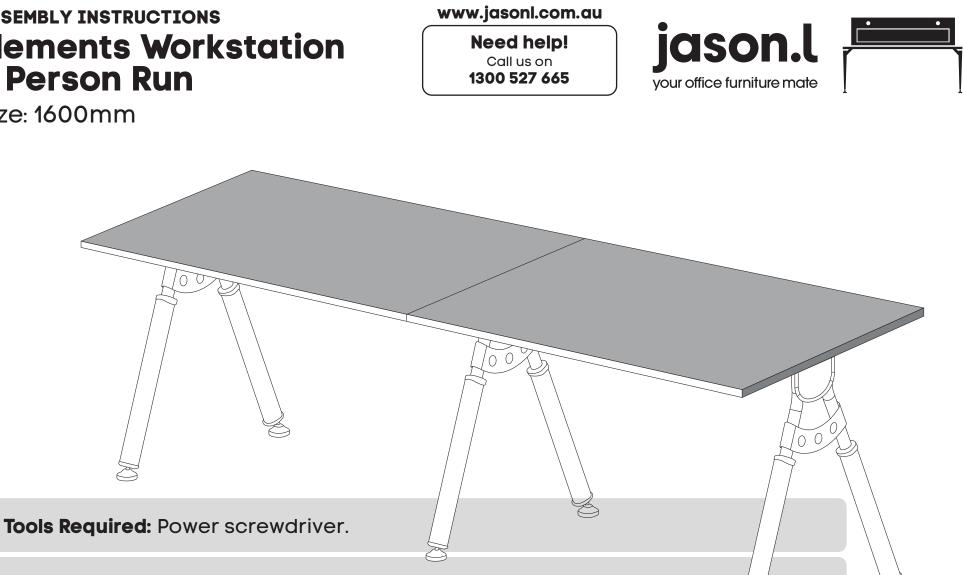

Special Note: No pre-drilled holes or nut inserts are provided. Wood screws will be required to be drilled directly into underside of desk top.

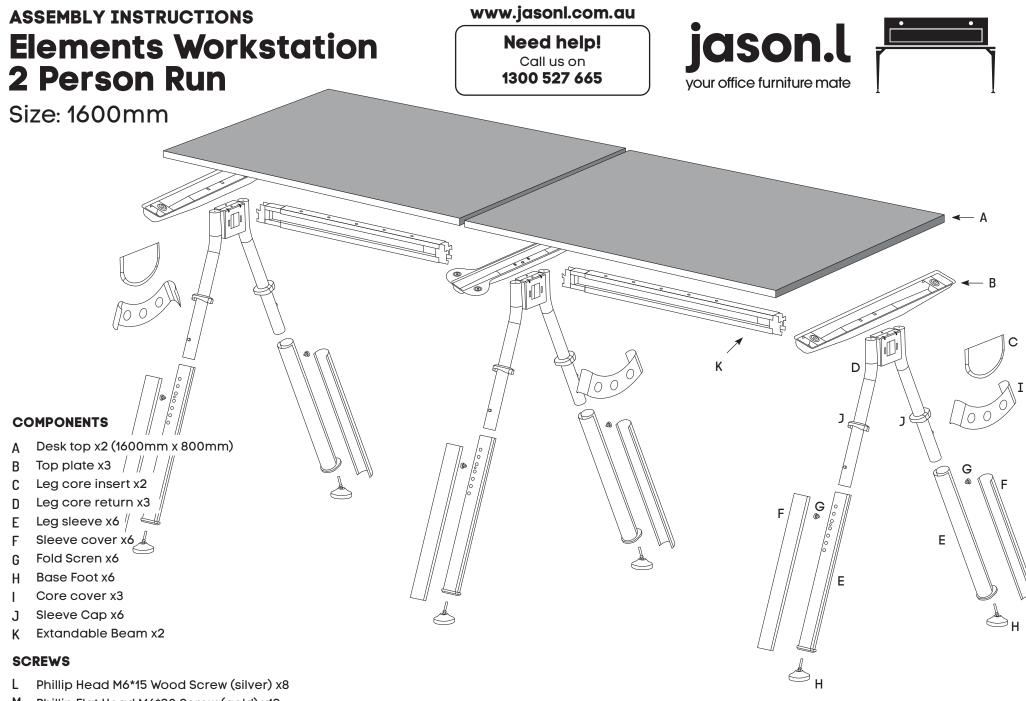

Size: 1600mm

01

- Unwrap all leg components.
- Remove sleeve cap (J) and sleeve cover (F) from all leg sleeves.
- Insert base foot (H) into leg sleeve (E) by rotating base foot (H) clockwise.
- Insert sleeve cap (J) onto leg core (D) for all legs.
- Insert leg sleeve (E) onto leg core (D) for all legs. TIP: Keep height adjustment holes pointing outwards.


F

- Place leg core insert (C) onto leg core (D) for all legs.
- Place core cover (I) onto leg core (D) for all legs.
- Place sleeve cover (F) over leg sleeve (E) for all legs.


www.jasonl.com.au

Need help! Call us on 1300 527 665




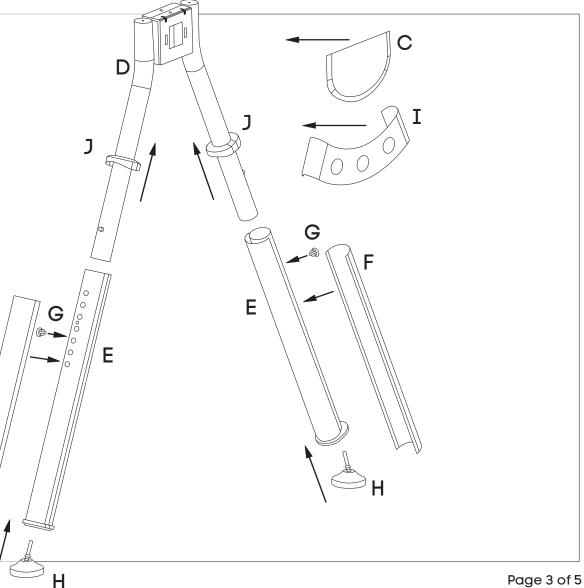


Size: 1600mm

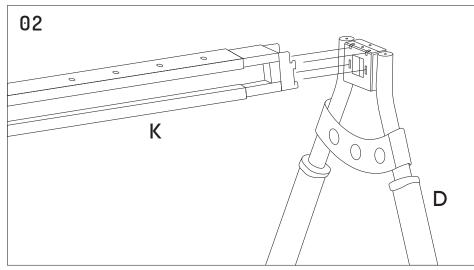

Connect extendable Beam (K) to Leg Core (D)

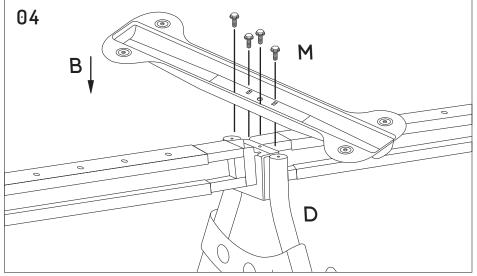

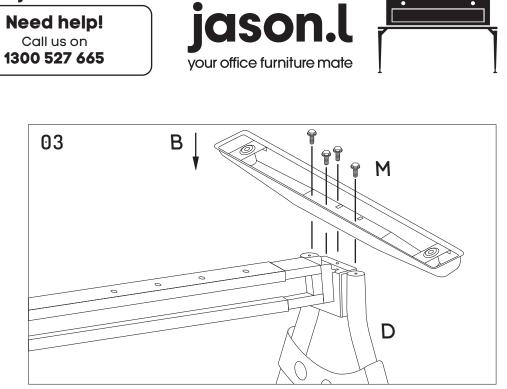

www.jasonl.com.au

Tighten Top Plates (B) to outer legs core (D) by tightening Screw (M).

Tighten Top Plate (B) to middle leg core (D) by tightening Screw (M).


www.jasonl.com.au


Need help! Call us on

1300 527 665



Size: 1600mm

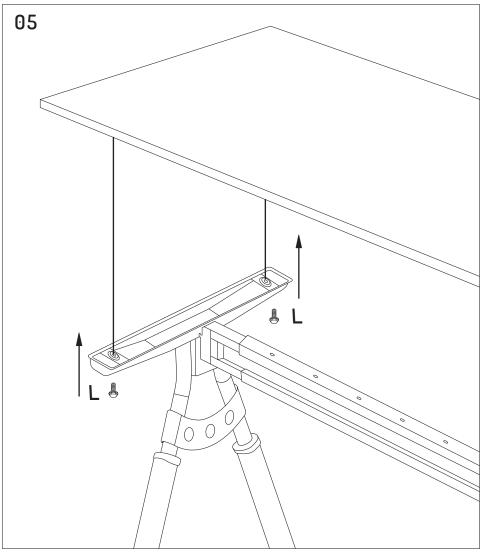

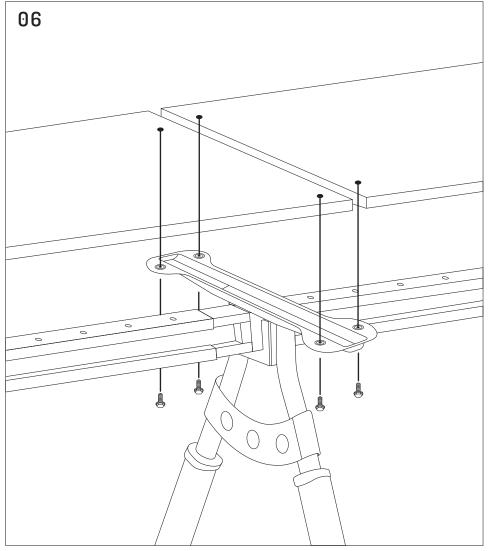

Attach middle leg to Desk Tops by tightening Scews (L).

Attach outsider legs + beam to Desk Tops by tightening Scews (L).