

ASSEMBLY INSTRUCTIONS

Horizon Workstation 3 Person Run


Size: 1600mm

www.jasonl.com.au

Need help!


Call us on
1300 527 665

jason.l
your office furniture mate

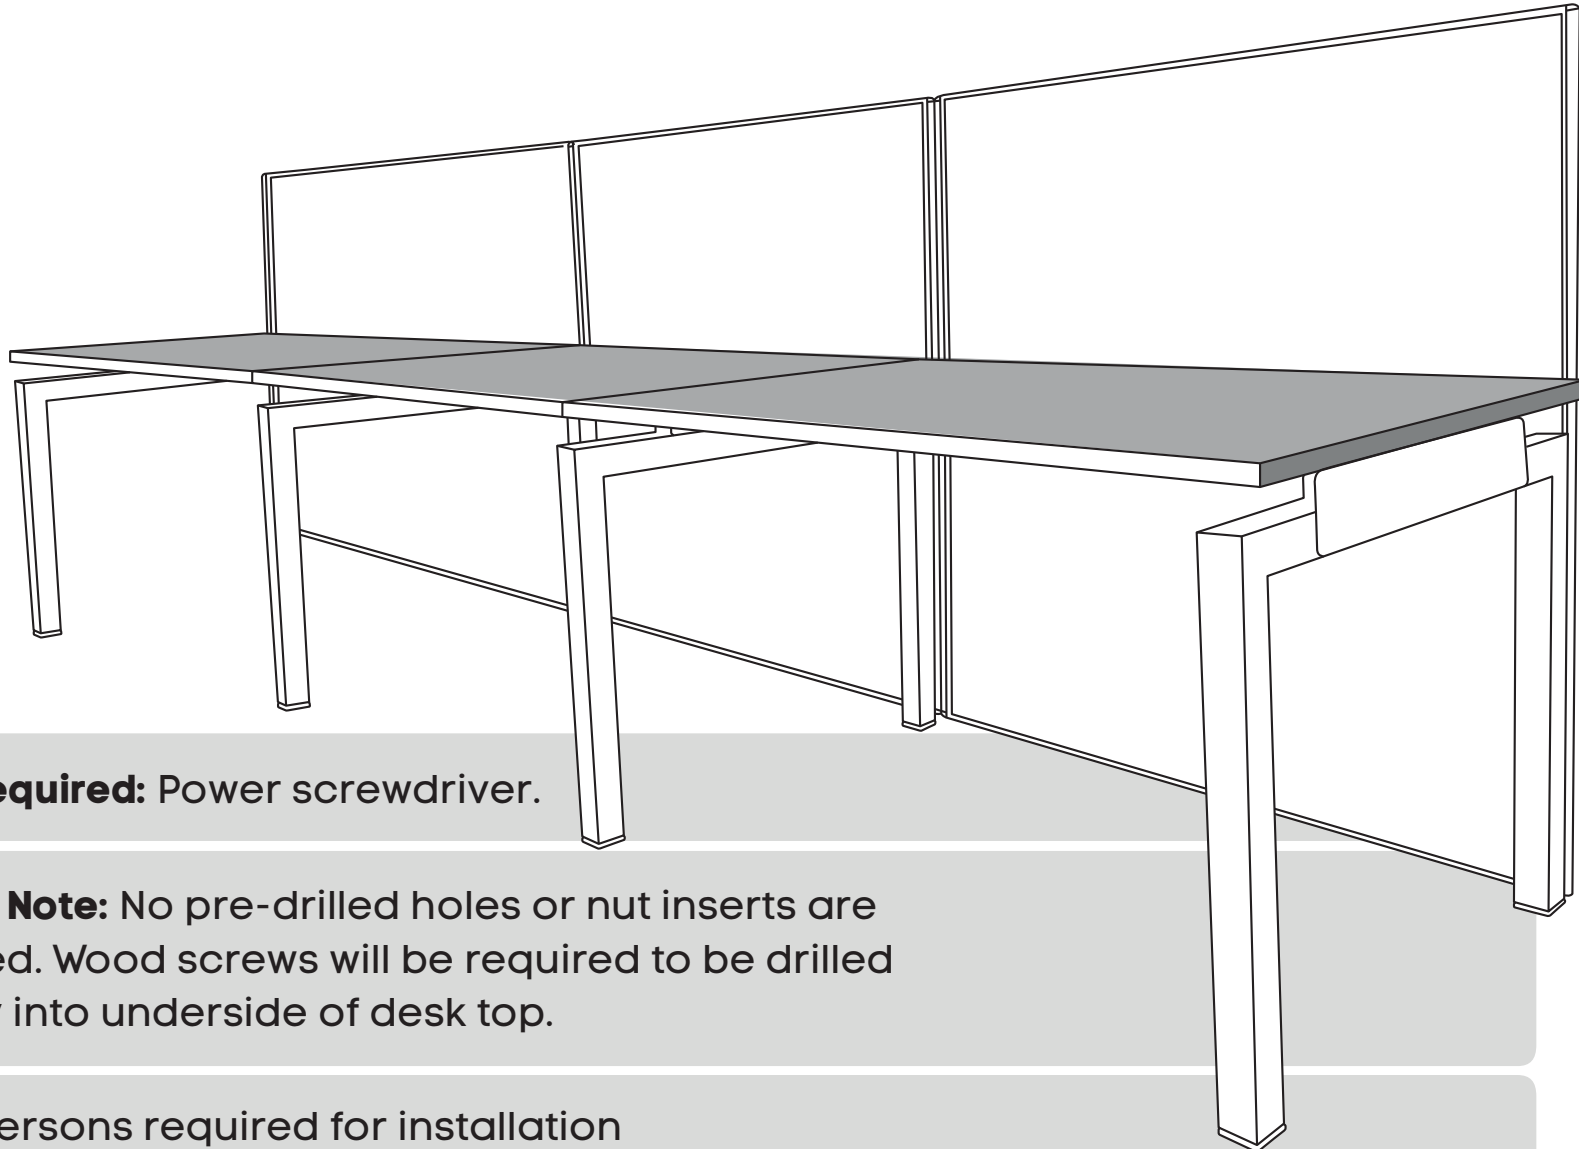

Tools Required: Power screwdriver.

Special Note: No pre-drilled holes or nut inserts are provided. Wood screws will be required to be drilled directly into underside of desk top.

 2 persons required for installation

ASSEMBLY INSTRUCTIONS

Horizon Workstation 3 Person Run


Size: 1600mm

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

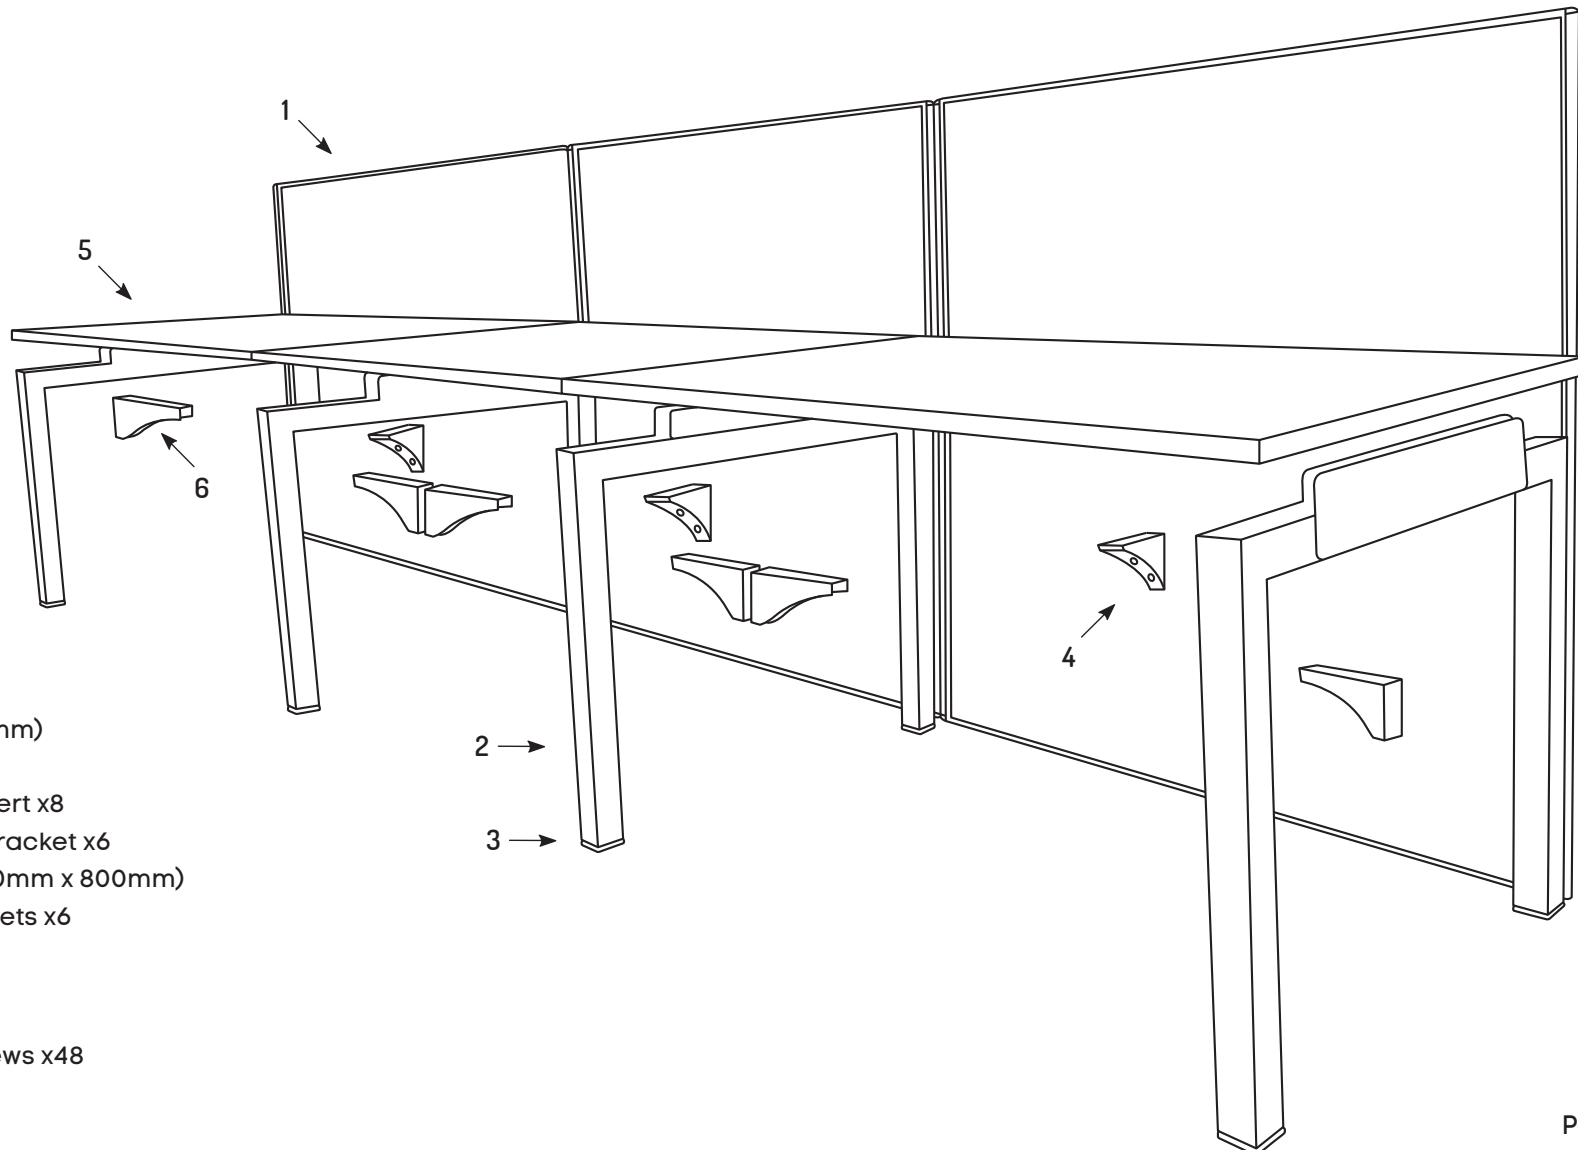

COMPONENTS

- 1 Screen x3 (1600mm)
- 2 Desk legs x4
- 3 Desk leg foot insert x8
- 4 L-Shaped post bracket x6
- 5 Desk top x3 (1600mm x 800mm)
- 6 Cantilever brackets x6

SCREWS

- 7 25mm Woodscrews x48

ASSEMBLY INSTRUCTIONS

Horizon Workstation 3 Person Run


Size: 1600mm

www.jasonl.com.au


Need help!

Call us on
1300 527 665


jason.l
your office furniture mate

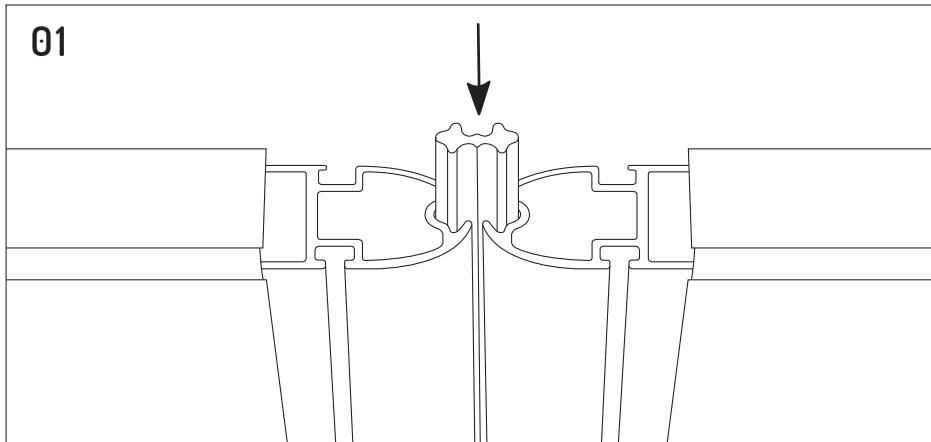


Using an Allen key remove top 2 caps from all screens uprights. Bring two partition towards one another and slide the 2 way connector rod - down between the two screen uprights.

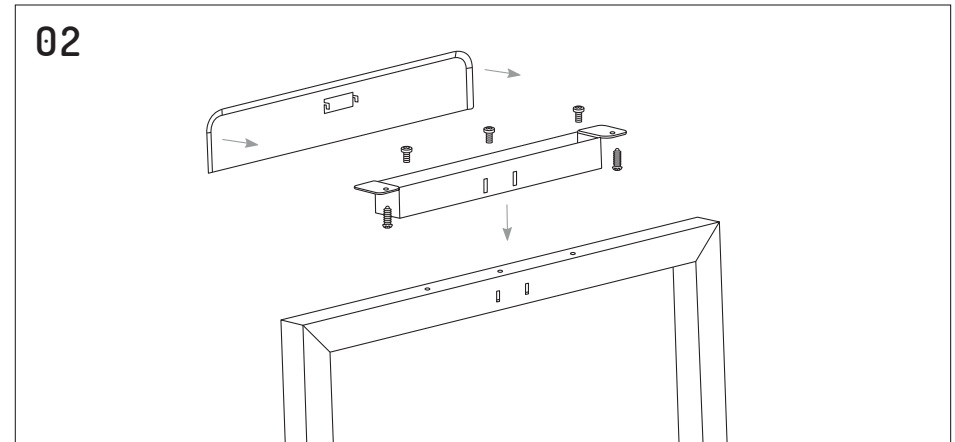

Attach the top plates to the legs.

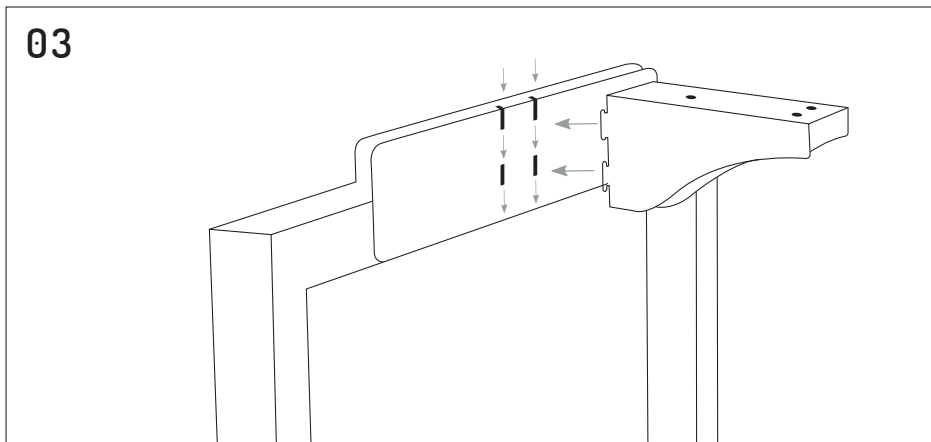

Build the 2 outside legs with 1 cantilever bracket attached to each leg.

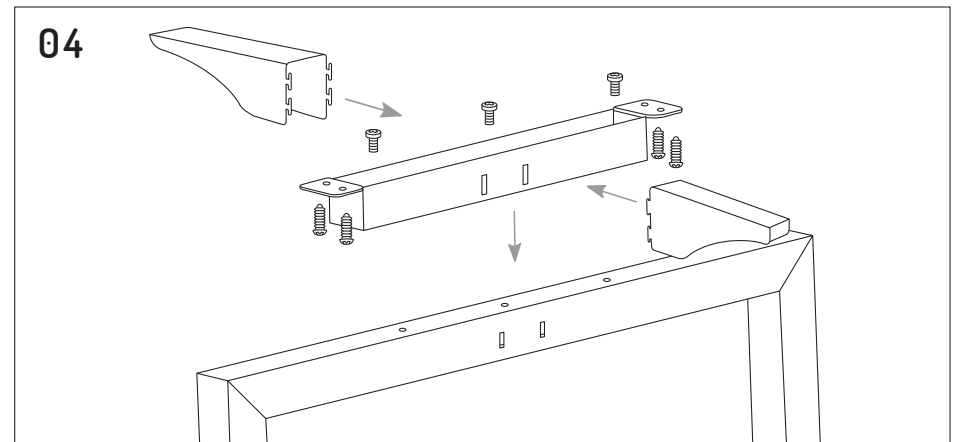

Build the centre legs with 2 cantilever brackets attached to each leg (for 2 person run or more).

ASSEMBLY INSTRUCTIONS

Horizon Workstation 3 Person Run


Size: 1600mm

www.jasonl.com.au


Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

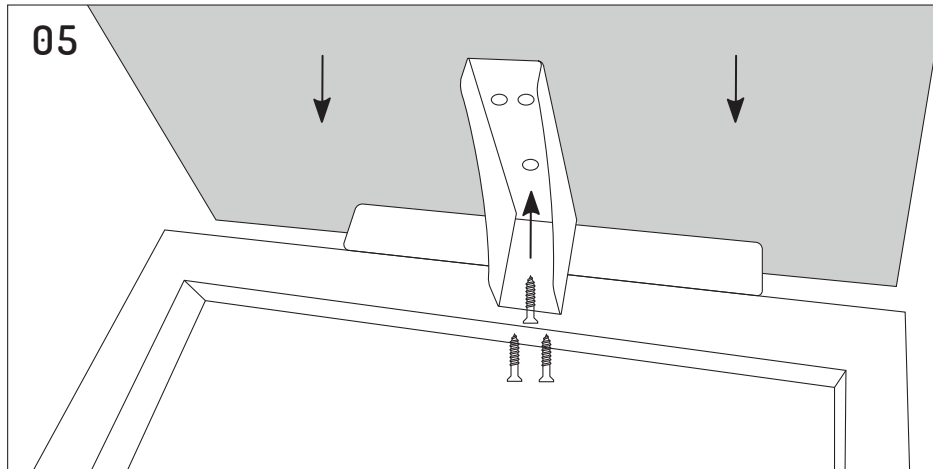

Attach desktops to the legs.

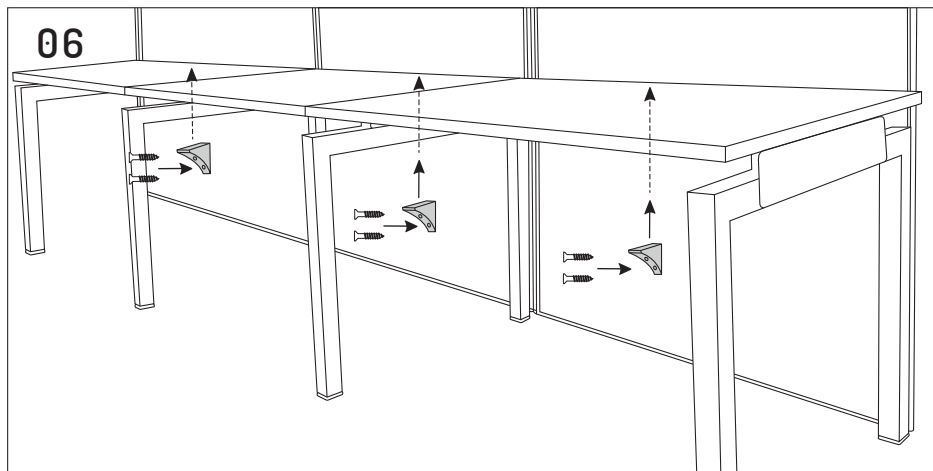

Use I-shaped panel bracket to secure the screen to the desktop by placing the bracket in the middle of the screen and under the desktop.

