Elements 6 Person Workstation

Size: 1200mm


www.jasonl.com.au

Need help!

Call us on 1300 527 665





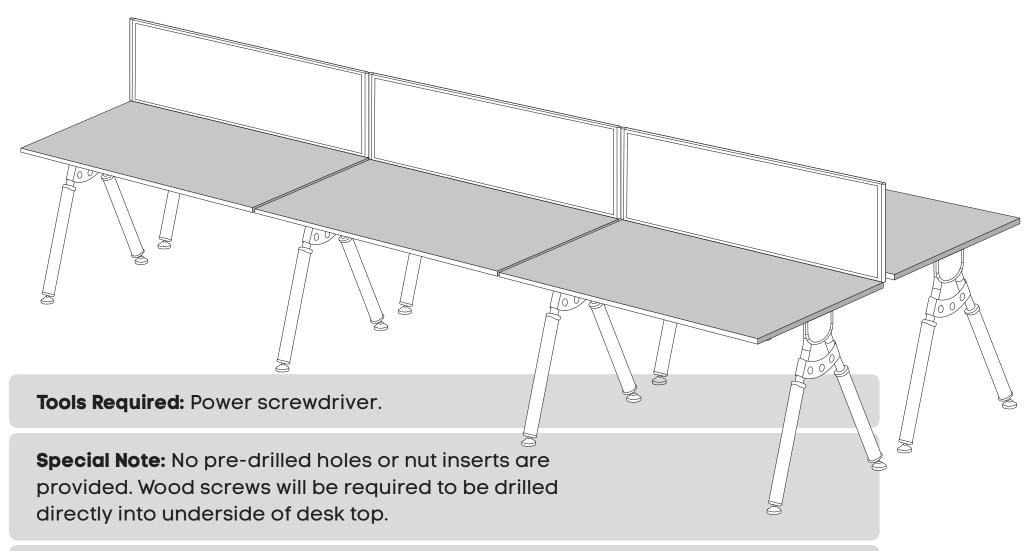

Elements 6 Person Workstation

Size: 1200mm

G Fold Scren x16

N 2 way screen connector x2

www.jasonl.com.au


Need help!

Call us on **1300 527 665**





Page 2 of 6

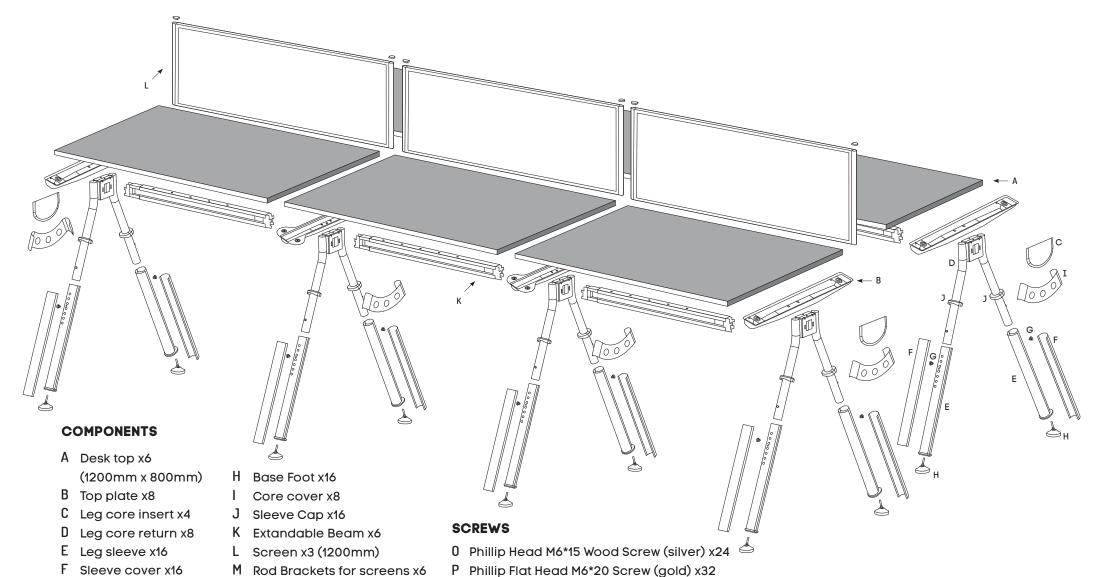

Q H6x30 x24

Elements 6 Person Workstation

Size: 1200mm

www.jasonl.com.au

Need help!


Call us on **1300 527 665**





01

- Unwrap all leg components.
- Remove sleeve cap (J) and sleeve cover (F) from all leg sleeves.
- Insert base foot (H) into leg sleeve (E) by rotating base foot (H) clockwise.
- Insert sleeve cap (J) onto leg core (D) for all legs.
- Insert leg sleeve (E) onto leg core (D) for all legs. TIP: Keep height adjustment holes pointing outwards.
- Place leg core insert (C) onto leg core
 (D) for all legs.
- Place core cover (I) onto leg core (D) for all legs.
- Place sleeve cover (F) over leg sleeve
 (E) for all legs.

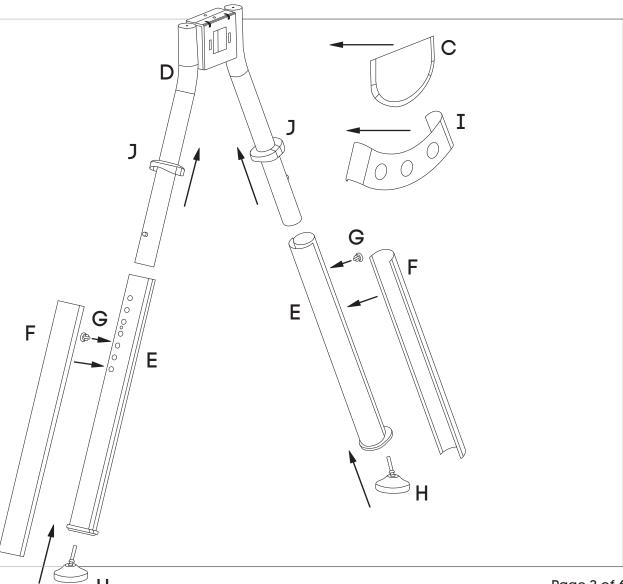

Elements 6 Person Workstation

Size: 1200mm


www.jasonl.com.au


Need help!

Call us on 1300 527 665





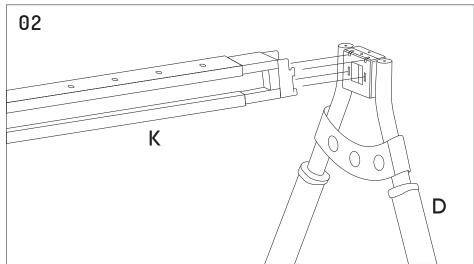

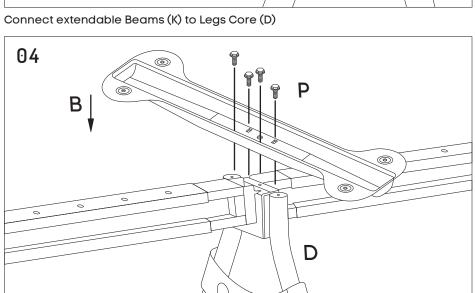

03 D

Tighten Top Plates (B) to outer legs core (D) by tightening Screw (P).

Tighten Top Plates (B) to middle legs core (D) by tightening Screw (P).

Elements 6 Person Workstation


Size: 1200mm


www.jasonl.com.au


Need help!

Call us on **1300 527 665**





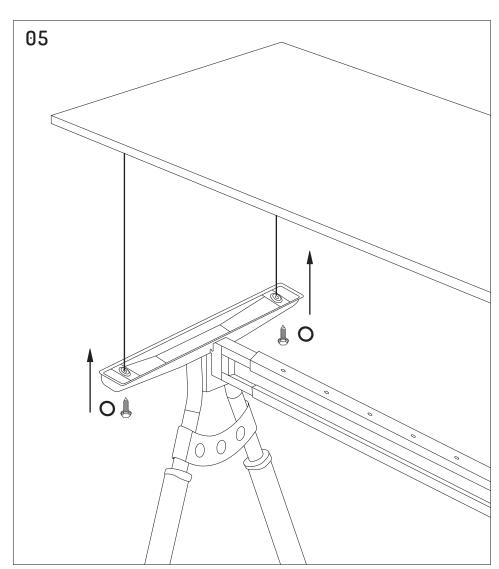

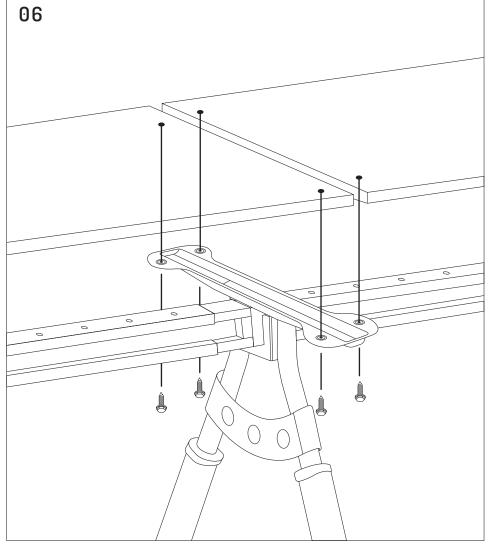

Attach outsider legs + beam to Desk Tops by tightening Scews (O).

Attach middle leg to Desk Tops by tightening Scews (O).

Elements 6 Person Workstation

Size: 1200mm


www.jasonl.com.au

Need help!


Call us on **1300 527 665**





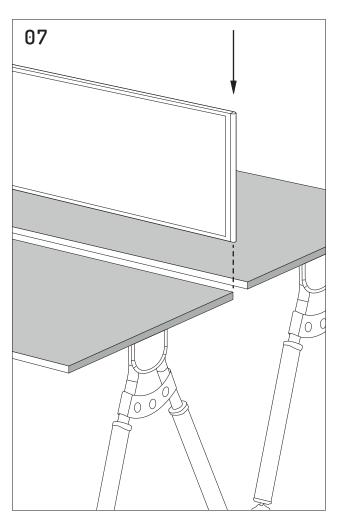

Place screens (L) in the gap, aligned with desk tops (A).

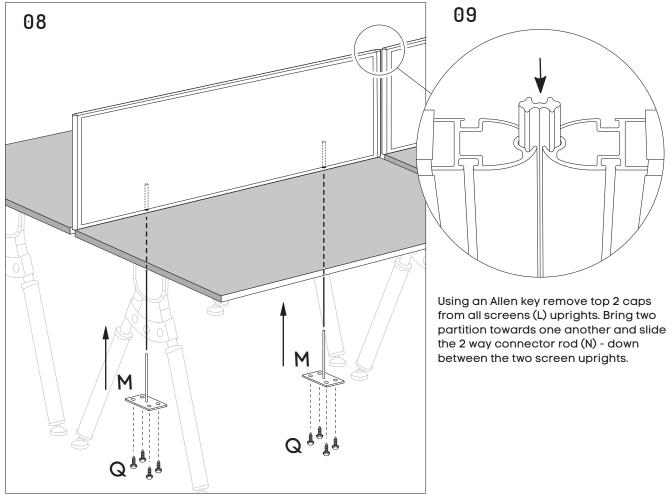

Place 10mm Rod Brackets (M) into designated screen holes. Drill desk tops (A) with H6x30 screws (Q) to assemble the screens.