

www.jasonl.com.au **INSTALLATION GUIDE** jason.l **Switch System Need help!** Call us on **Counter Table** 1300 527 665 your office furniture mate Size: 1600x800mm Tools Required: Power screwdriver. Note: Please ignore any pre-drilled holes or nut inserts that maybe present in your top(s). They will not match your particular table/desk base and woods screws will be required to be screwed directly into the underside of the top.

Note: It is important to fully tighten all bolts and screws before attaching the top(s) so that the frame is sufficiently rigid. Failure to do this may affect stability once the tops are attached.

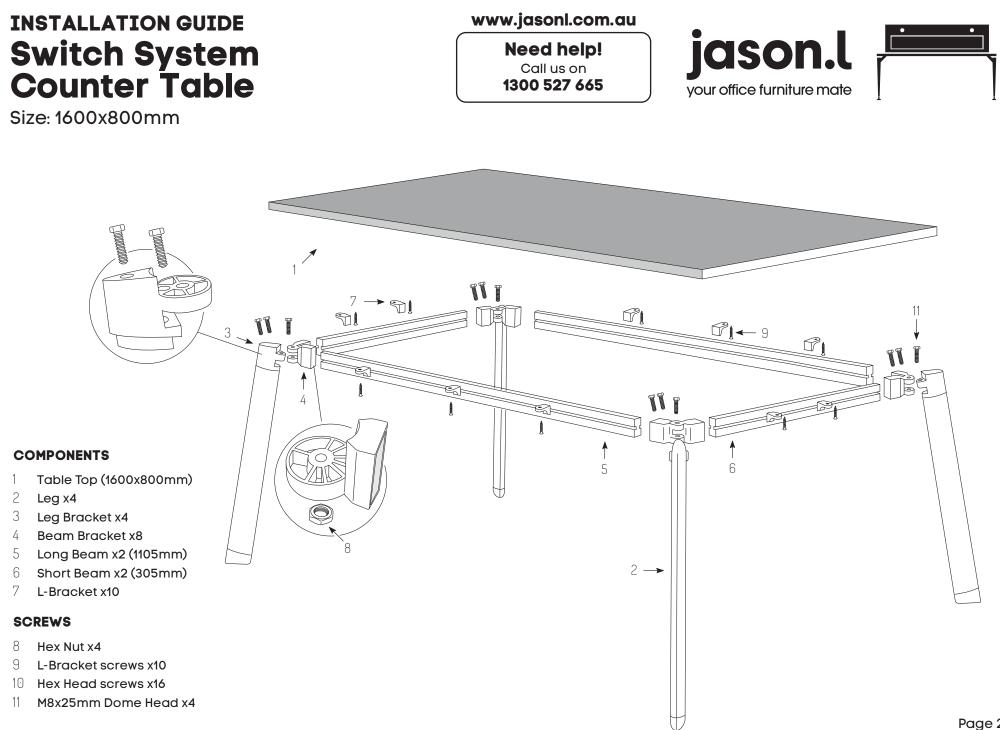


INSTALLATION GUIDE Switch System Counter Table

Size: 1600x800mm

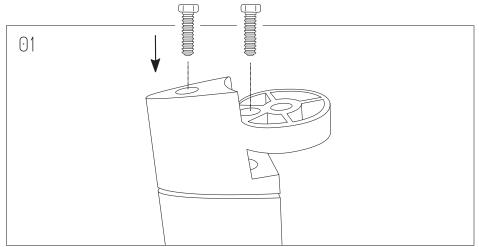


Join Leg Brackets to each Leg using screws to secure them, as follow.

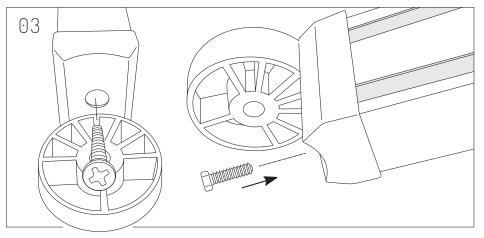


Securely connect each Beam to each Beam Bracket. Screw to secure.



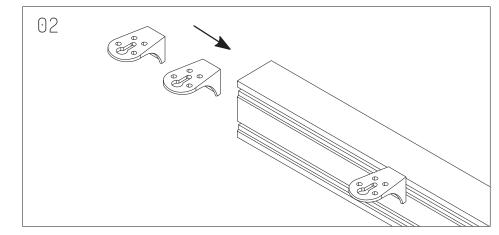


Join 3 L-Bracket through each Long Beam and 2 L-Bracket through each Short Beam.

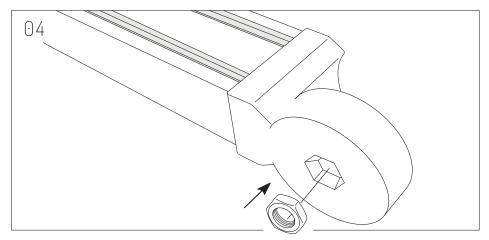


Insert Hex Nut on each Beam Bracket.

INSTALLATION GUIDE Switch System Counter Table

Size: 1600x800mm

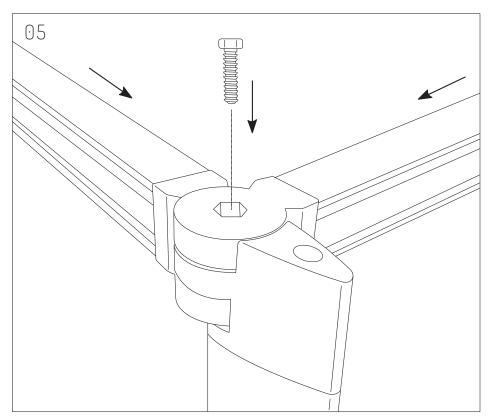

Position as presented, and proceed to screw to ensure each corner of the frame.

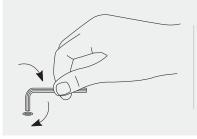

If this bolt does not drop into the joint use the Allen key to screw it all the way in so that it creates its own thread. This will ensure a nice, tight joint. **Note:** It is important to fully tighten all bolts and screws before attaching the top(s) so that the frame is sufficiently rigid. Failure to do this may affect stability once the tops are attached.


jason.l

your office furniture mate

www.jasonl.com.au

Need help! Call us on

1300 527 665

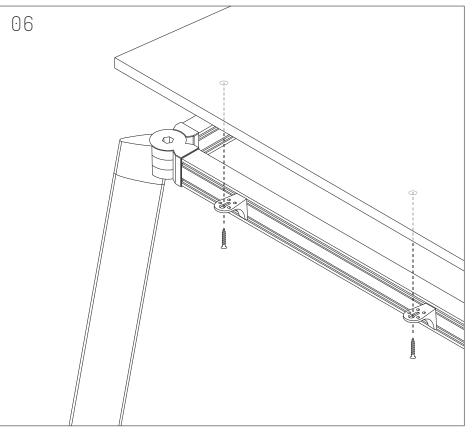

Directly screw into table tops, using L-Bracket screws through each L-Bracket.