
Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

### www.jasonl.com.au

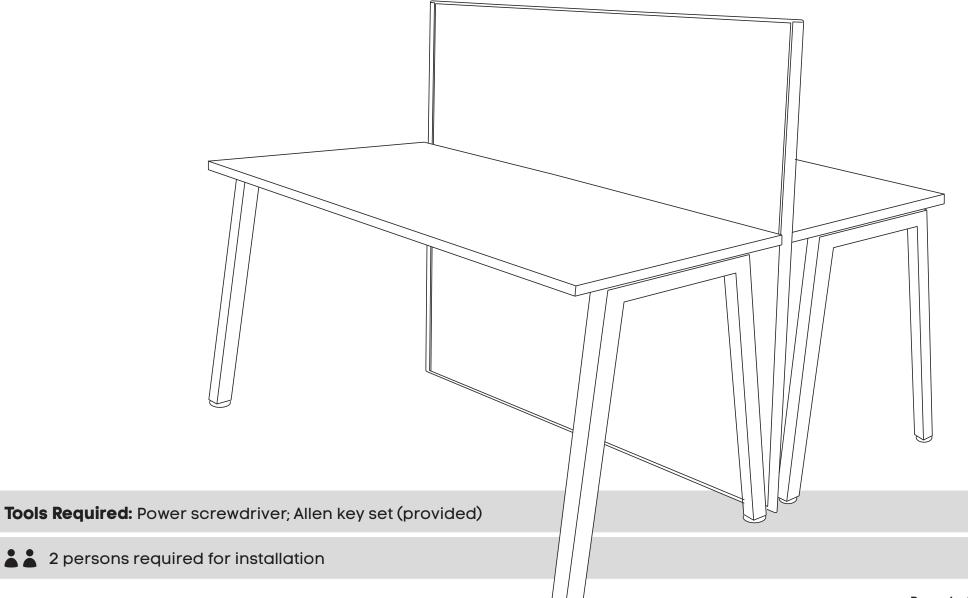






Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

### www.jasonl.com.au

### **Need help!** Call us on **1300 527 665**



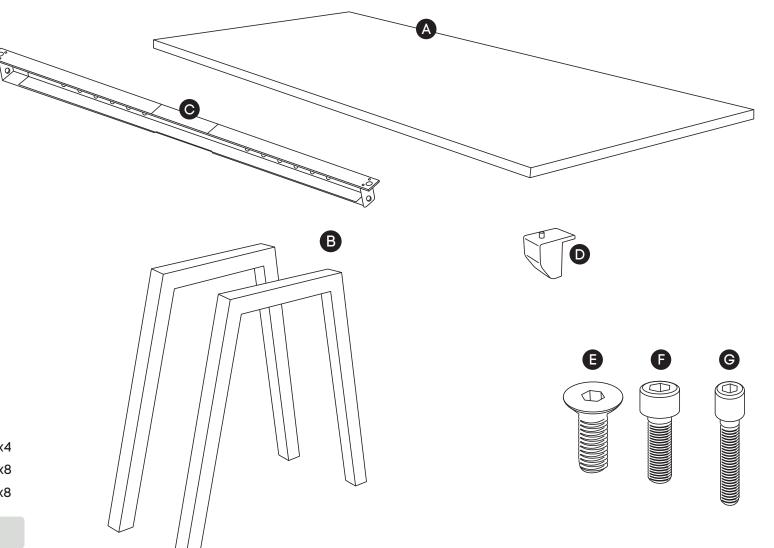

#### COMPONENTS

- A Table top x2
- B Leg Quadro A x4
- C Beam x2
- D Plastic bracket x8

#### SCREWS

- E M8x20MM CSK x4
- F M8x20MM Socket head x4
- G M6x20MM Socket head x8
- H M6x30MM Socket head x8


Ð

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm


### www.jasonl.com.au






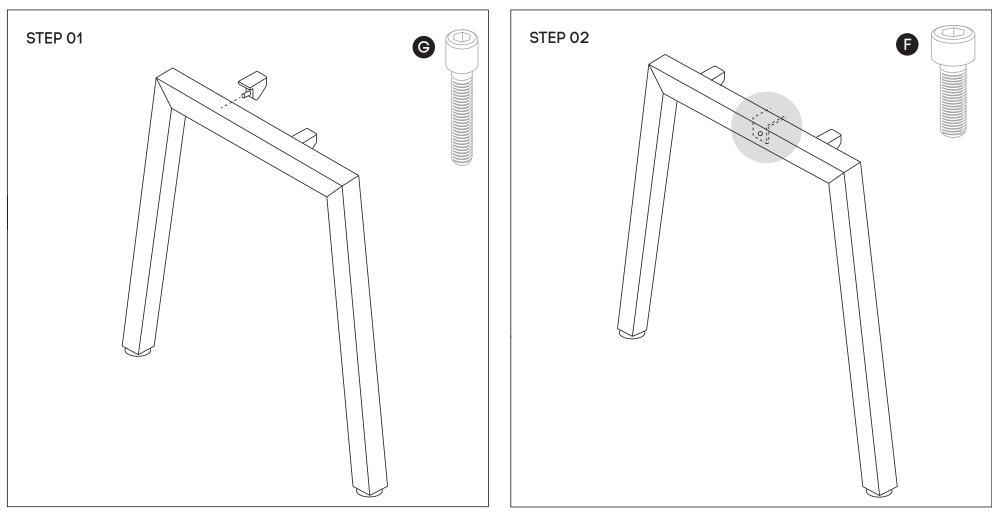


Using Allen Key provided, attach 2 plastic brackets per leg **(D)** (as per picture above) using M6x20MM **(G)** Socket head screw. Using Allen Key provided, attach M8x20MM Socket head (F)screw socket half way into leg for all legs (B).

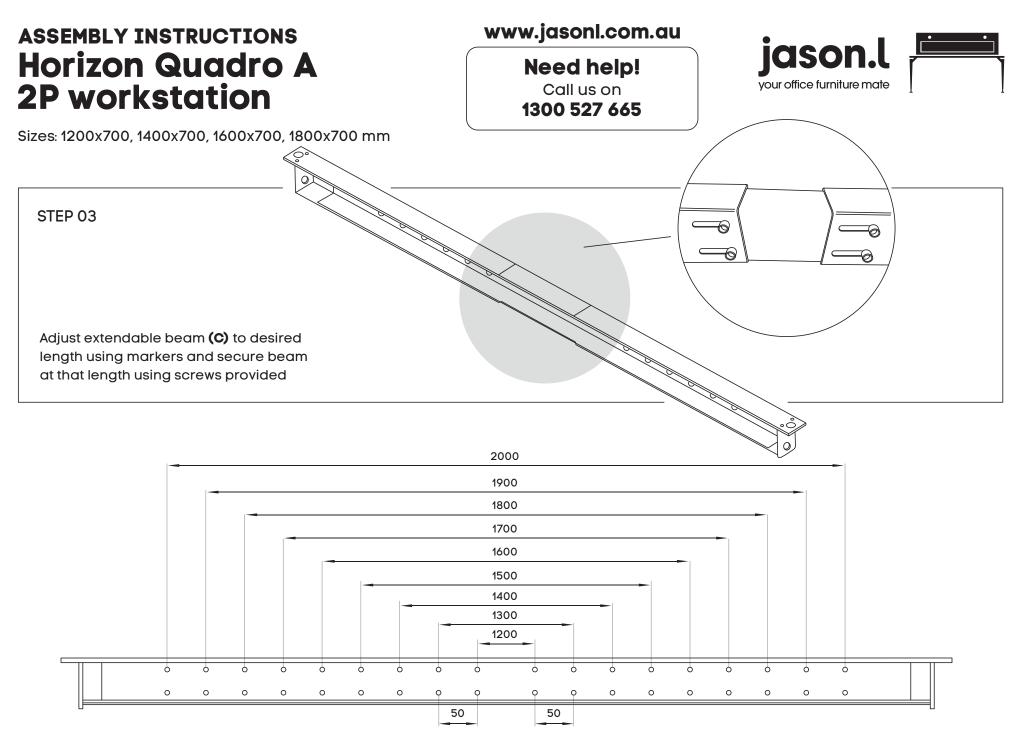


Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

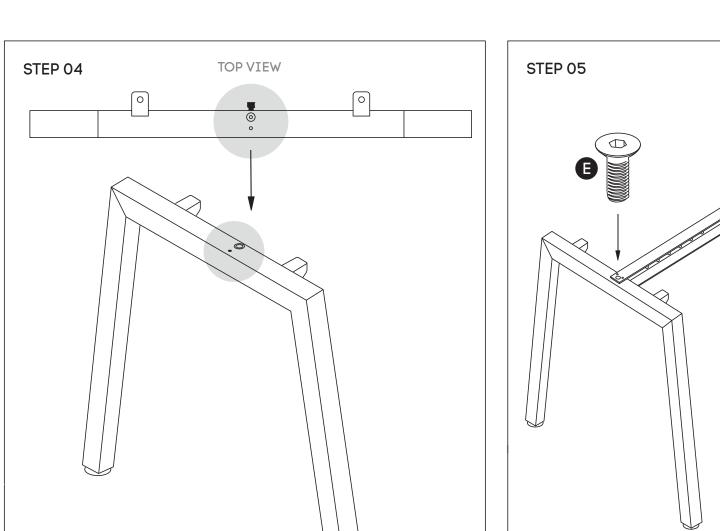

Attach beam **(C)** to legs **(B)** using nut insert in legs. See point attached

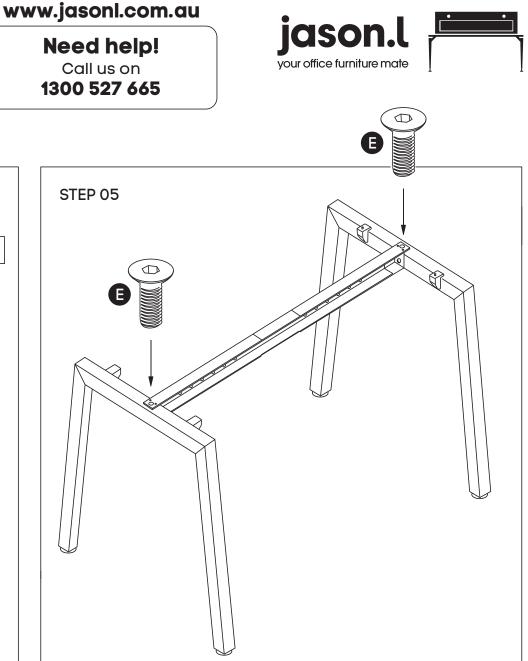

Frame looks like this. Using Allen Key, attach beam (C) with Socket (E)

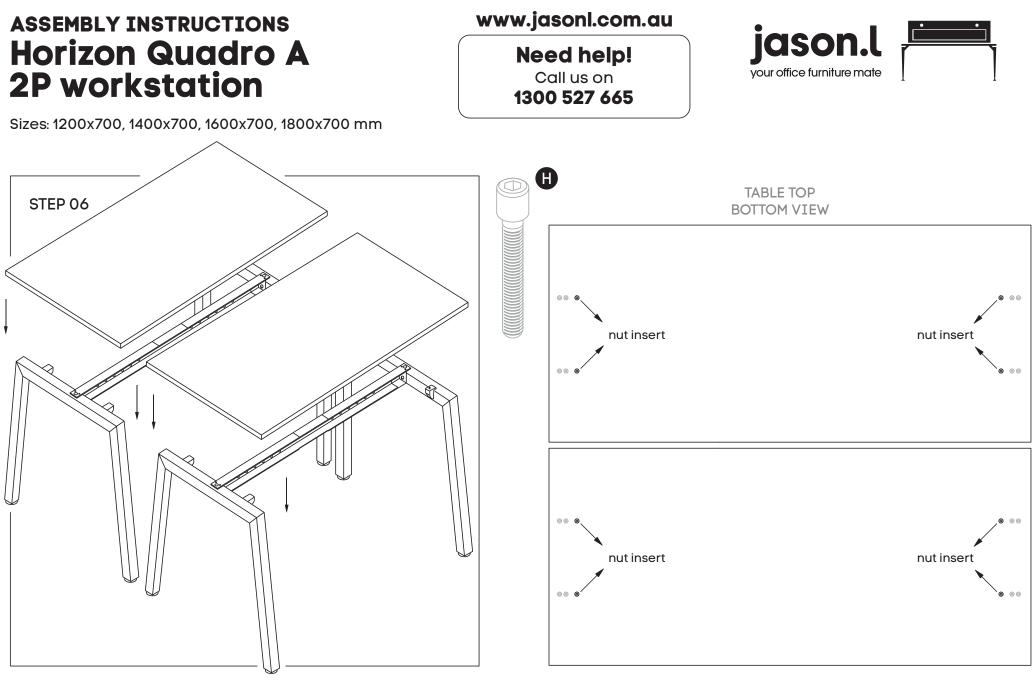

Place desktops ontop of frame. Nut inserts in top will align with plastic joiner brackets using M6x30MM **(H)** sockets attach tops to frame.

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

### www.jasonl.com.au





