
Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!

Call us on **1300 527 665** 



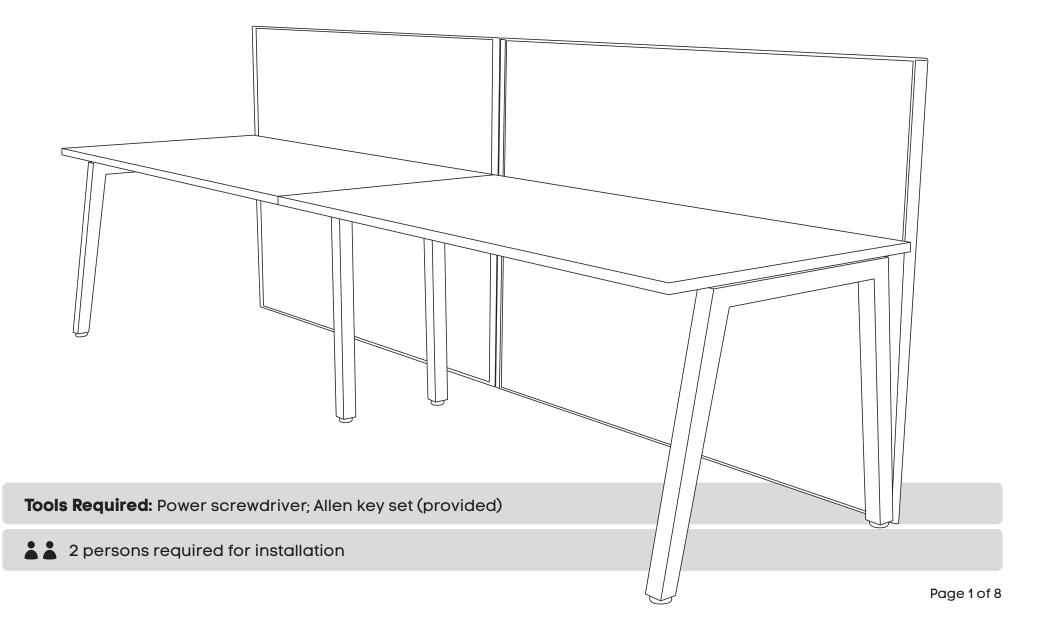

## **ASSEMBLY INSTRUCTIONS Horizon Quadro A 2P Run workstation**


Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

## **Need help!**

Call us on 1300 527 665



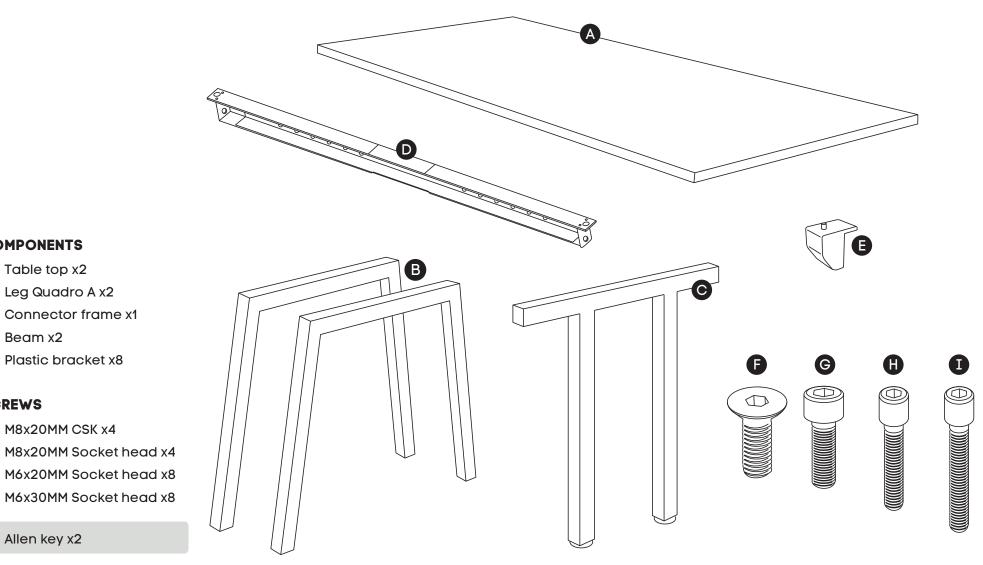

**COMPONENTS** 

A Table top x2

Beam x2

**SCREWS** 

Leg Quadro A x2 Connector frame x1

Plastic bracket x8

M8x20MM CSK x4


Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

### www.jasonl.com.au

### Need help!

Call us on **1300 527 665** 




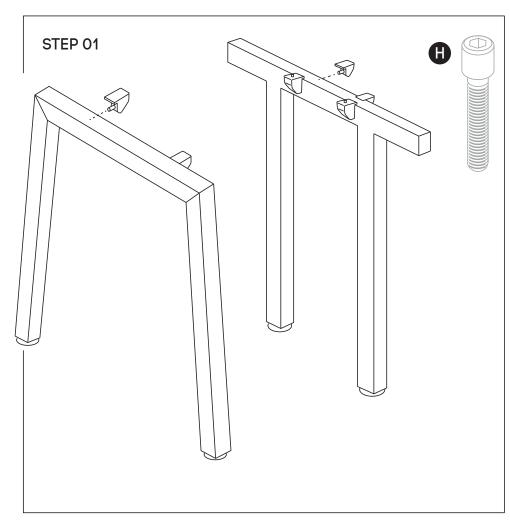

Using Allen Key provided, attach 2 plastic brackets per leg **(E)** (as per picture above) using M6x20MM **(H)** Socket head screw. Do the same with Connector frame **(C)**.



Using Allen Key provided, attach M8x20MM Socket head (G)-screw socket half way into leg for both legs (B) and into Connector frame (C).

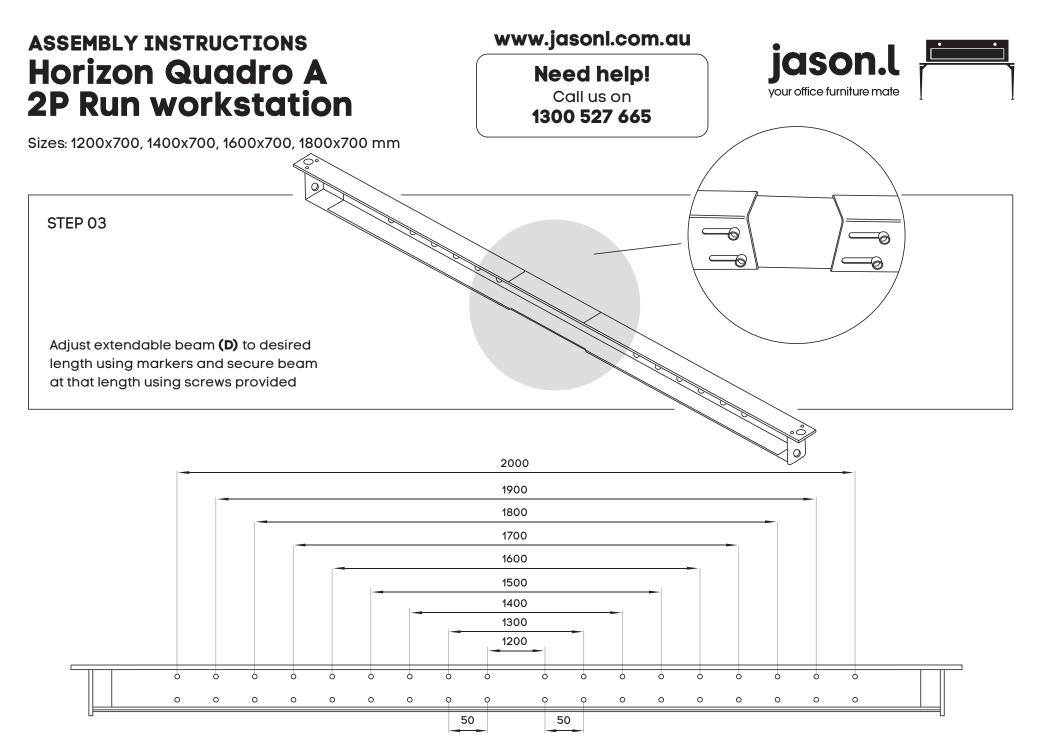


Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm


### www.jasonl.com.au

### Need help!

Call us on **1300 527 665** 



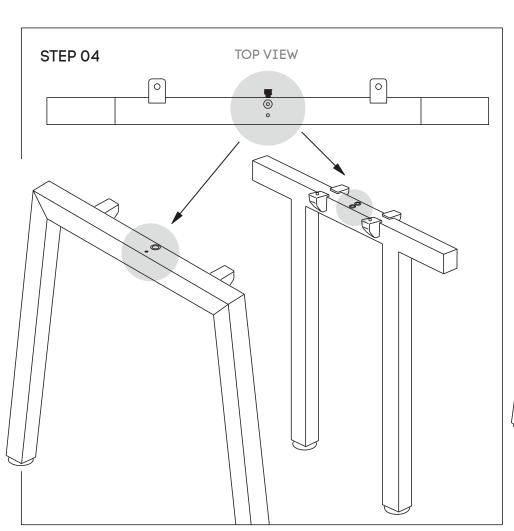

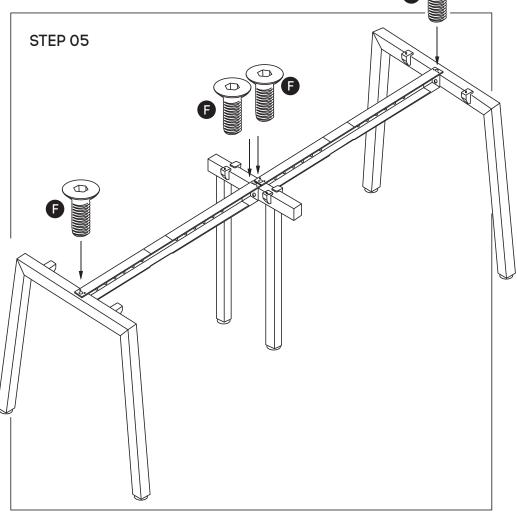

Attach beam **(D)** to legs **(B)** and Connector frame **(C)** using nut insert in legs. See point attached

Frame looks like this. Using Allen Key, attach beam (D) with Socket (F)

www.jasonl.com.au

## Need help!

Call us on **1300 527 665** 



Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

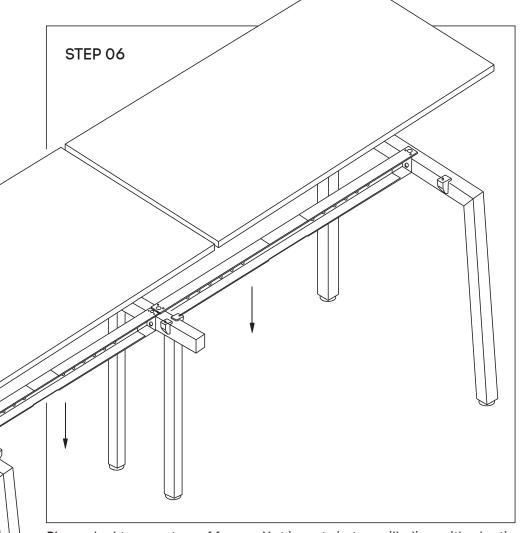


TABLE TOP BOTTOM VIEW

Place desktops ontop of frame. Nut inserts in top will align with plastic joiner brackets using M6x30MM (I) sockets attach tops to frame.

Sizes: 1200x800, 1400x800, 1600x800, 1800x800 mm

### www.jasonl.com.au


## Need help!


Call us on **1300 527 665** 



TABLE TOPS BOTTOM VIEW

The following nut inserts should be used for this specific desk / workstation

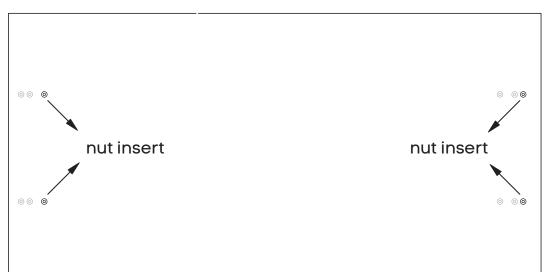

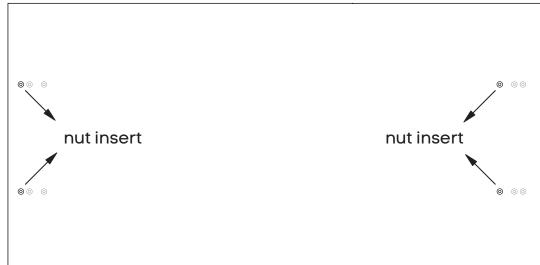

## **ASSEMBLY INSTRUCTIONS Horizon Quadro A 2P Run workstation**

Sizes: 1200x800, 1400x800, 1600x800, 1800x800 mm

### www.jasonl.com.au

### Need help!

Call us on 1300 527 665





