
Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

### **Need help!**

Call us on **1300 527 665** 

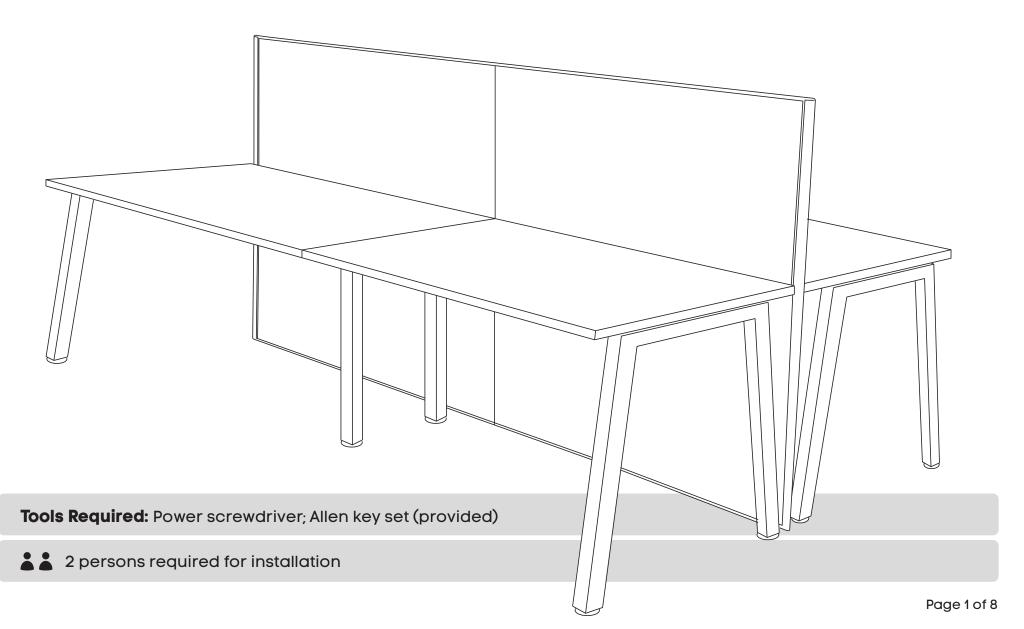




Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

## Need help!

Call us on **1300 527 665** 



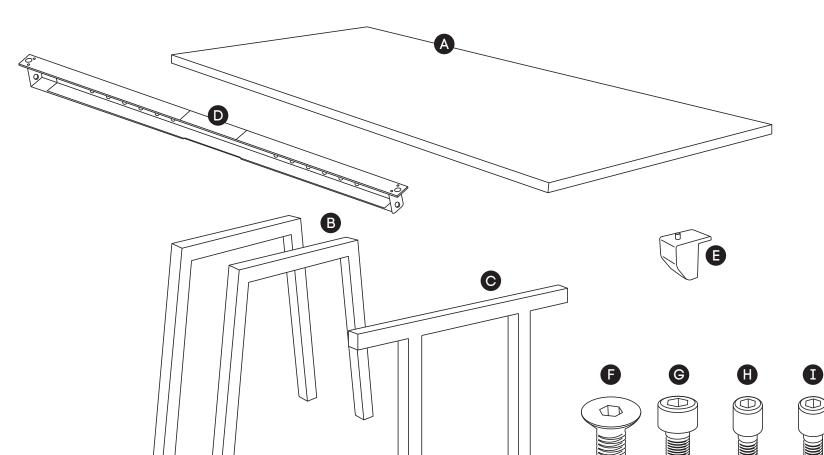

- SCREWS
- F M8x20MM CSK x8

**COMPONENTS**A Table top x4

Beam x4

Leg Quadro A x4
Connector frame x2

Plastic bracket x16

- G M8x20MM Socket head x8
- H M6x20MM Socket head x16
- I M6x30MM Socket head x16
- J Allen key x2

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

### www.jasonl.com.au

### Need help!

Call us on **1300 527 665** 






Using Allen Key provided, attach 2 plastic brackets per leg **(E)** (as per picture above) using M6x20MM **(H)** Socket head screw. Do the same with Connector frame **(C)**.



Using Allen Key provided, attach M8x20MM Socket head (G)-screw socket half way into leg for all legs (B) and into Connector frame (C).

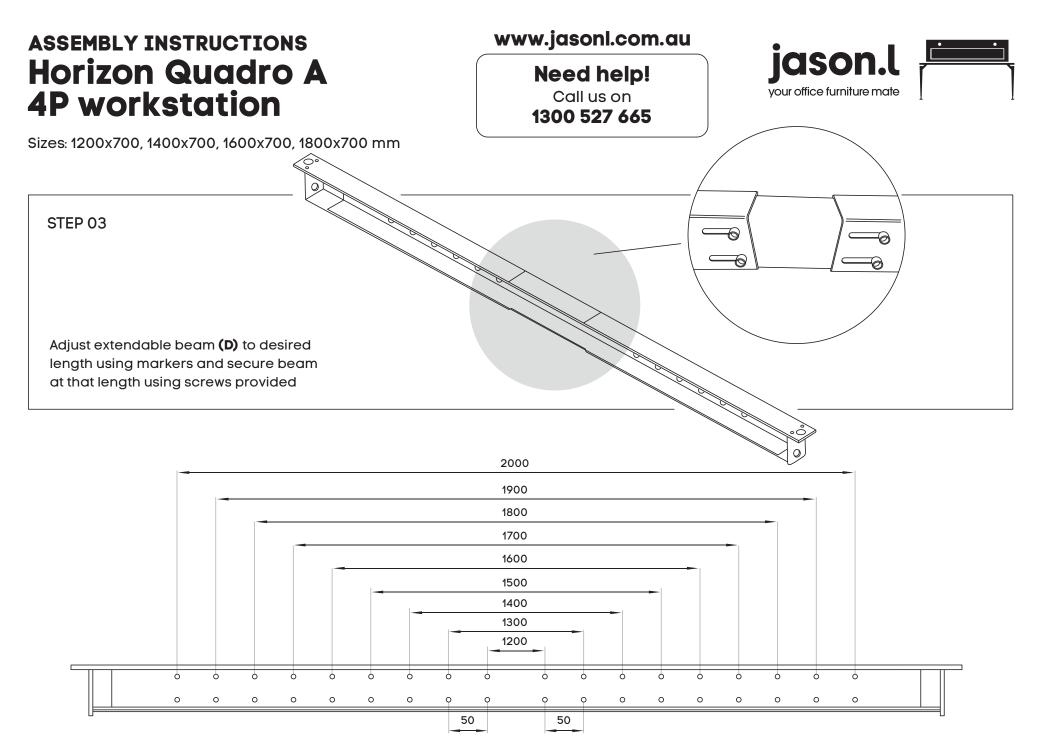


Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm


### www.jasonl.com.au

### **Need help!**

Call us on **1300 527 665** 



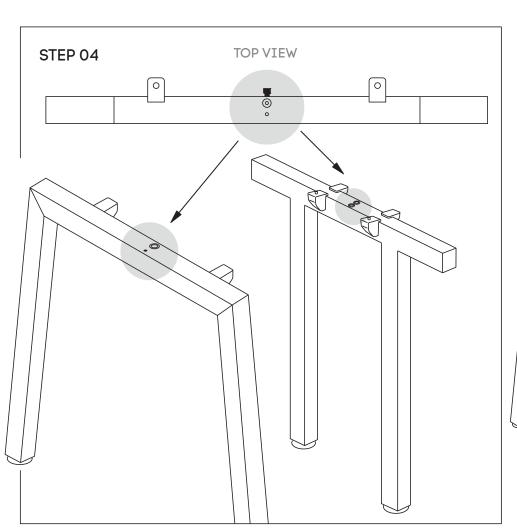

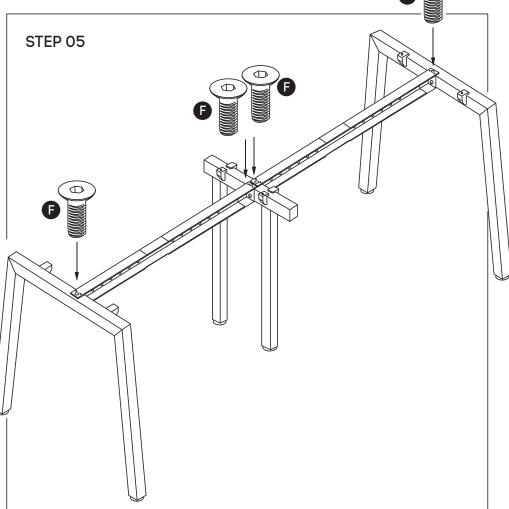

Attach beam **(D)** to legs **(B)** and Connector frame **(C)** using nut insert in legs. See point attached

Frame looks like this. Using Allen Key, attach beam (D) with Socket (F)

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm


to frame.

### www.jasonl.com.au

## Need help!

Call us on **1300 527 665** 



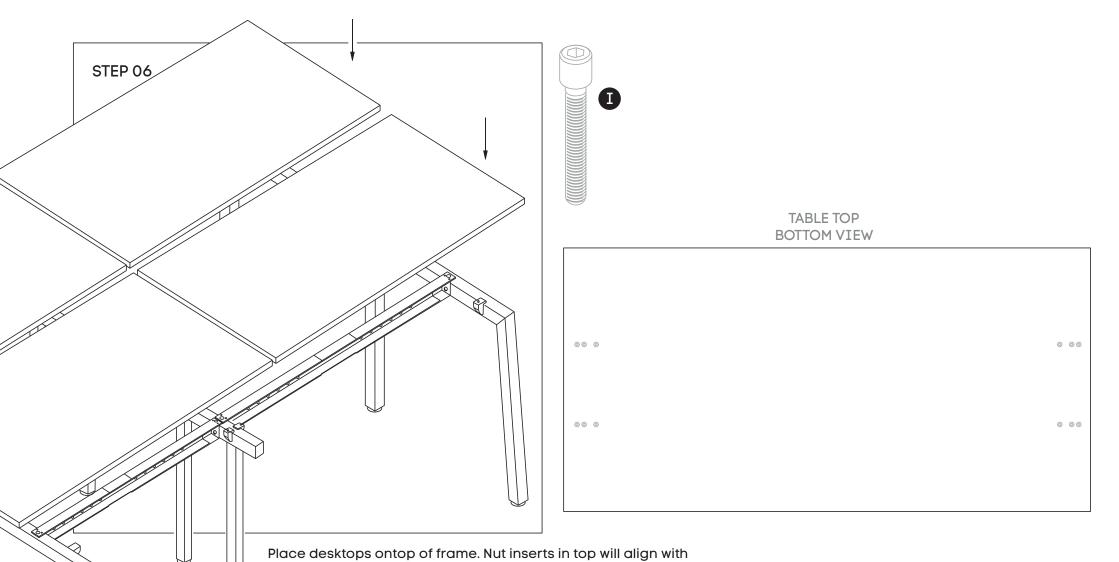

plastic joiner brackets using M6x30MM (I) sockets attach tops

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

### www.jasonl.com.au


## Need help!

Call us on **1300 527 665** 



TABLE TOPS
BOTTOM VIEW

The following nut inserts should be used for this specific desk / workstation

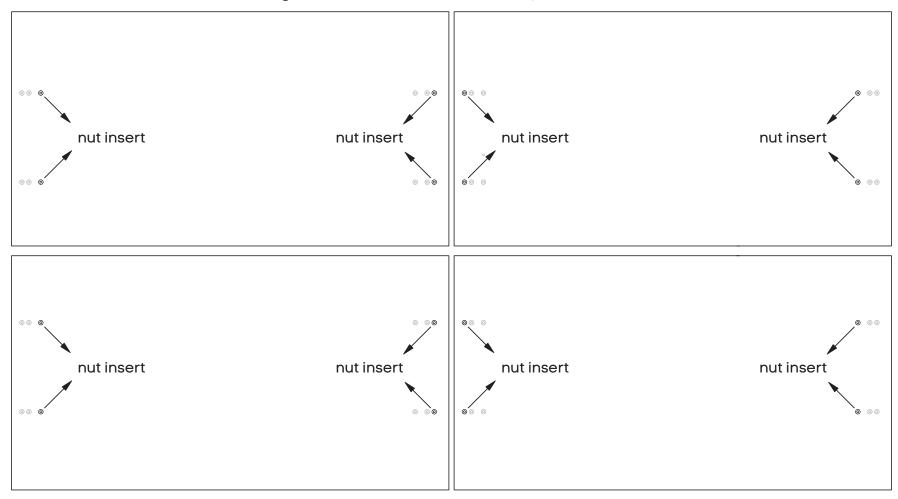

www.jasonl.com.au

## Need help!

Call us on **1300 527 665** 



Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

