


ASSEMBLY INSTRUCTION

# Nest S Phone Booth

1 PERSON POD

**jason.l**  
enabling people to do great work

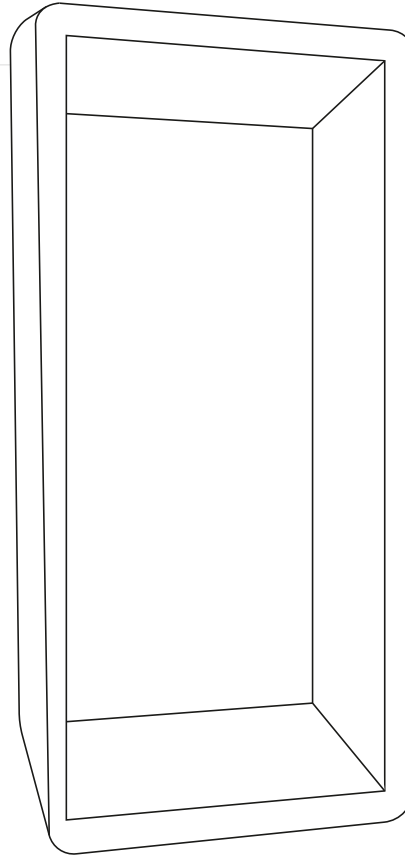

**Need help!**

Call us on **1300 527 665**







[www.jasonl.com.au](http://www.jasonl.com.au)

1 of 12





# Nest S Phone Booth

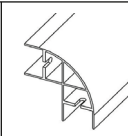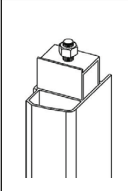1 PERSON POD





## Alluminium

<b>A01</b> - Upper left arc material x1 <b>A02</b> - Upper right arc material x1 <b>A03</b> - Lower left arc material x1 <b>A04</b> - Lower right arc material x1	
<b>A05</b> - Ront Mullion x2 <b>A06</b> - Behind Ront Mullion x3 <b>A07</b> - Horizontal material x1 <b>A08</b> - Horizontal material x1 <b>A09</b> - Horizontal material x1 <b>A10</b> - Horizontal material x1	
<b>A11</b> - Door pocket x1	
<b>A12</b> - Curved cover x8	
<b>A13</b> - Door Leaf x1	
<b>A14</b> - Fixed glass frame x1	














## Panel

<b>B01</b> - Top steel platel x1	
<b>B02</b> - Bottom steel plate x1	
<b>B03</b> - Left steel plate x1	
<b>B04</b> - Right steel plate	

## Interior

<b>C01</b> - Sound-absorbing cotton x1	
<b>C02</b> - Sound-absorbing cotton x1	
<b>C03</b> - Left S-A cotton x1	
<b>C04</b> - Right sound-absor. cotton X1	

## Hardware fitting

<b>D01</b> - Power cord x1	
<b>D02</b> - Door lock x1	
<b>D03</b> - Knob controller x1	
<b>D04</b> - Infrared sensor x1	
<b>D05</b> - Light1 x1	
<b>D06</b> - Cross bar x1	
<b>D07</b> - Glass plug x4	
<b>D08</b> - Combined socket x1	
<b>D09</b> - M5*12 Hexagon socket screw X16	
<b>D10</b> - M5*10 Hexagon socket screw X8	
<b>D11</b> - Door lock screw x2	
<b>D12</b> - Door lock screw x2	
<b>D13</b> - M4.2*25 Self drilling screws x10	



**Need help!**

Call us on **1300 527 665**







# Nest S Phone Booth


1 PERSON POD

## Tools

E01 - Wrench xl	
E02 - Allen wrench xl	

## Recommended for self-provisioning

E04 - Glass suction cup x2	
E05 - Cross screwdriver xl	
E06 - Power drillr xl	
E07 - Ladder Xl	
E08 - Rubber hammer xl	
E09 - Spirit level	

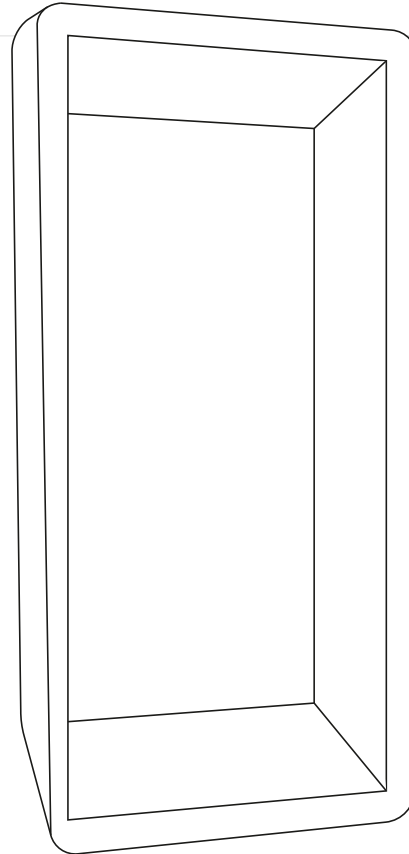


**Need help!**

Call us on **1300 527 665**


# Nest S Phone Booth

1 PERSON POD


## Step 01

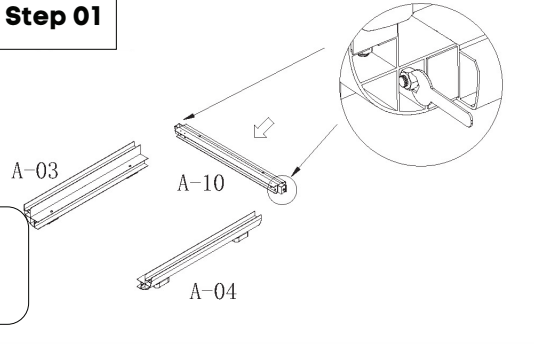


## Step 02

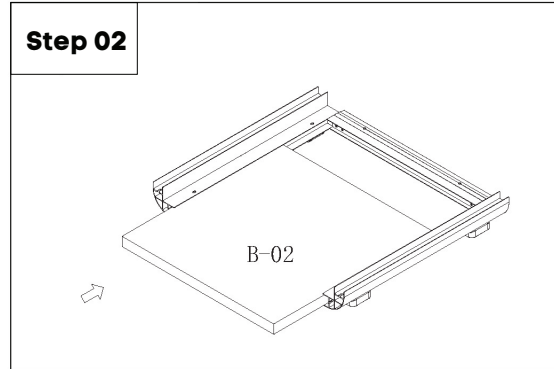

## Step 03

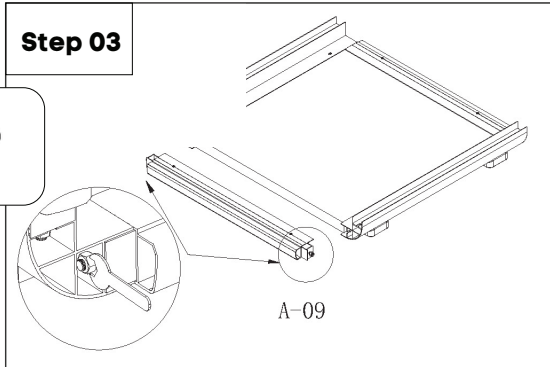

## Step 04

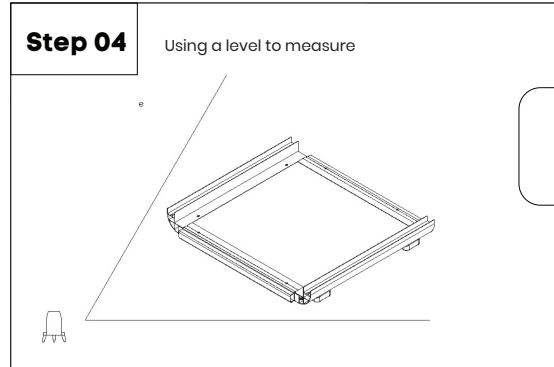


**Need help!**

Call us on **1300 527 665**

# Nest S Phone Booth



1 PERSON POD

## Step 05

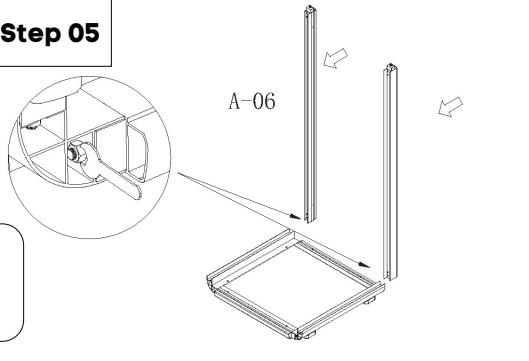


Wrench

## Step 06

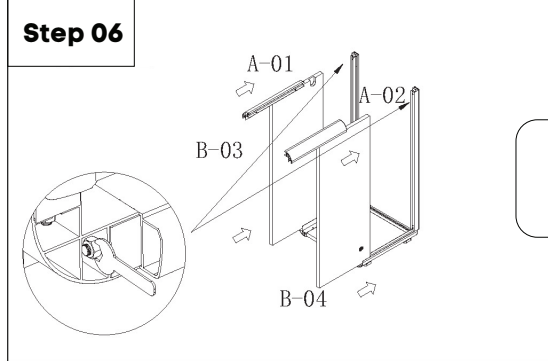



Wrench

## Step 07

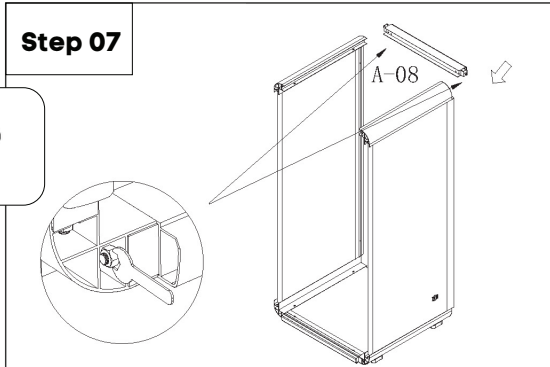

Wrench

## Step 08

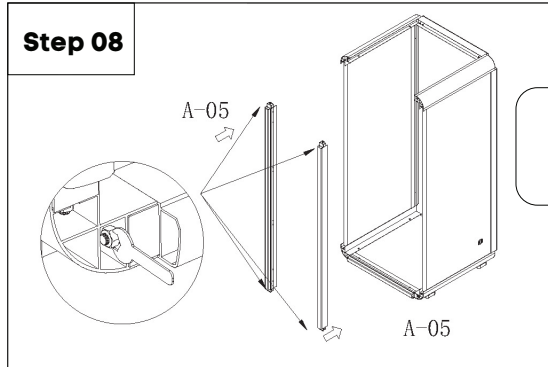

Wrench

**Need help!**

Call us on **1300 527 665**


# Nest S Phone Booth

1 PERSON POD



## Step 09



Wrench

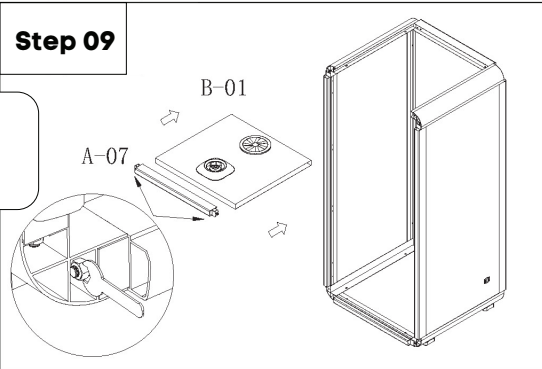


## Step 10

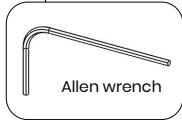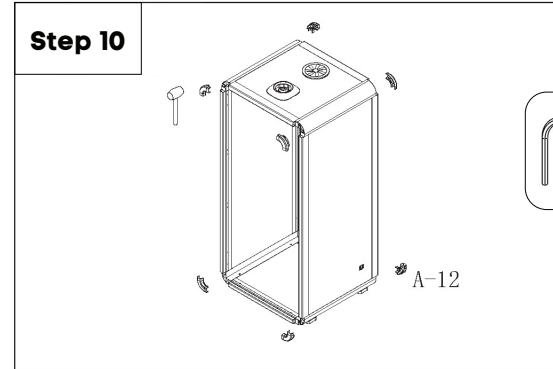


Allen wrench

## Step 11


Behind:




Allen wrench



Glass suction cup

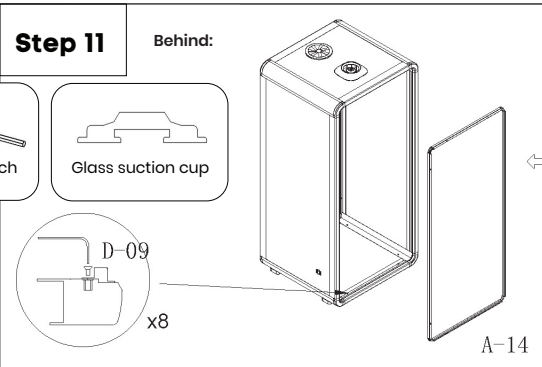

## Step 12




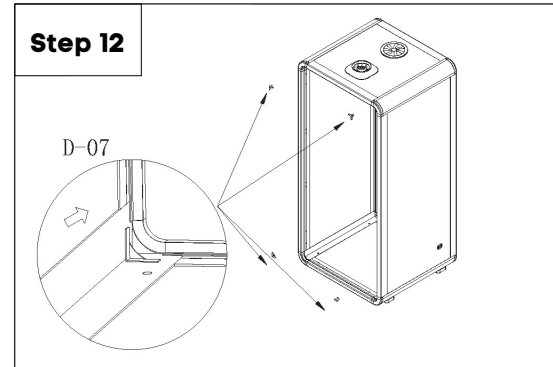


**Need help!**

Call us on **1300 527 665**

# Nest S Phone Booth

1 PERSON POD

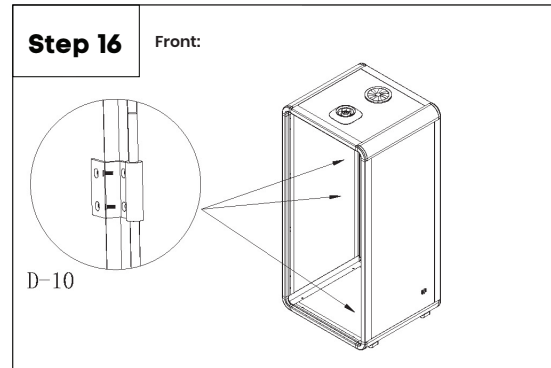
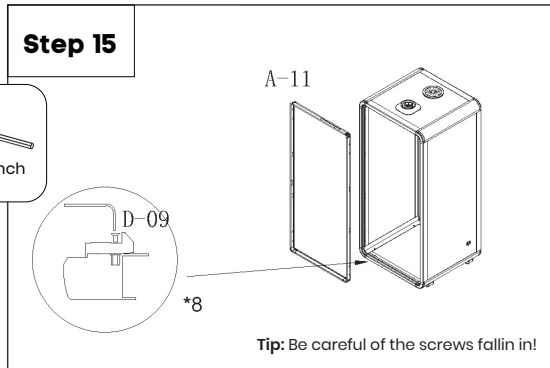
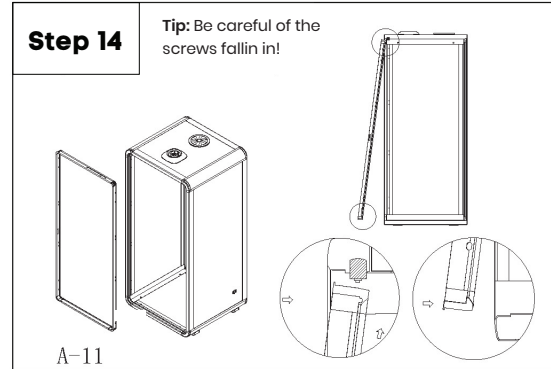
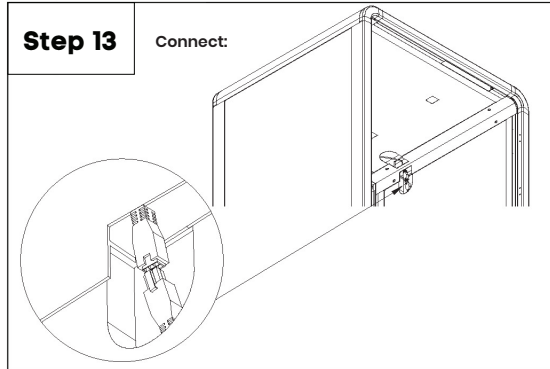


**Need help!**

Call us on **1300 527 665**

# Nest S Phone Booth

1 PERSON POD

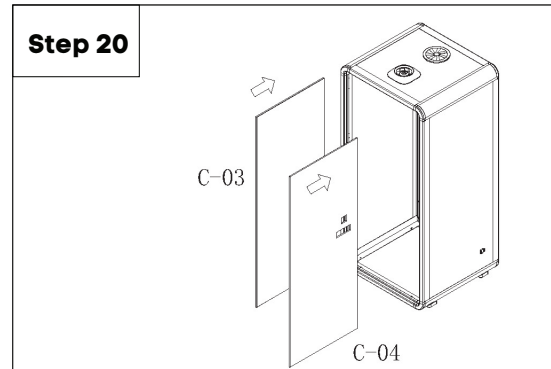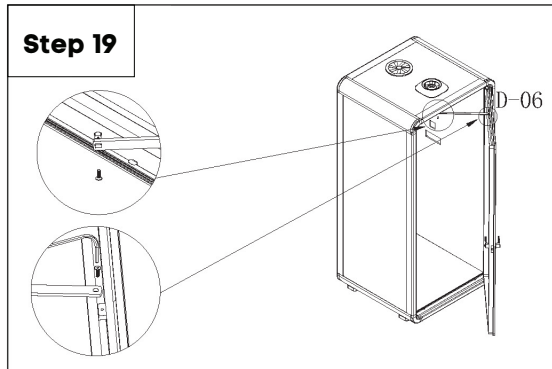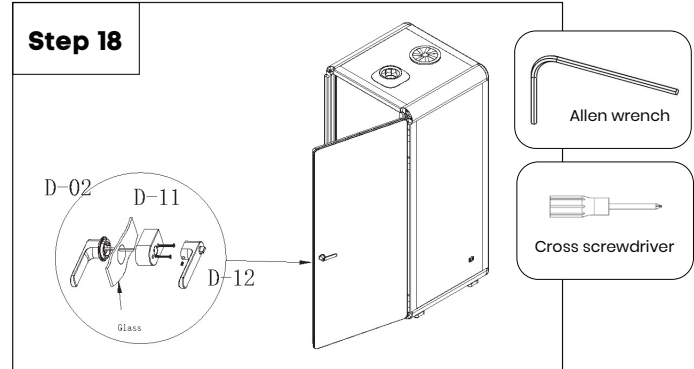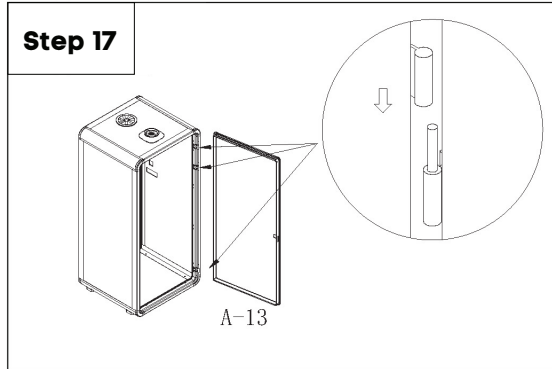





**Need help!**

Call us on **1300 527 665**



# Nest S Phone Booth

1 PERSON POD

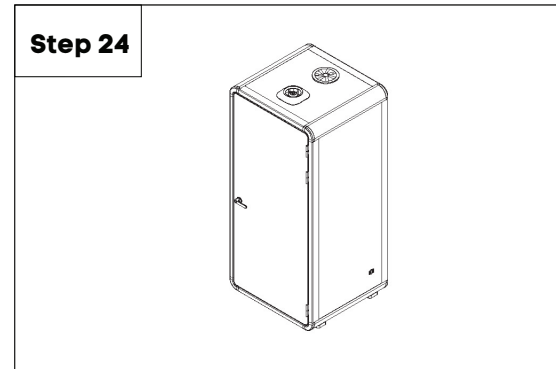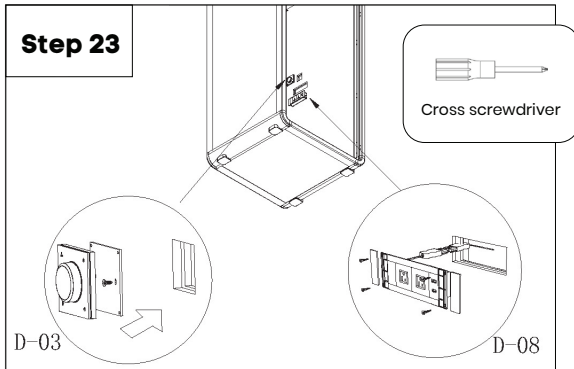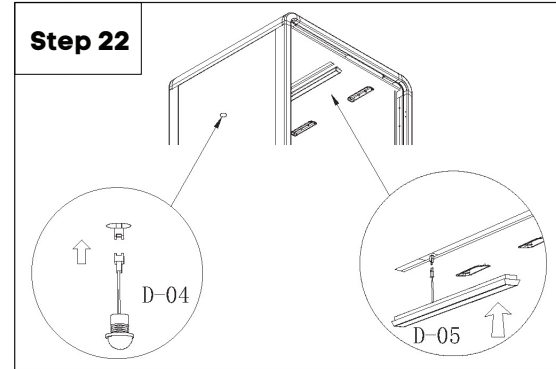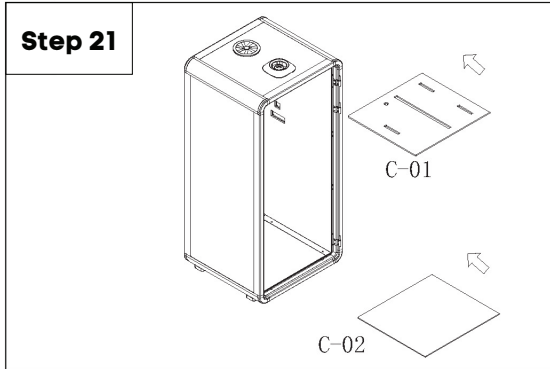


**Need help!**

Call us on **1300 527 665**

# Nest S Phone Booth

1 PERSON POD

## Step 25

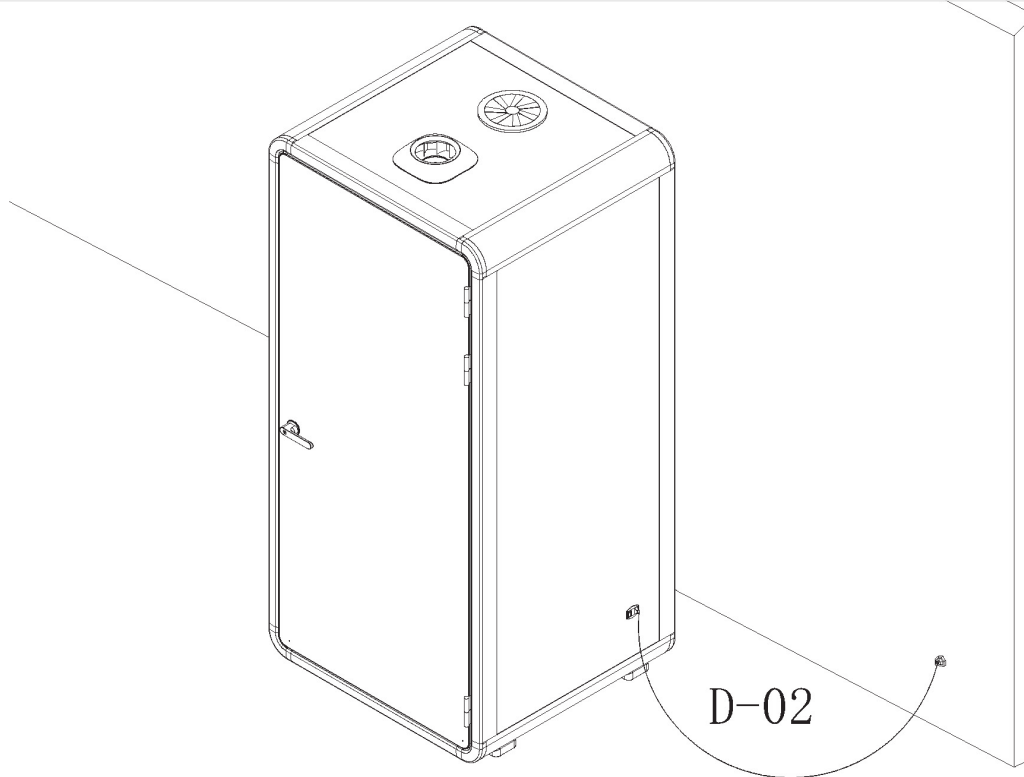






**Need help!**

Call us on **1300 527 665**



# Nest S Phone Booth

1 PERSON POD

**Furniture**

01 - Desktop x1	
02 - Bracket x3	
03 - M6*12 Hexagon socket screw x6	
04 - M5*12 Hexagon socket screw x15	
05 - Wireless charger x1	

**Step 01**

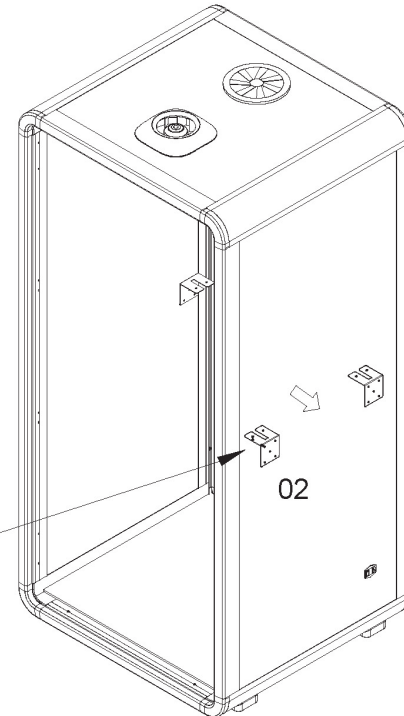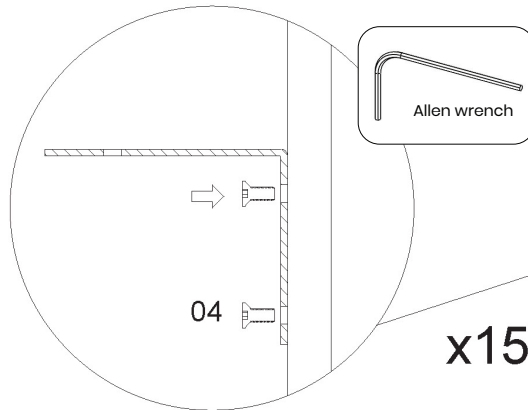


**Need help!**

Call us on **1300 527 665**

# Nest S Phone Booth

1 PERSON POD

## Step 02

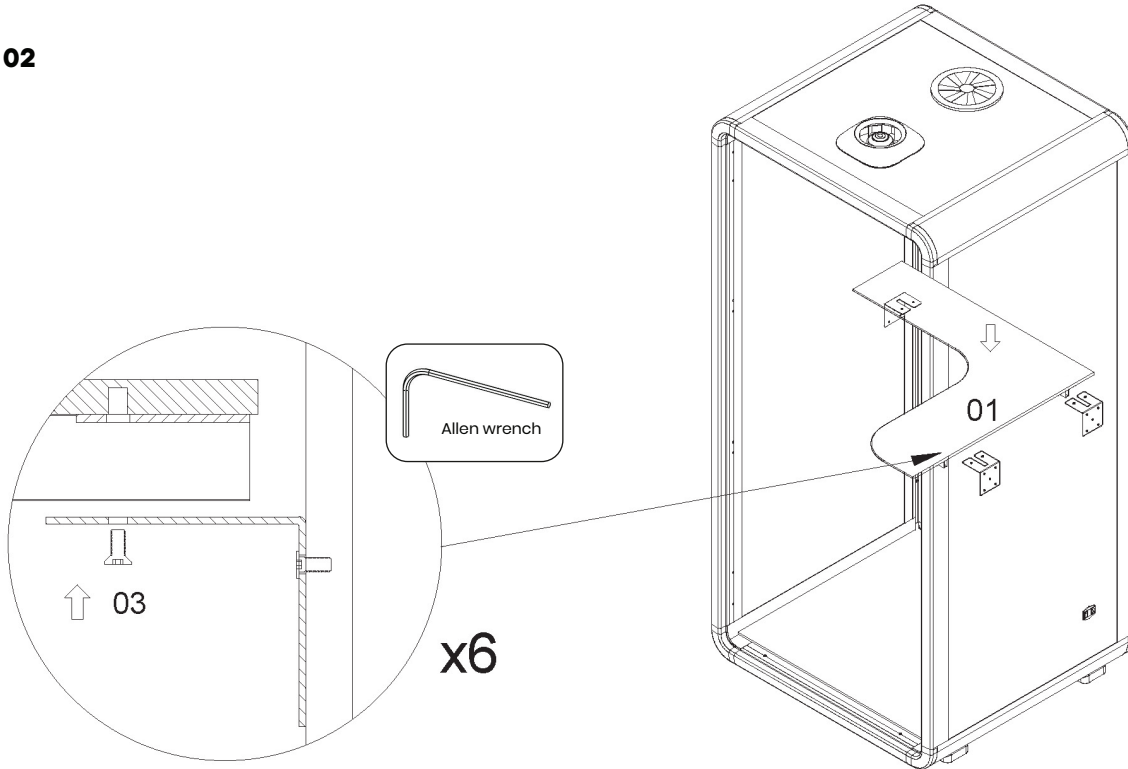

**Need help!**

Call us on **1300 527 665**