

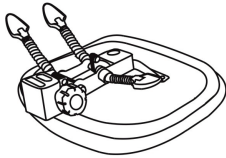
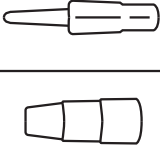


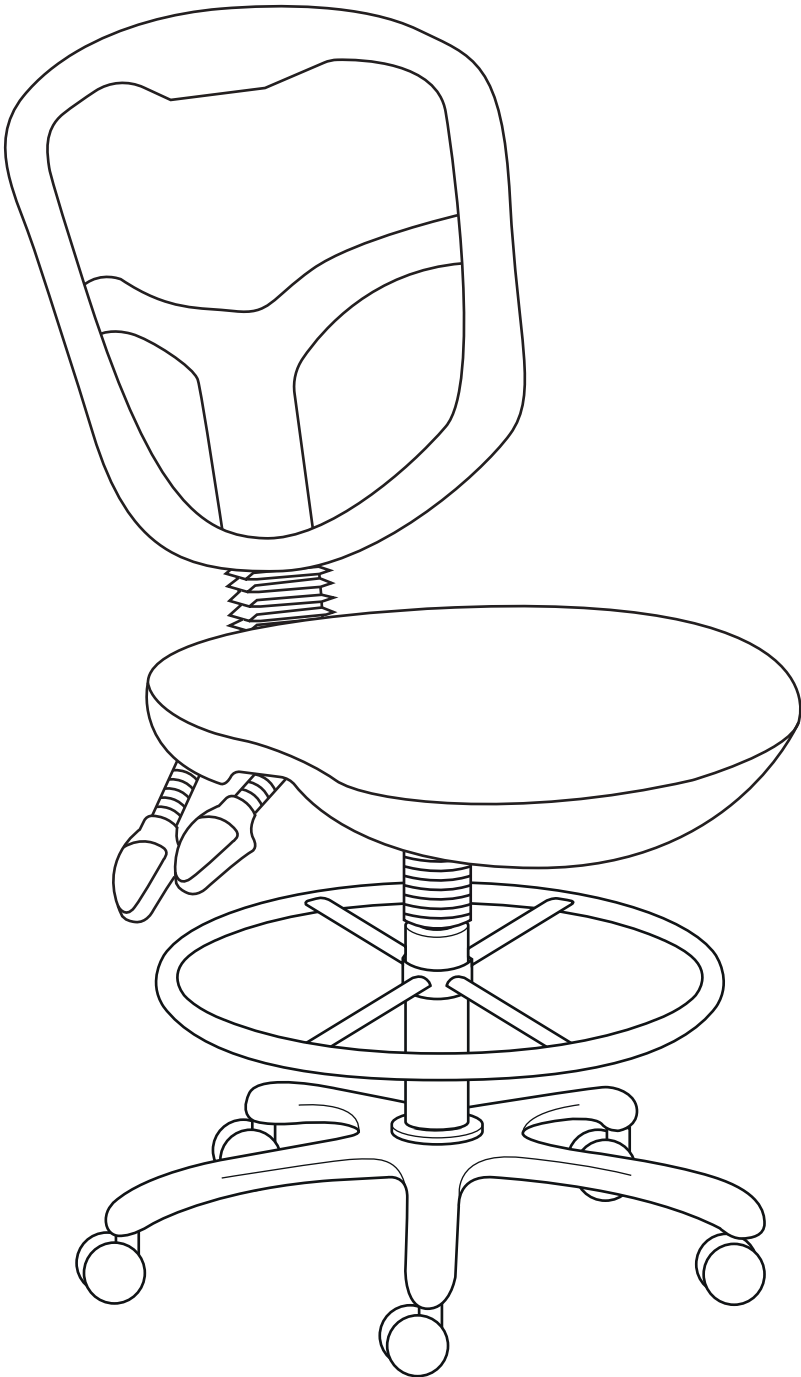

# Plover Drafting Chair



	1		1		1 1		1		5
---	---	---	---	---	--------	--	---	---	---


# Plover Drafting Chair

**jason.l**  
your office furniture mate



## Drafting Base Assembly


### STEP 1

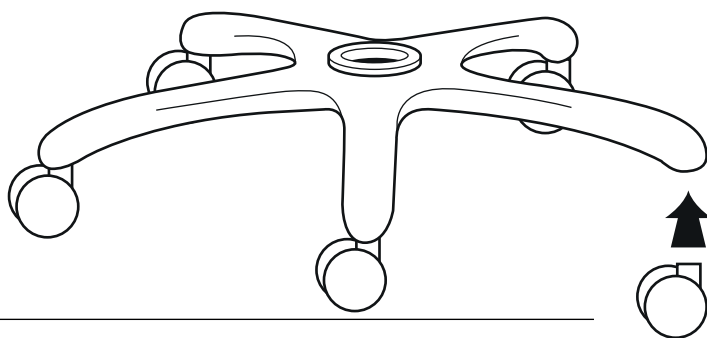


Insert castors  
into base.

### STEP 2

Insert gas cylinder  
into base.


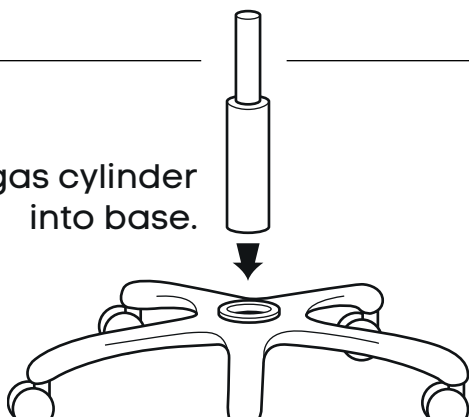


Base with  
gas inserted.

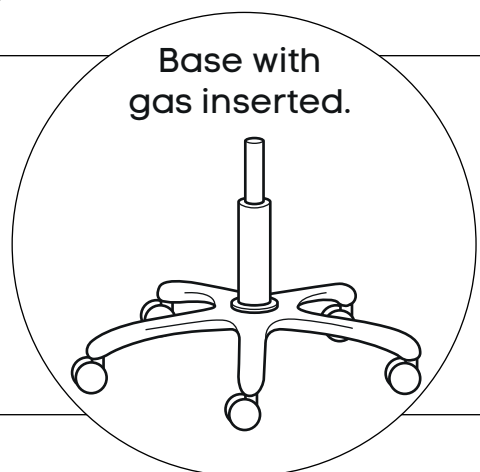

### STEP 3

Insert drafting ring  
over gas as shown.

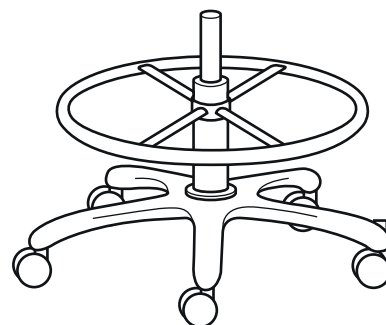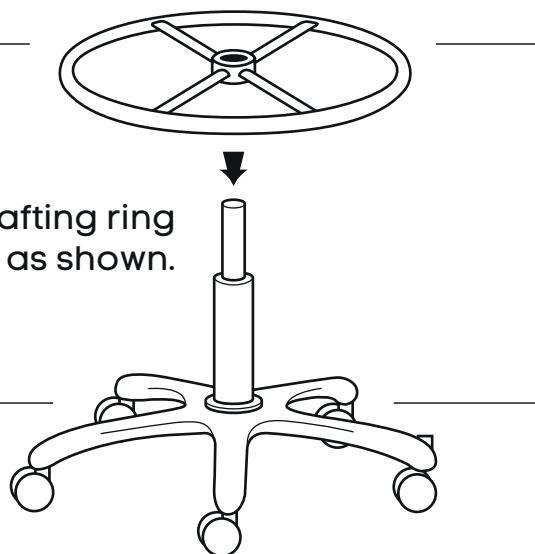

Base assembly complete !

**Need help!**

Call us on **1300 527 665**

**[www.jasonl.com.au](http://www.jasonl.com.au)**



2 of 4

# Plover Drafting Chair

**jason.l**  
your office furniture mate



## STEP 2

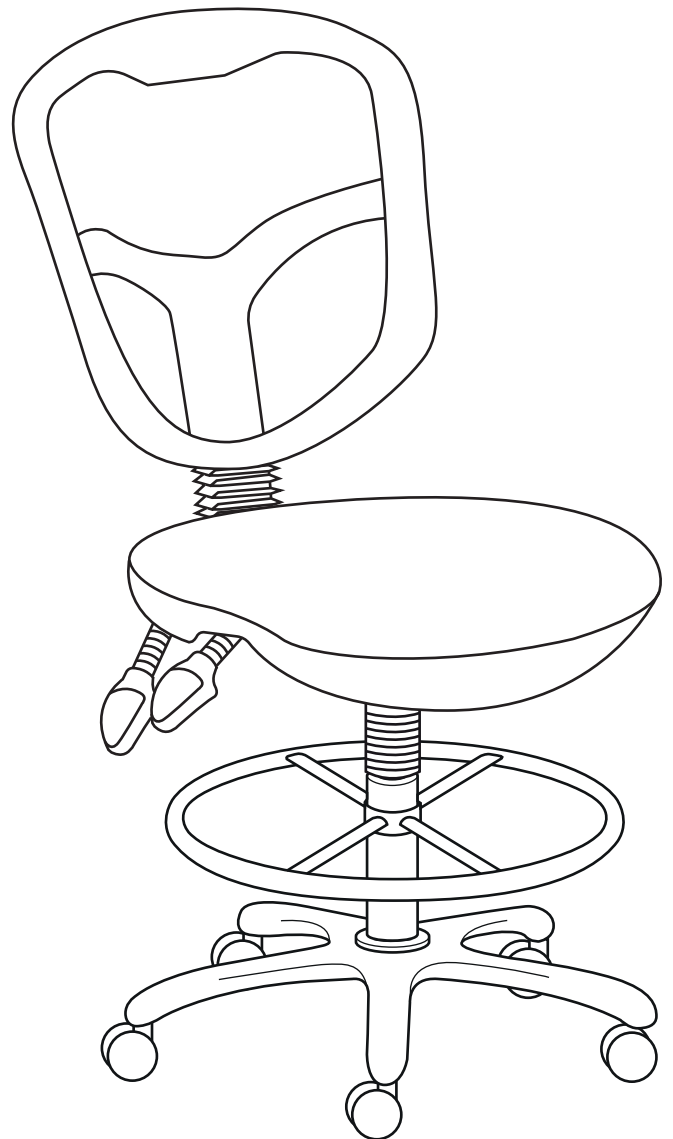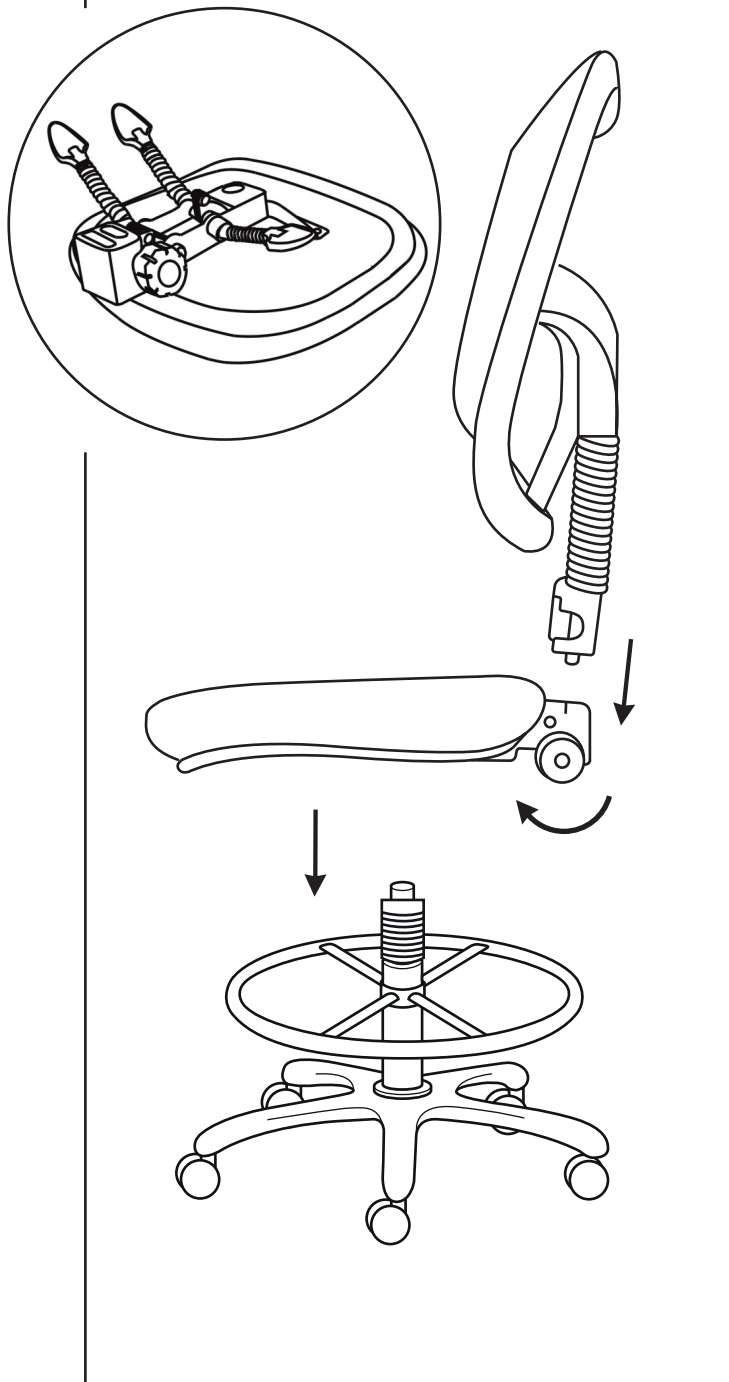

**Need help!**




Call us on **1300 527 665**


**[www.jasonl.com.au](http://www.jasonl.com.au)**

3 of 4


# Plover Drafting Chair

## Height adjustable arms Assembly


	<b>B</b>
	<b>2</b>
 <b>M6*35 X 6</b>	<b>A</b>
	<b>1</b>

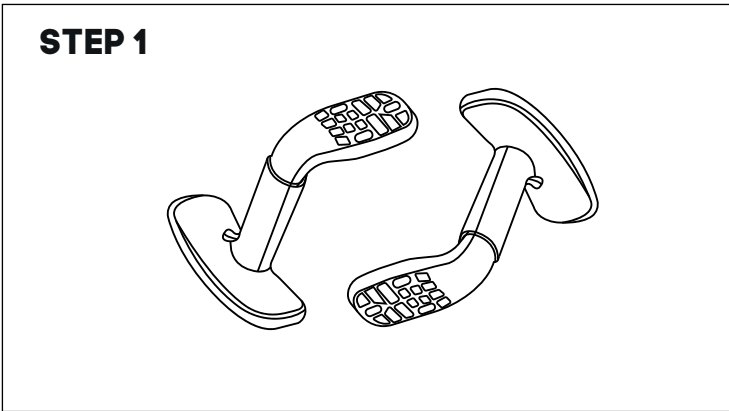

Adjustable arm and armpad comes assembled

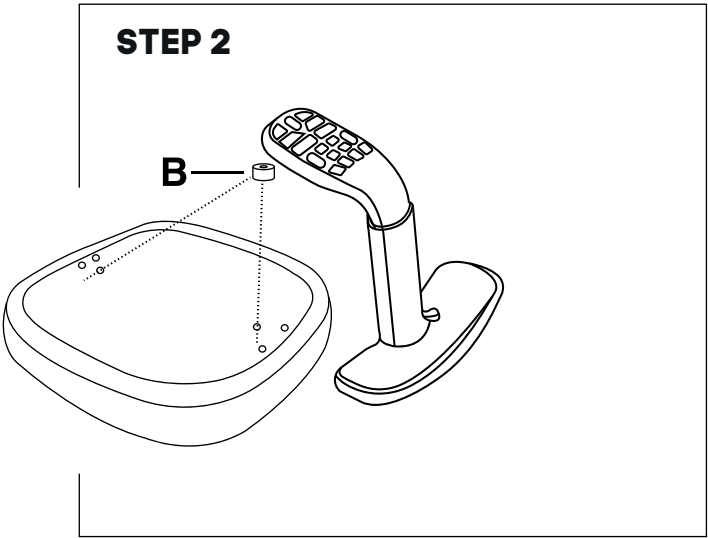

Tip chair seat upside down. Rest seat on corner of a table. Attach arm to chair seat using B spacer on the one hole each left and right arm.

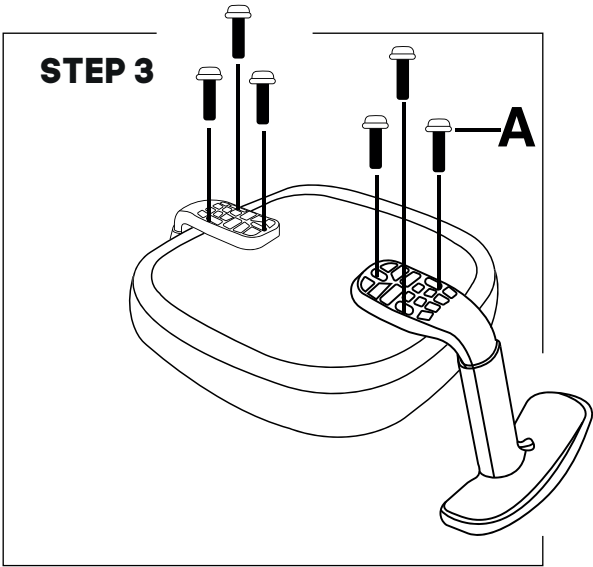

Attach arm using 6 x M6\*35mm (3 on the left arm and 3 on the right arm). Tighten screws all the way down into the chair seat.