


Plover Office Chair

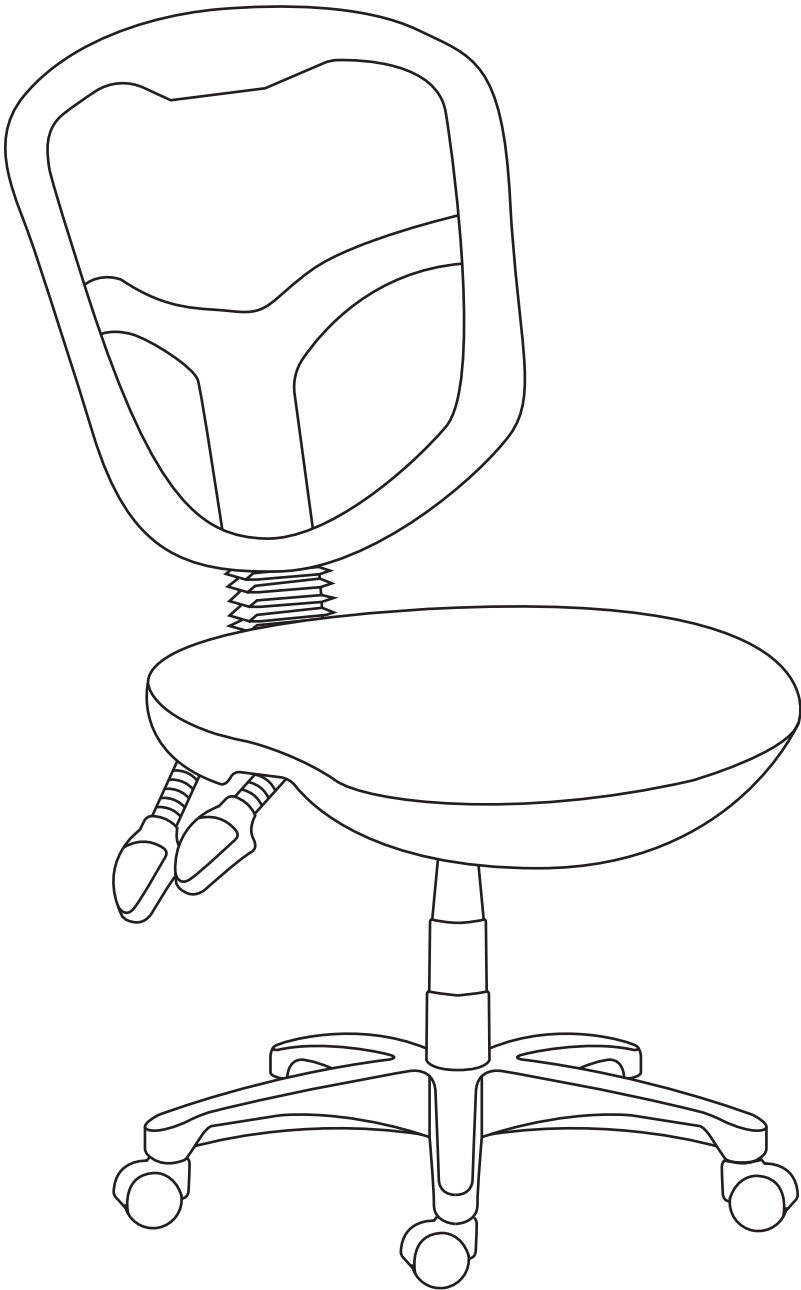


	1		1		1		1		5
--	---	--	---	--	---	--	---	--	---

Plover Office Chair


Standard Base Assembly

STEP 1

Insert castors
into base.

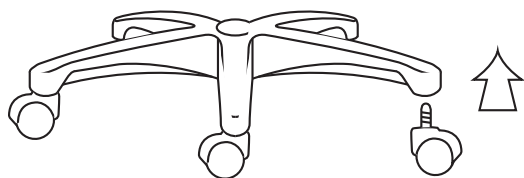


Insert gas
cylinder into
base.

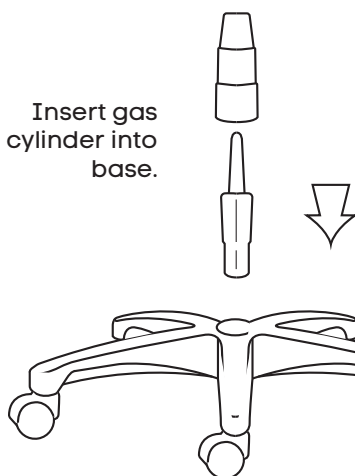


Drafting Base Assembly

STEP 1


Insert castors
into base.

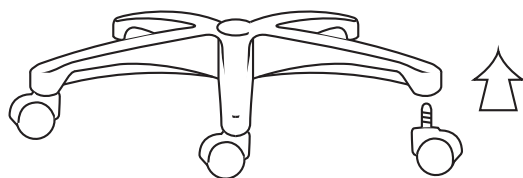

Insert gas
cylinder into
base.

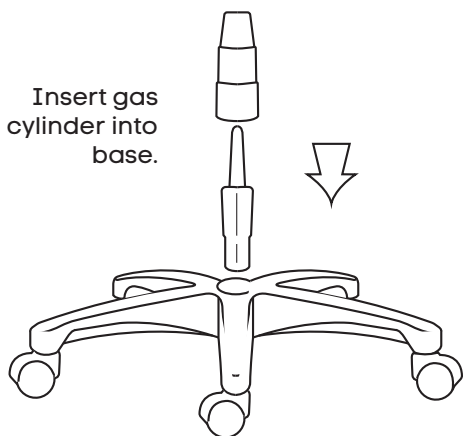



Insert drafting
ring over gas
as shown.

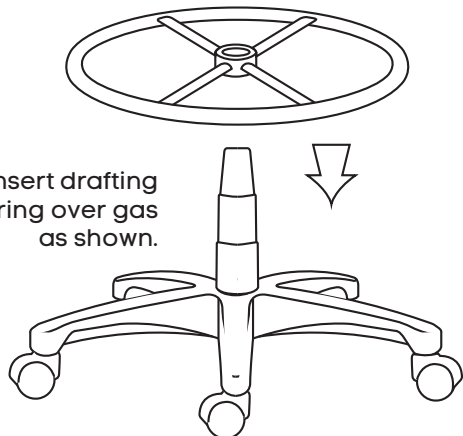

Plover Office Chair



STEP 2

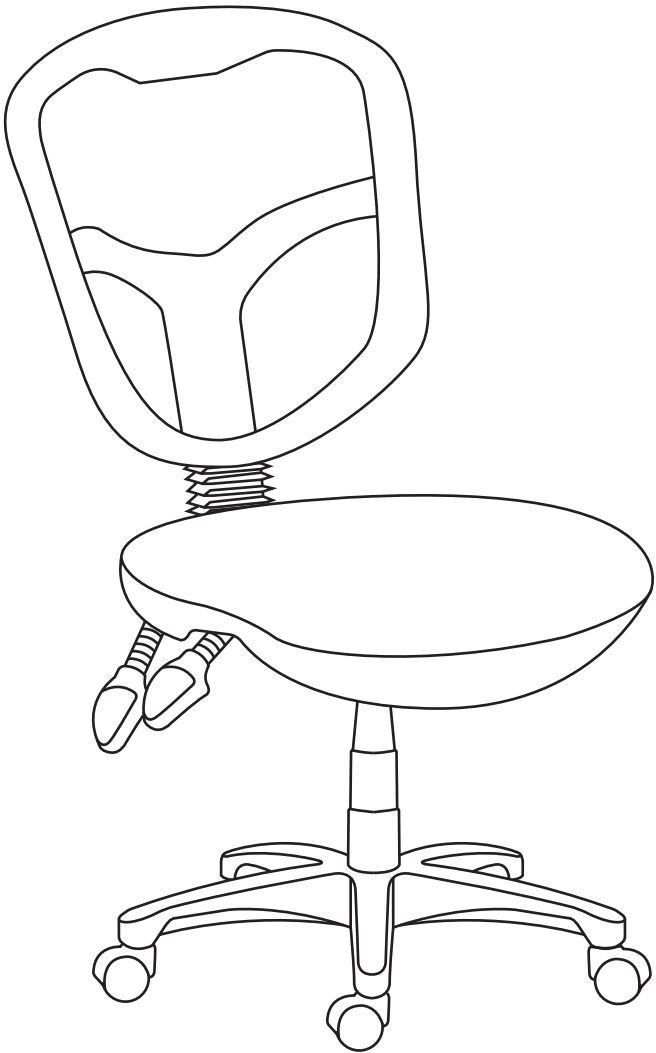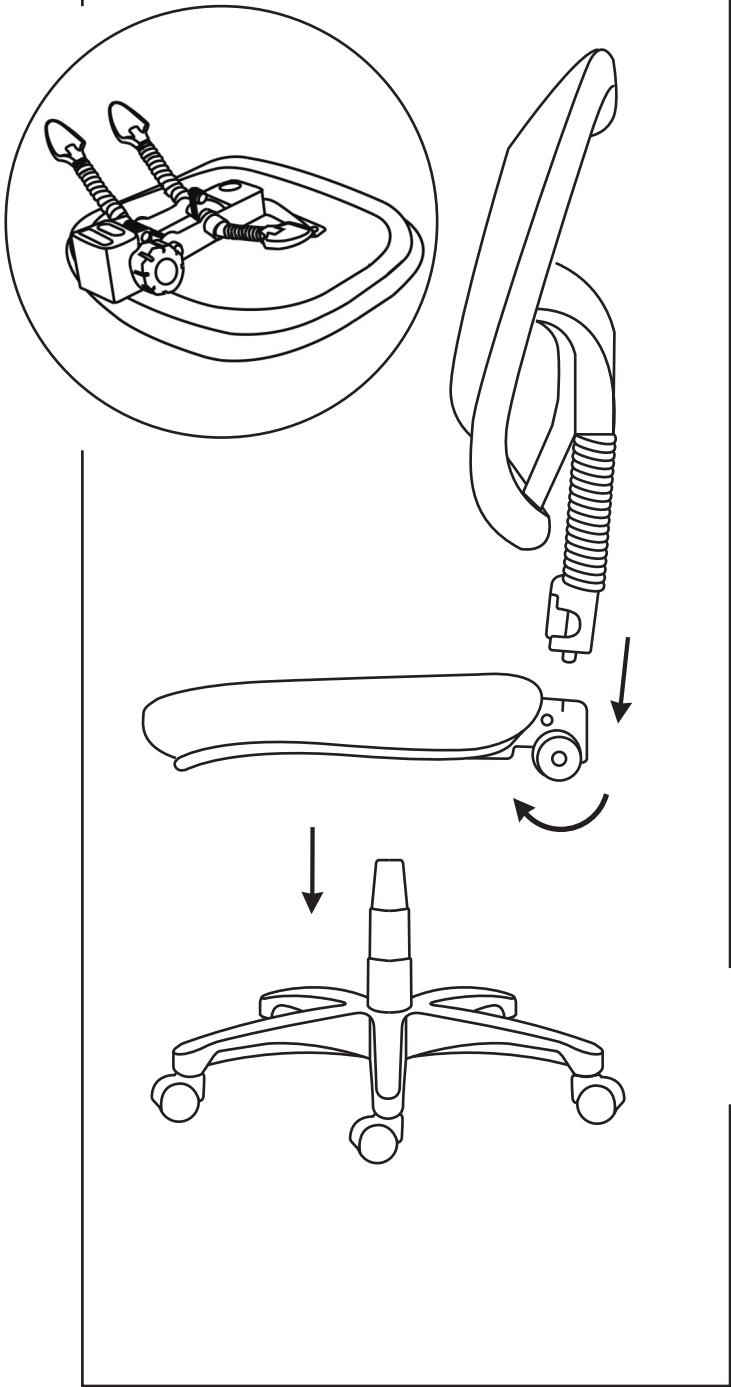




Need help!


Call us on **1300 527 665**

www.jasonl.com.au


3 of 4

Height adjustable arms Assembly


	B
	2
 M6*35 X 6	A
	1

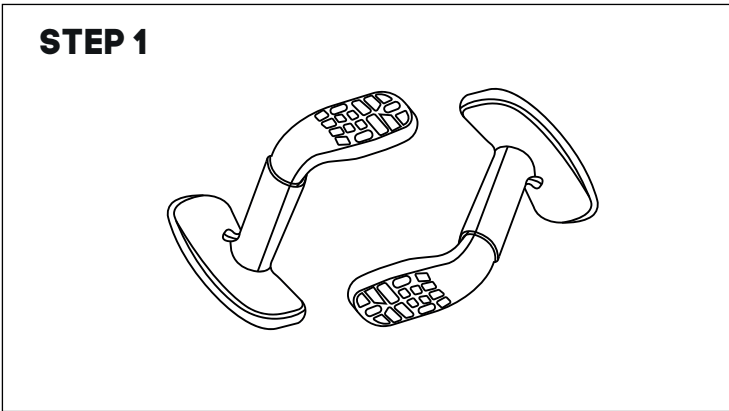

Adjustable arm and armpad comes assembled

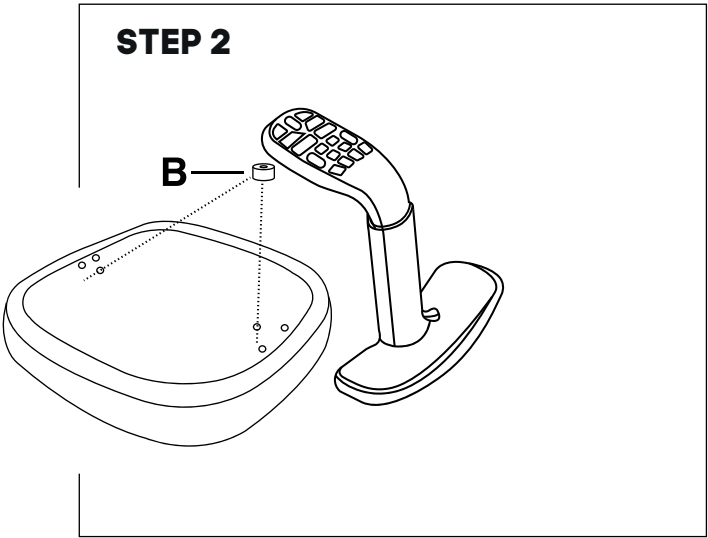

Tip chair seat upside down. Rest seat on corner of a table. Attach arm to chair seat using B spacer on the one hole each left and right arm.

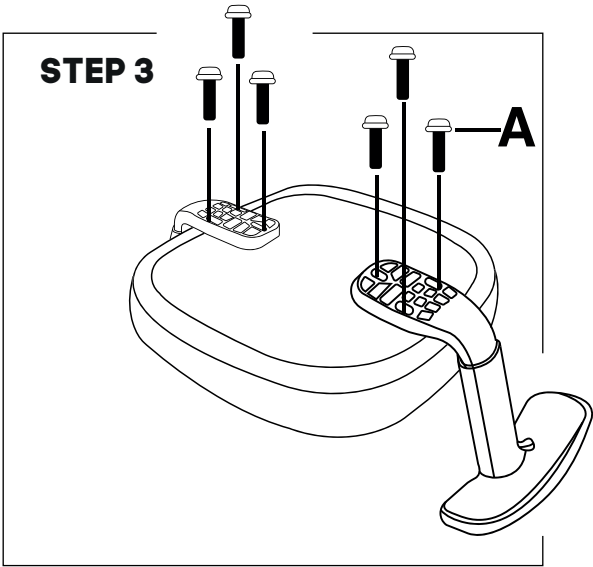

Attach arm using 6 x M6*35mm (3 on the left armand 3 on the right arm). Tighten screws all the way down into the chair seat.