

ASSEMBLY INSTRUCTIONS
Quadro Loop
Boardroom table


Size: 1800mm x 1100mm

www.jasonl.com.au


Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

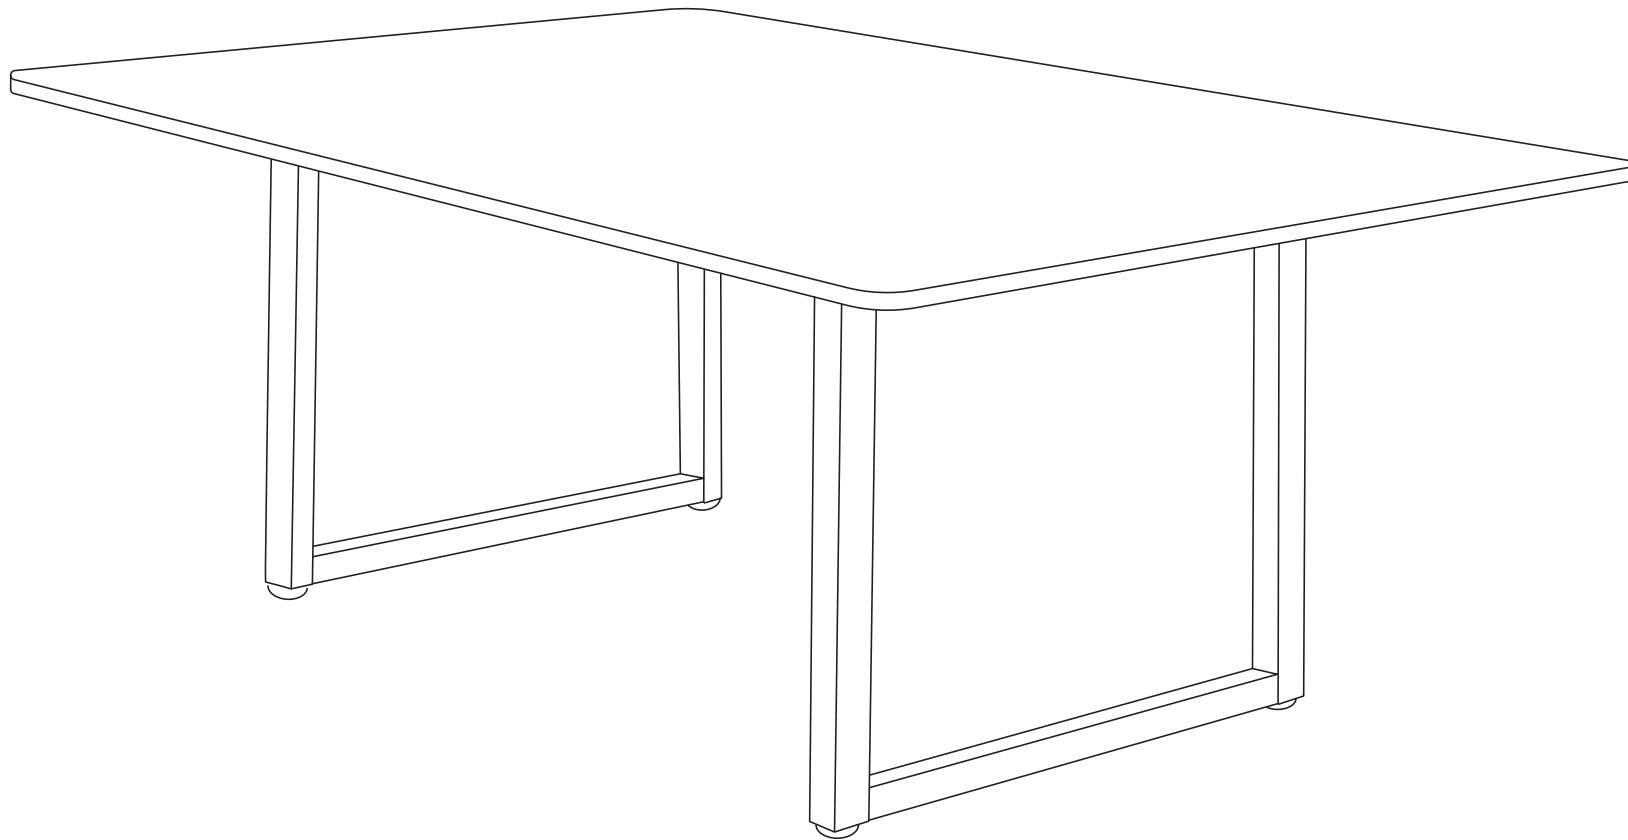

Tools Required: Power screwdriver; Allen key set (provided)

 2 persons required for installation

ASSEMBLY INSTRUCTIONS

Quadro Loop Boardroom table


Size: 1800mm x 1100mm

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

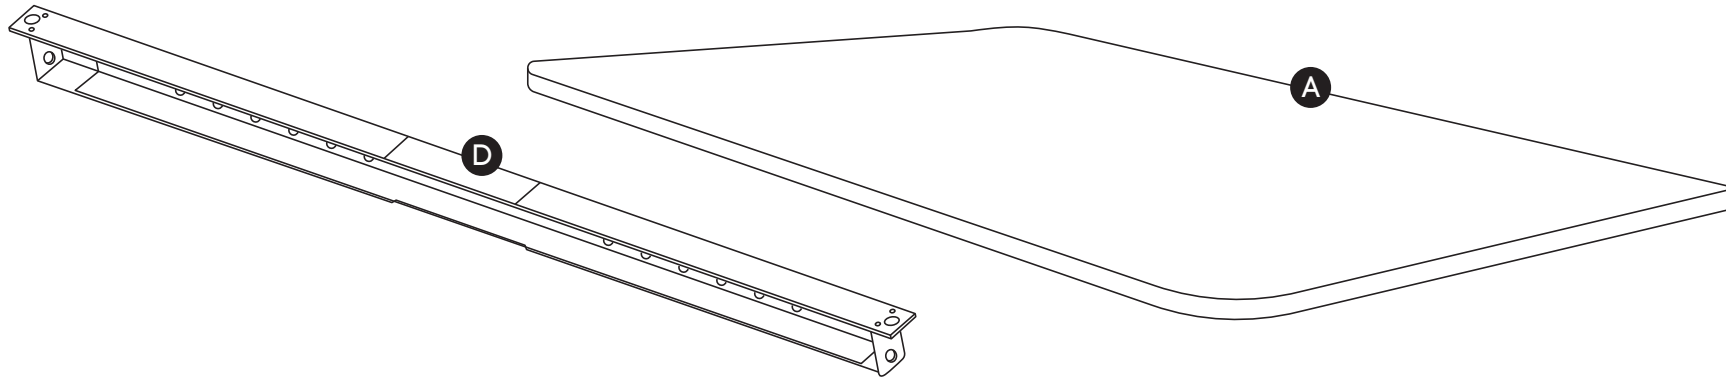




COMPONENTS

- A Table top x1
- B Leg Quadro x2
- C Leg Quadro Loop x2
- D Beam x1 *
- E Plastic bracket x4

SCREWS

- F M8x20MM CSK x2
- G M8x20MM Socket head x2
- H M6x20MM Socket head x4
- I M6x30mm Socket head x4

- J Allen key x2

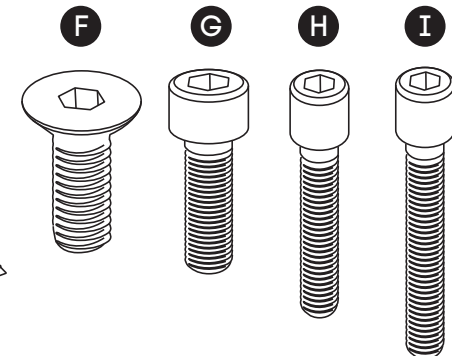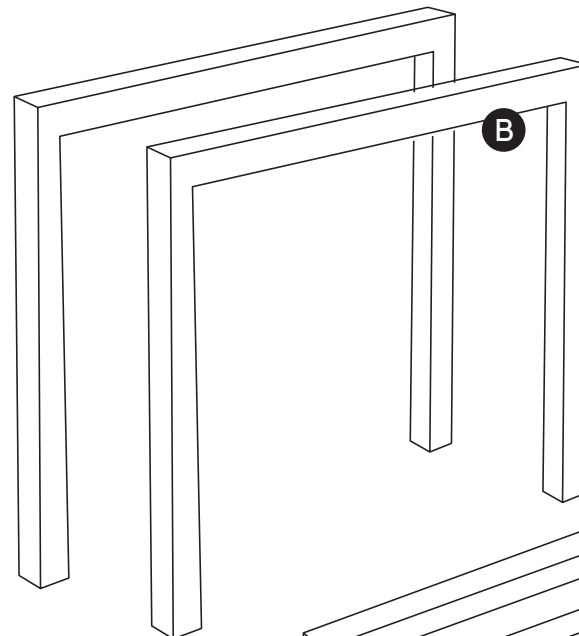

* Colour of the beam is always black, regardless desk frame colour.

ASSEMBLY INSTRUCTIONS

Quadro Loop Boardroom table


Size: 1800mm x 1100mm

www.jasonl.com.au


Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

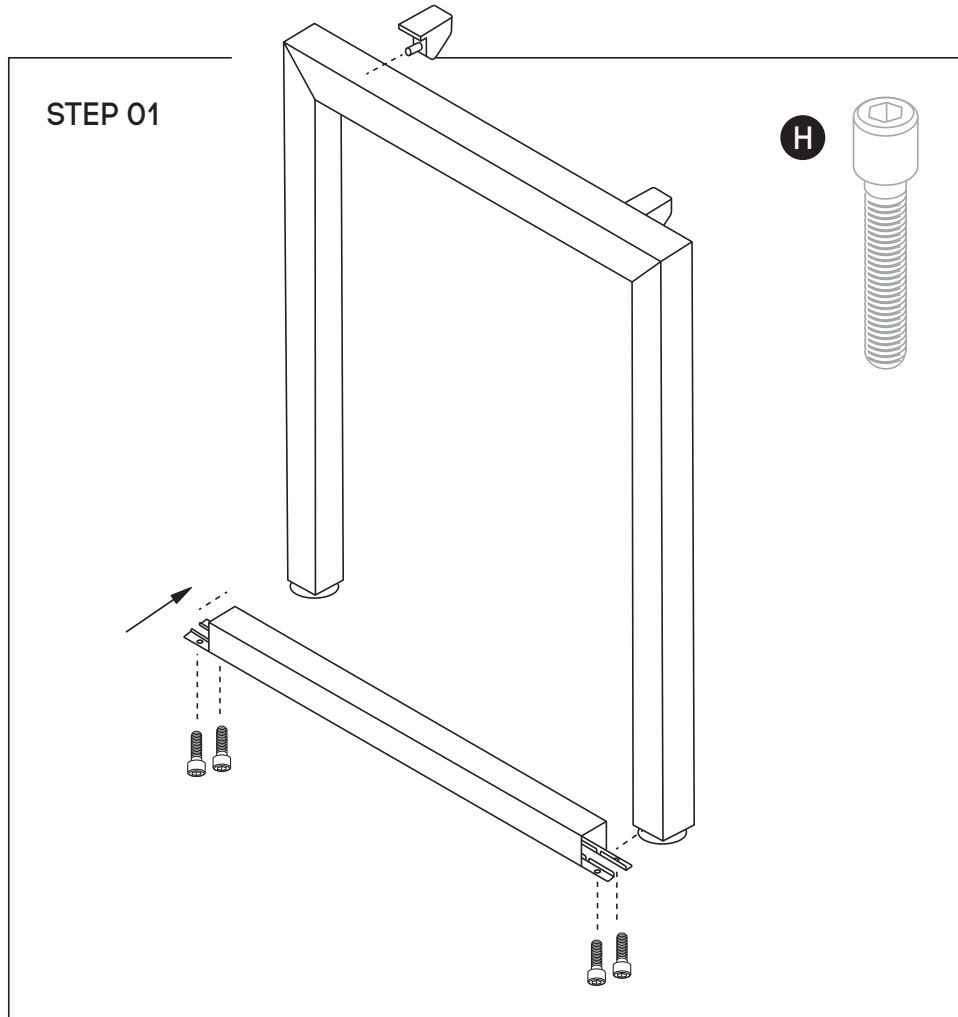

Using Allen Key provided, attach 2 plastic brackets per leg **(E)** (as per picture above) using M6x20MM **(H)** Socket head screw. Connect Loop Legs **(C)** to Bottom of Quadro Legs **(B)** by using 4 bolts per leg.

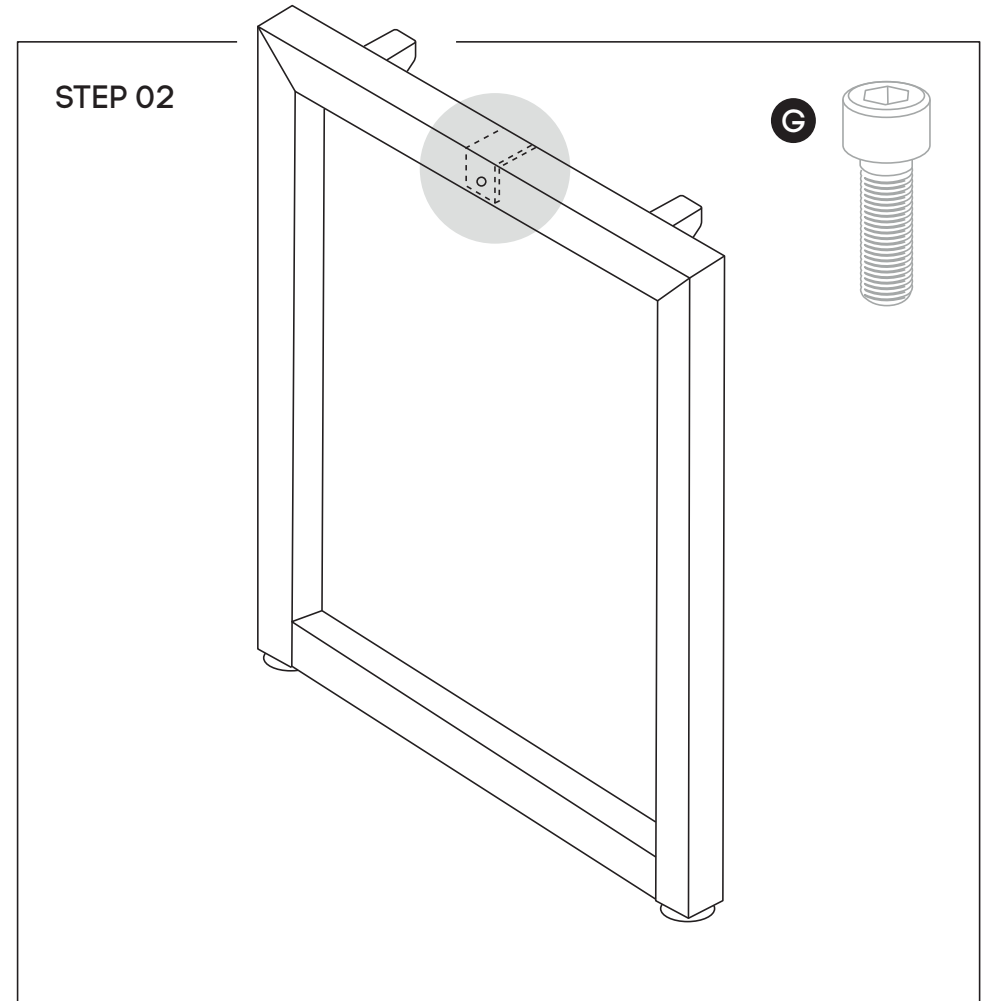

Using Allen Key provided, attach M8x20MM Socket head **(G)**-screw socket half way into leg for both legs **(B)**

ASSEMBLY INSTRUCTIONS

Quadro Loop Boardroom table

Size: 1800mm x 1100mm

www.jasonl.com.au

Need help!

Call us on
1300 527 665



jason.l
your office furniture mate



STEP 03

Secure 1200mm beam **(D)**

Adjust extendable beam to desired length using markers and secure beam at that length using screws provided

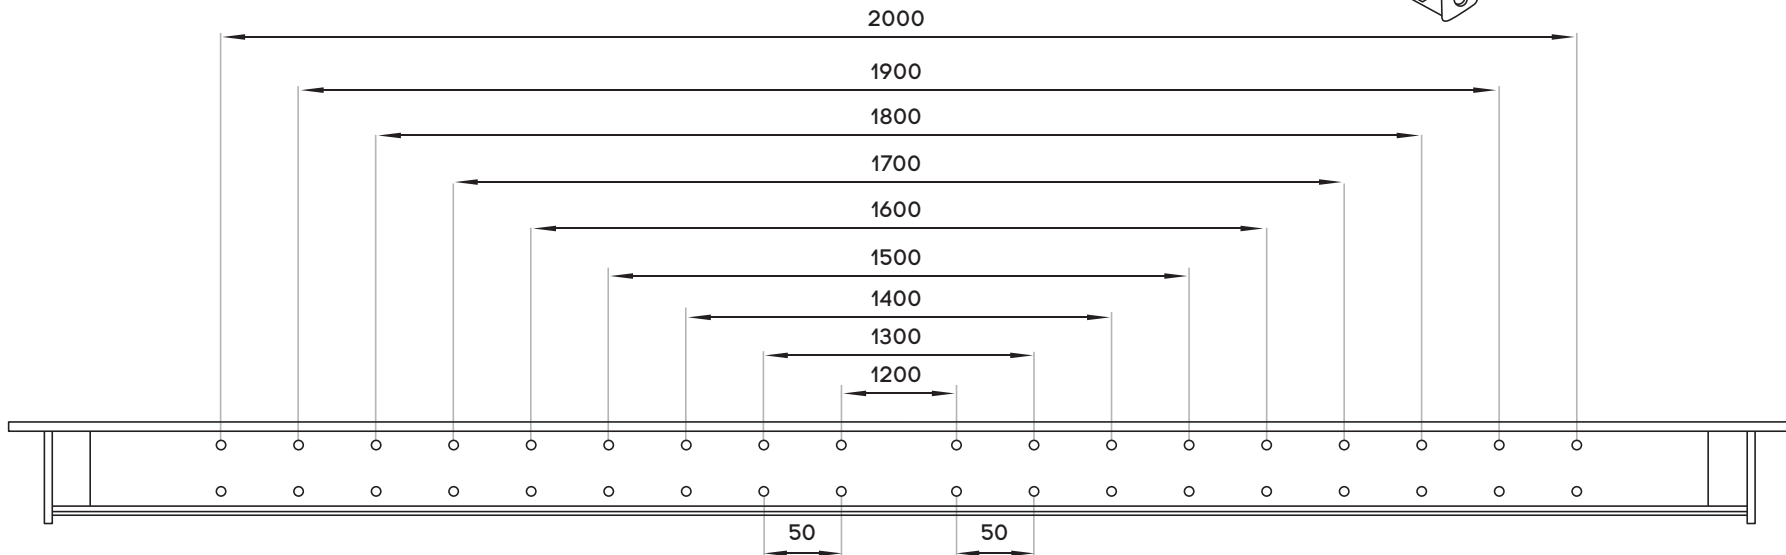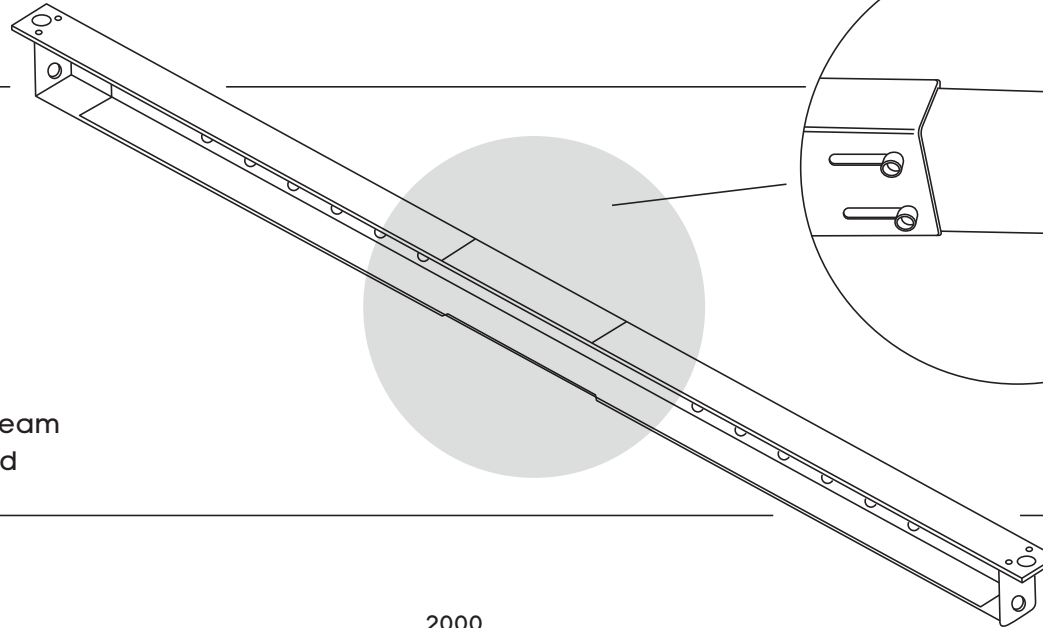

ASSEMBLY INSTRUCTIONS

Quadro Loop Boardroom table



Size: 1800mm x 1100mm

www.jasonl.com.au


Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

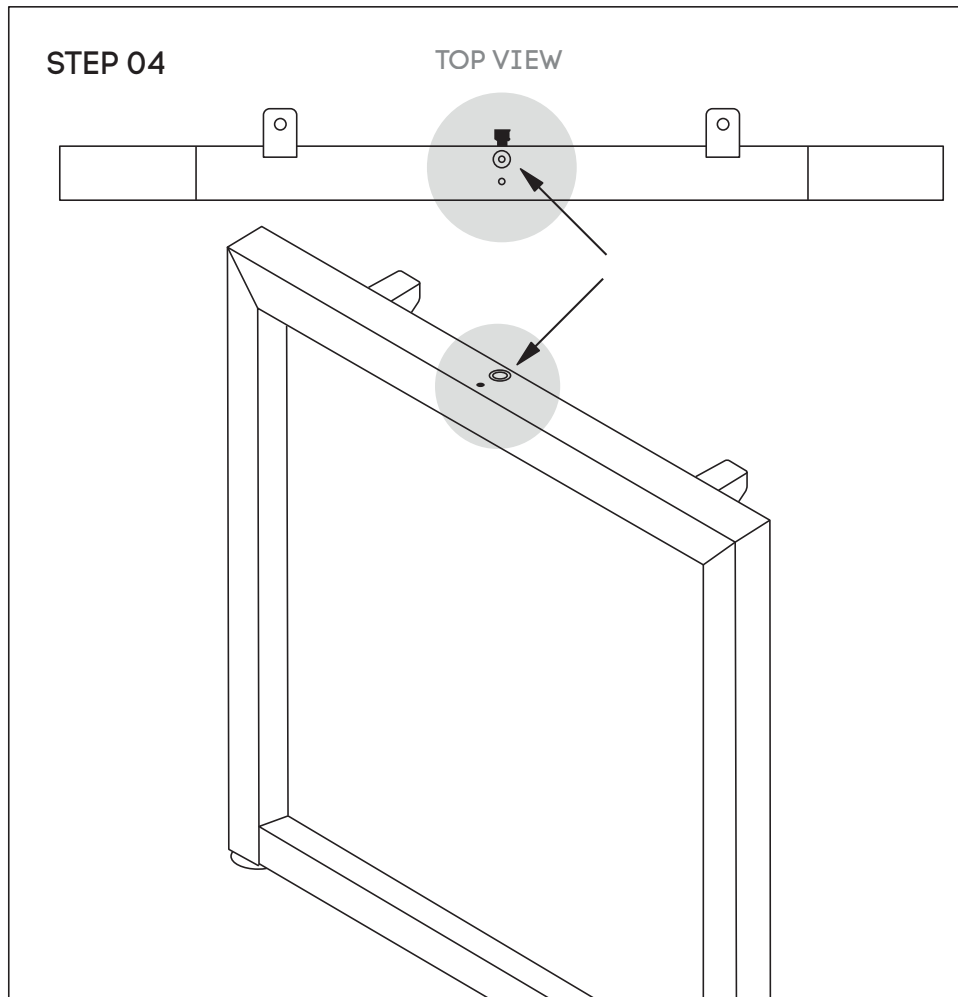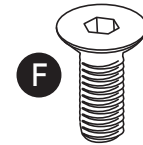

Attach beam **(D)** to legs **(B)** using nut insert in legs.
See point attached

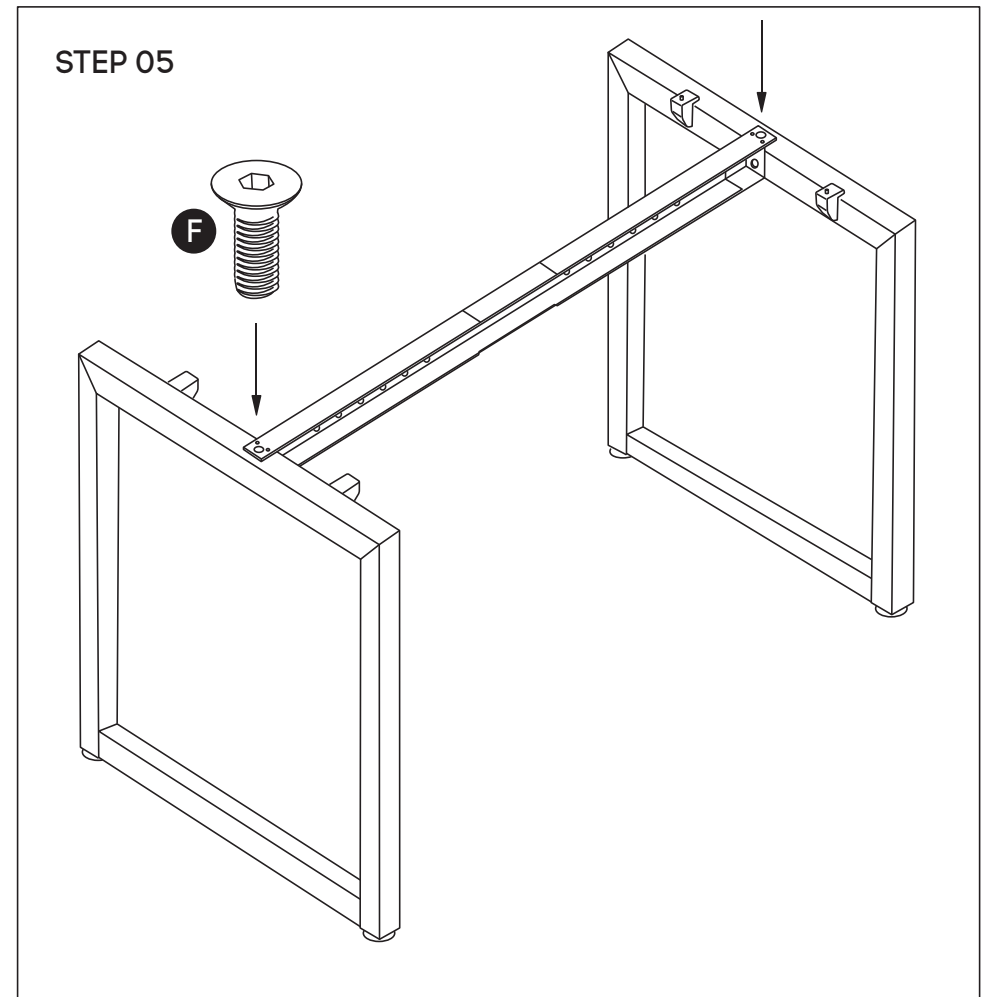

Frame looks like this. Using Allen Key, attach beam **(D)** with Socket **(F)**

ASSEMBLY INSTRUCTIONS

Quadro Loop Boardroom table


Size: 1800mm x 1100mm

www.jasonl.com.au


Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

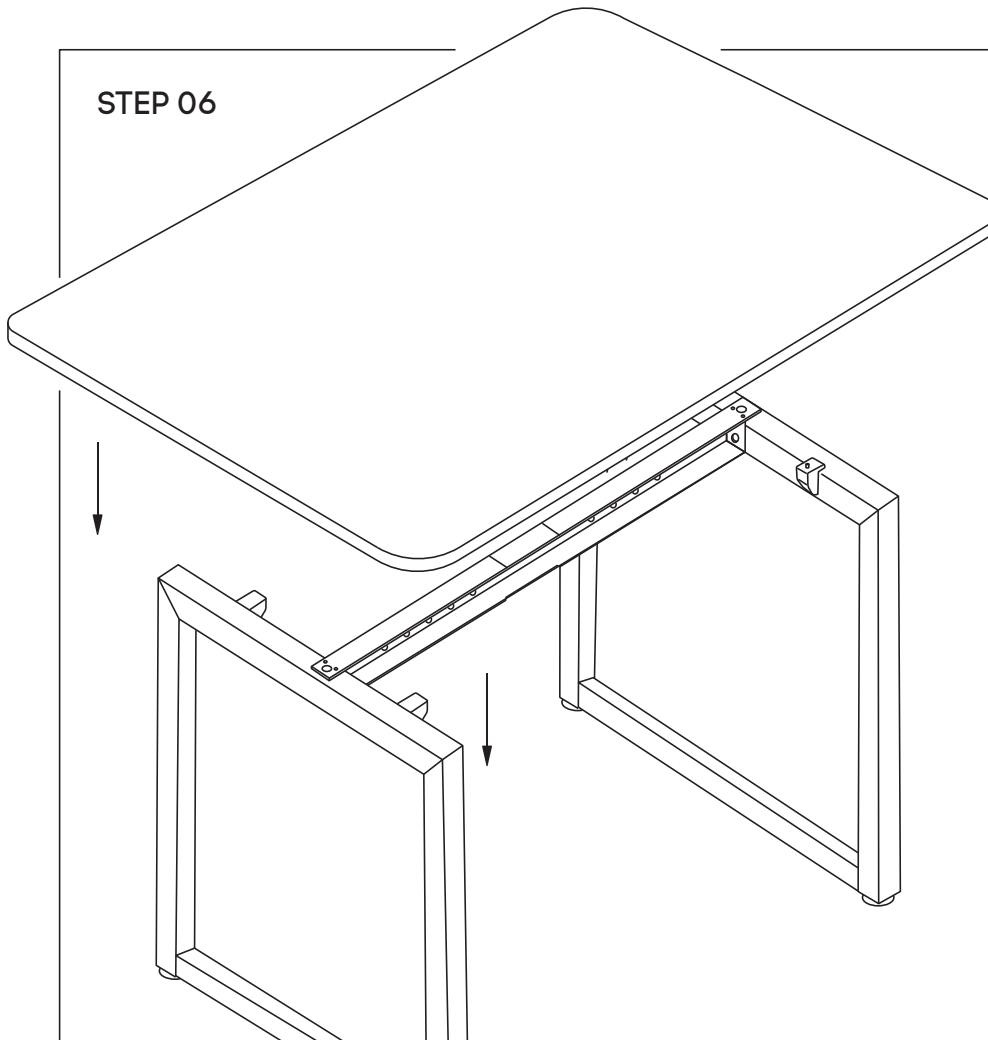

Place the desktop on top of the frame. Please place the legs ideally indented around 300mm from each end left and right of the Tops, Place the legs centred at the same distance equally from the front and back of the top.

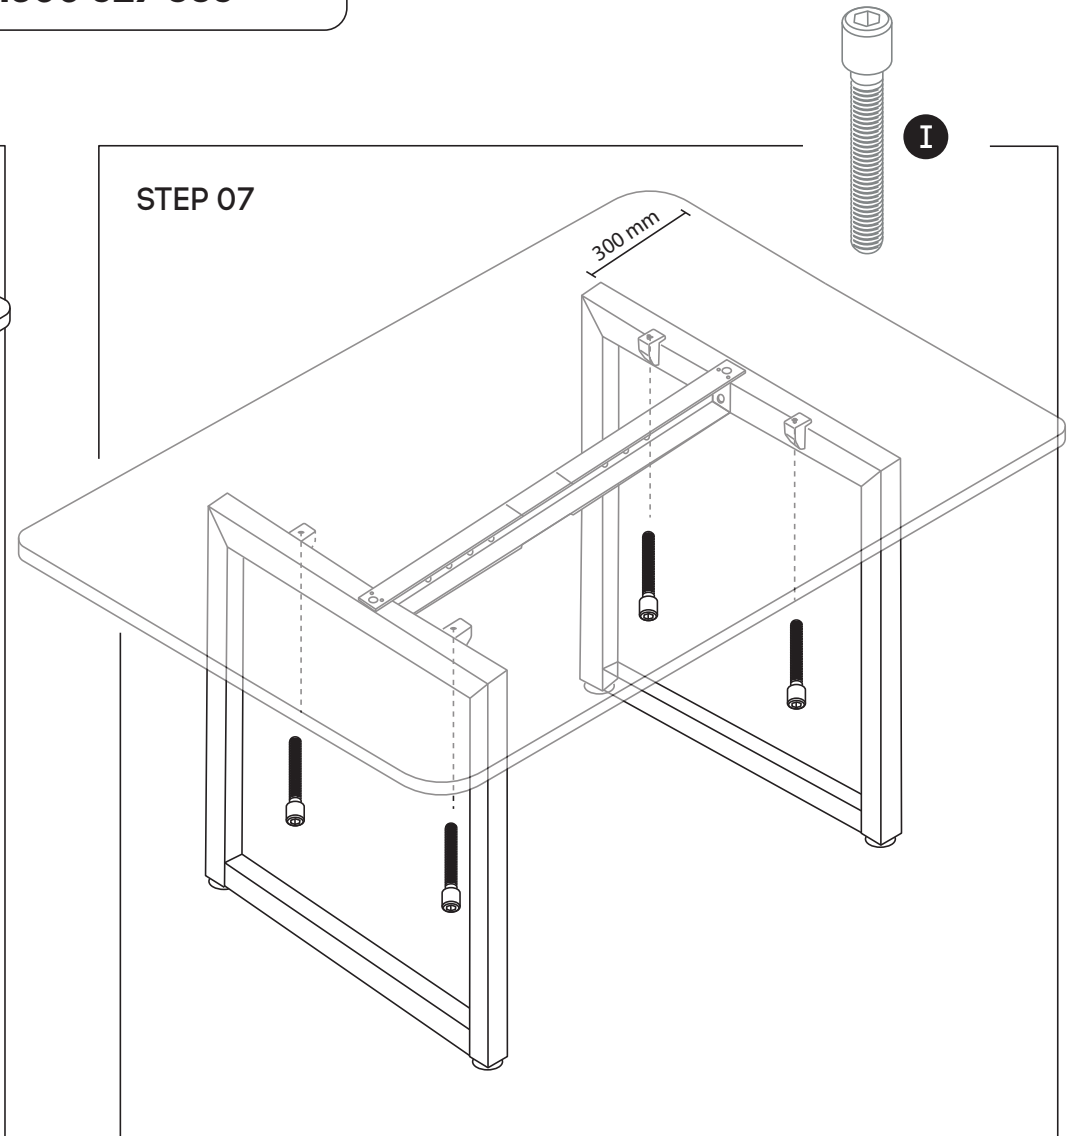

Please drill M6x30MM Socket head (**I**) through the plastic brackets into the underneath of the tops.