
ASSEMBLY INSTRUCTIONS Quadro Loop 2P workstation

Sizes: 1200, 1400, 1600, 1800 mm

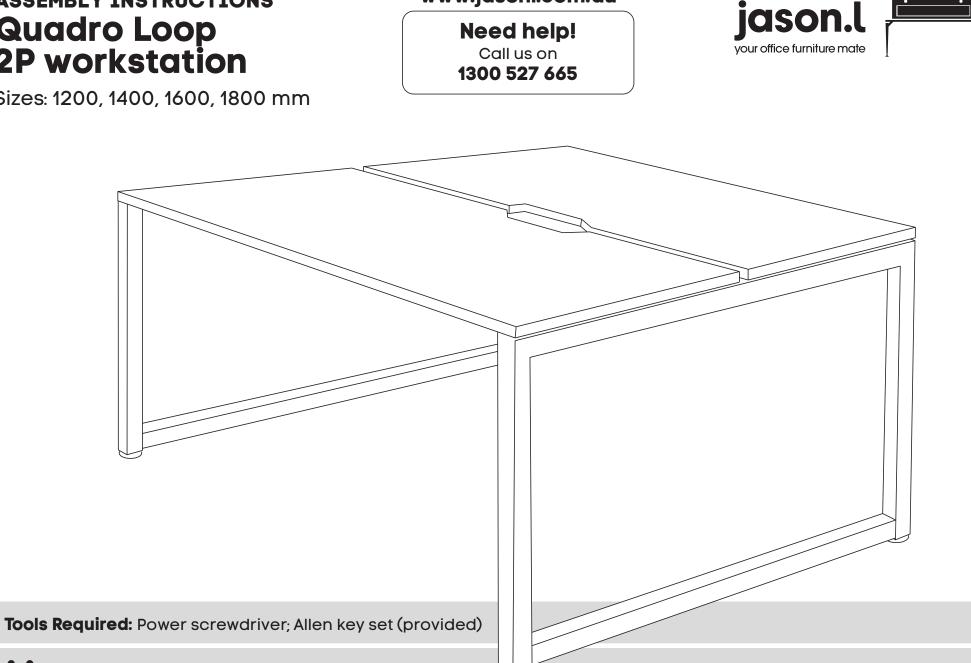


www.jasonl.com.au

ASSEMBLY INSTRUCTIONS Quadro Loop 2P workstation


Sizes: 1200, 1400, 1600, 1800 mm





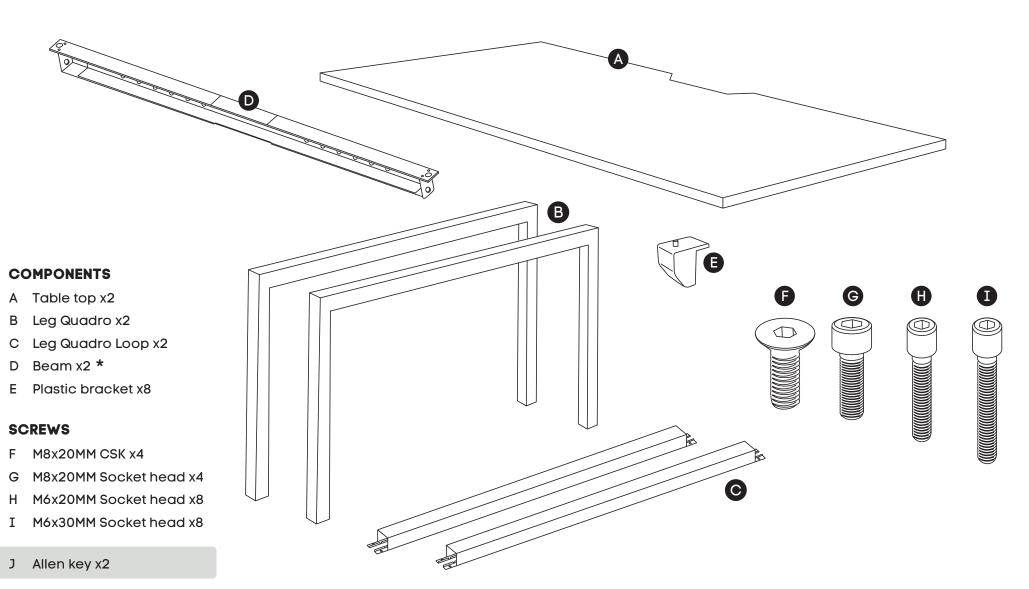


* Colour of the beam is always black, regardless desk frame colour.

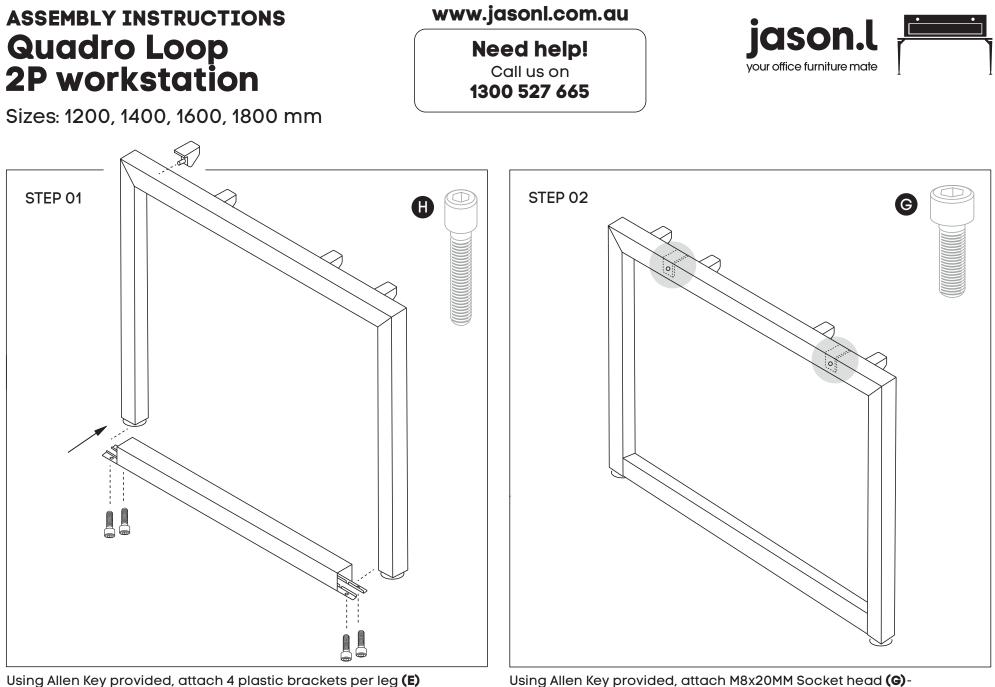


screw socket half way into leg for both legs (B).

Using Allen Key provided, attach 4 plastic brackets per leg **(E)** (as per picture above) using M6x20MM **(H)** Socket head screw. Connect Loop Legs **(C)** to Bottom of Quadro Legs **(B)** by using 4 bolts per leg

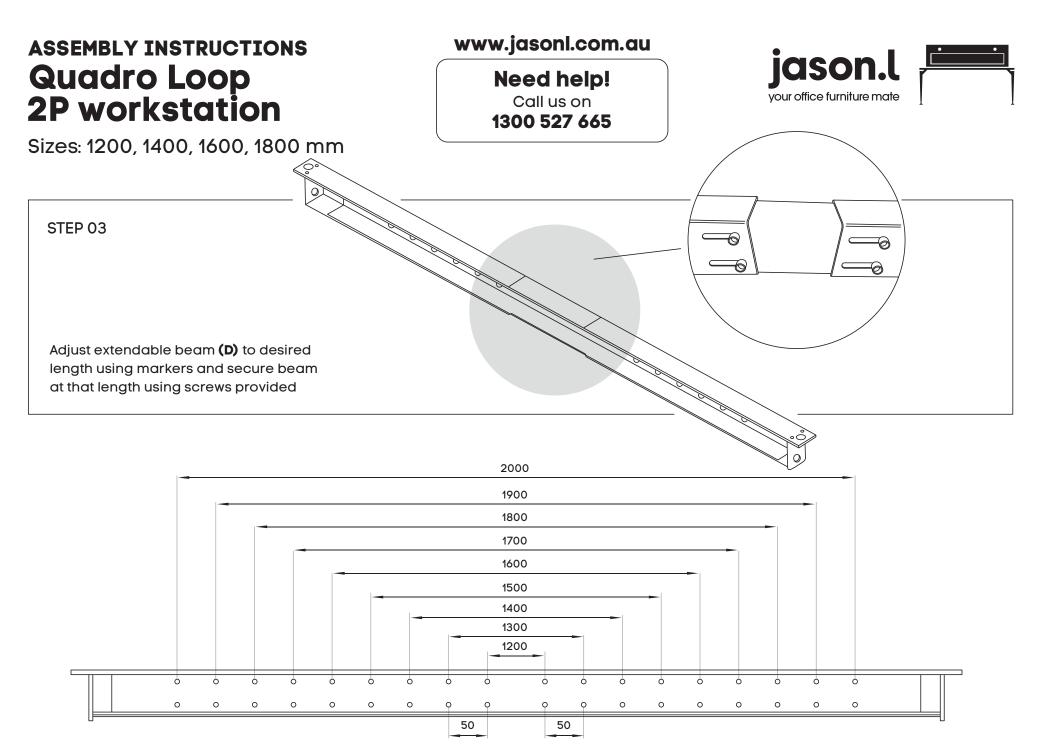

ASSEMBLY INSTRUCTIONS Quadro Loop 2P workstation

Sizes: 1200, 1400, 1600, 1800 mm

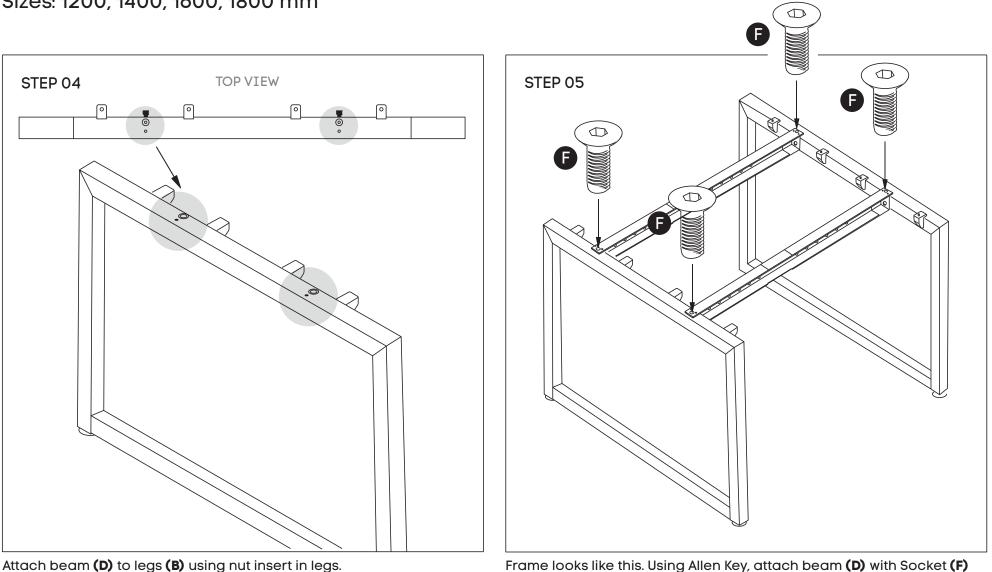


Need help!

Call us on 1300 527 665

Attach beam (D) to legs (B) using nut insert in legs. See point attached

www.jasonl.com.au jason.l

your office furniture mate

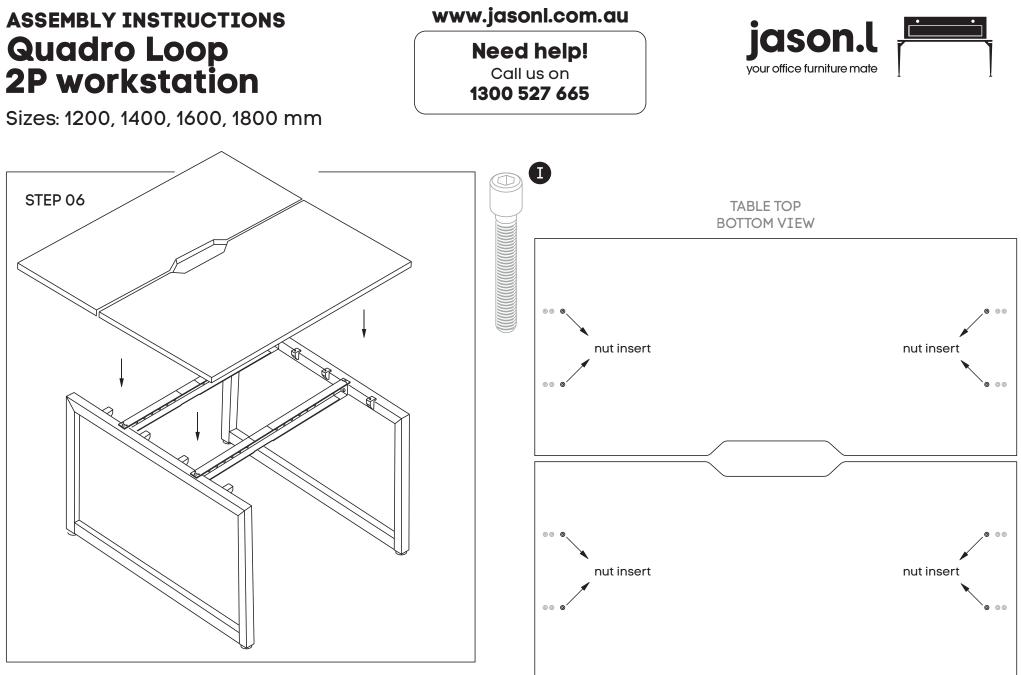

Place desktops ontop of frame - with cutout at the back of the desk. Nut inserts in top will align with plastic joiner brackets using M6x30MM **(I)** sockets attached tops to frame.