

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A

### 3P Run workstation


Sizes: 1200, 1400, 1600, 1800 mm

[www.jasonl.com.au](http://www.jasonl.com.au)


**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

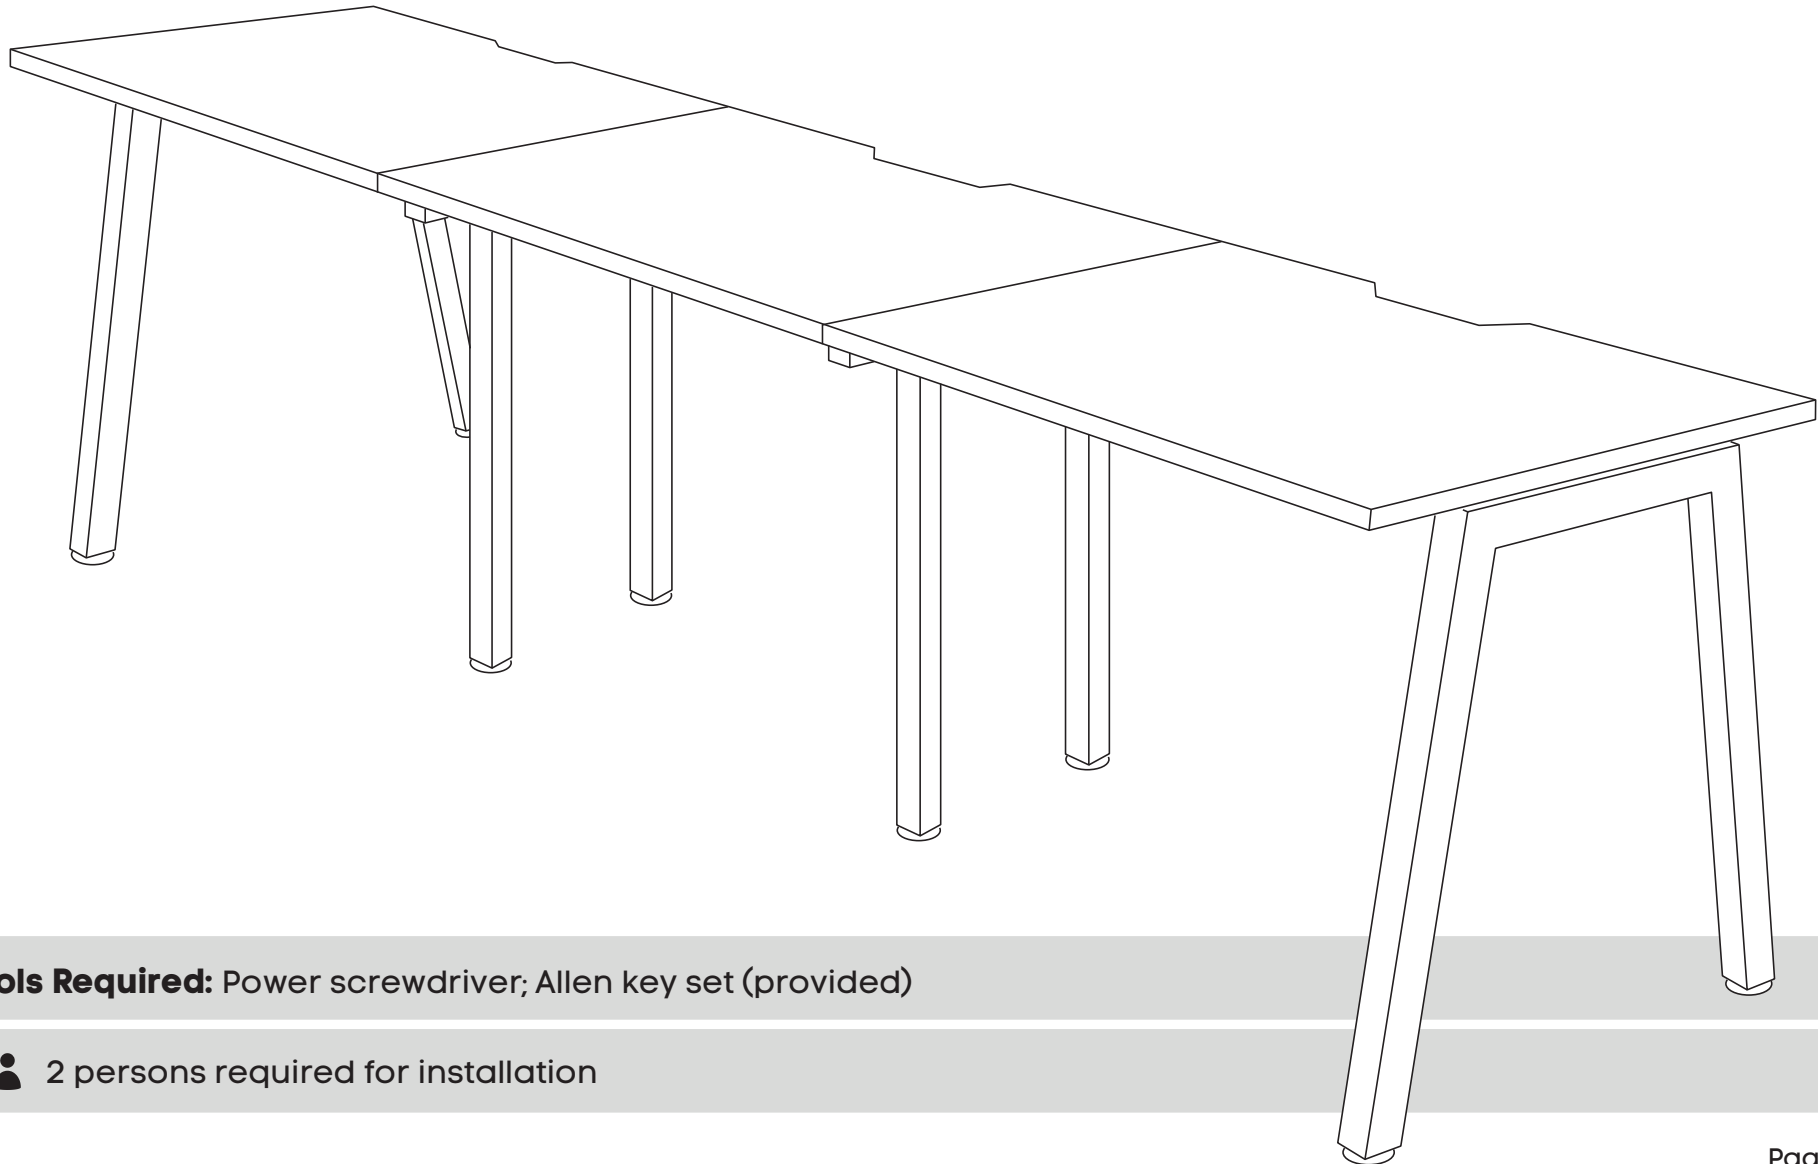

**Tools Required:** Power screwdriver; Allen key set (provided)

 2 persons required for installation

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A

### 3P Run workstation


Sizes: 1200, 1400, 1600, 1800 mm

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

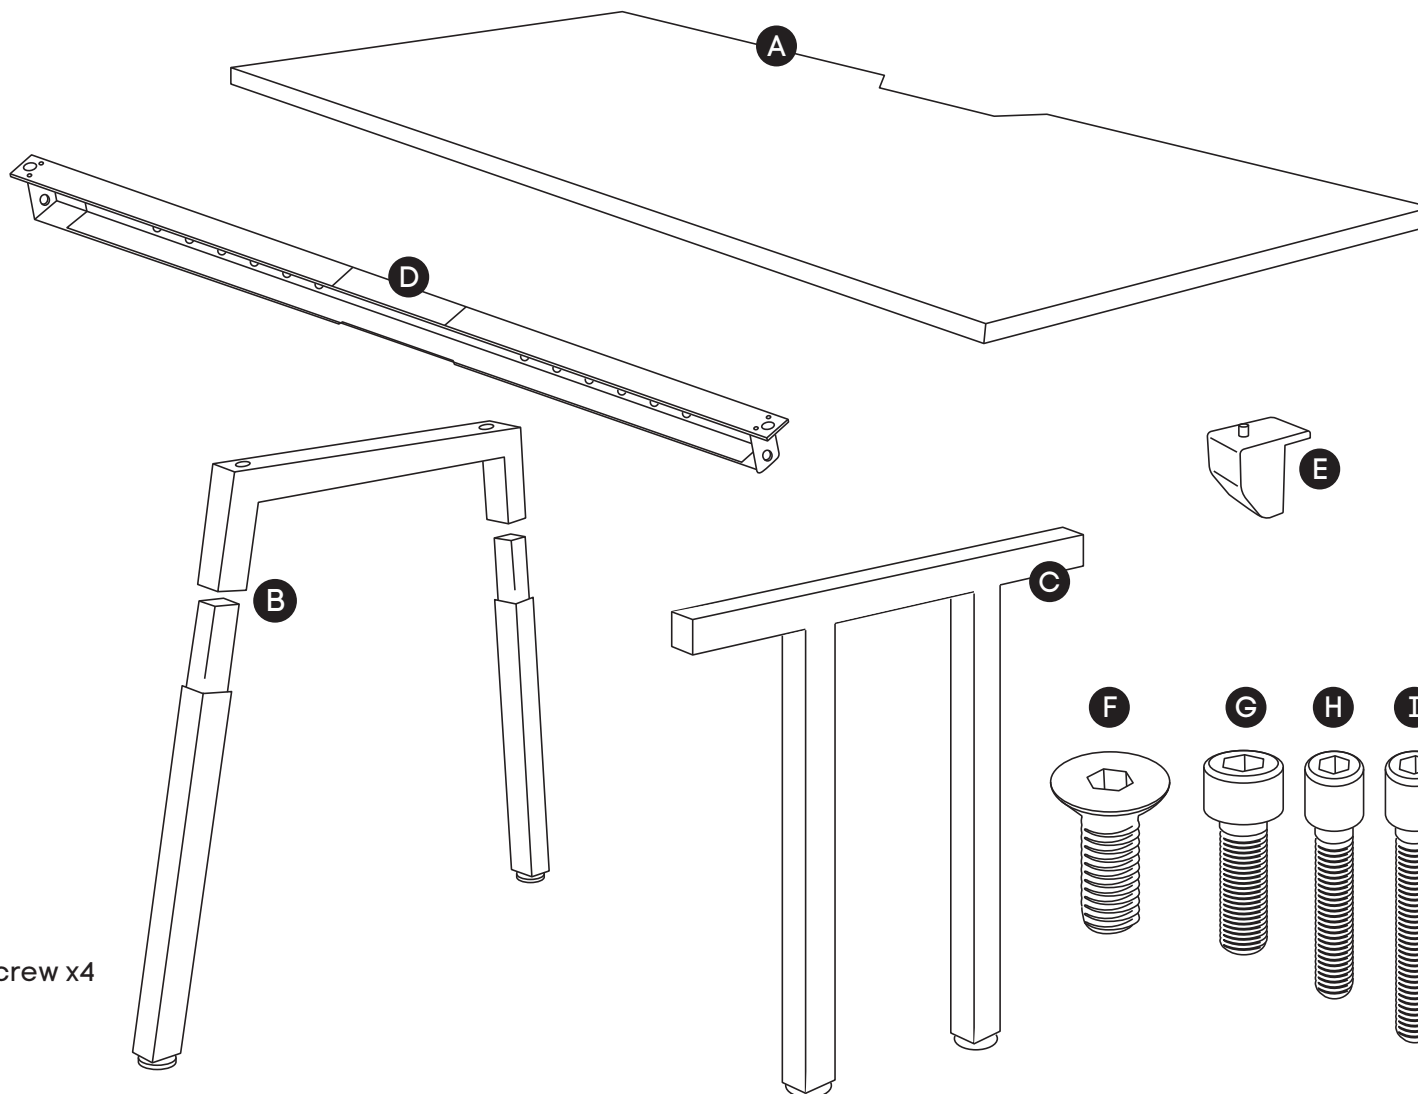

#### COMPONENTS

- A Table top x3
- B Leg Quadro A x2
- C Connector frame x2
- D Beam x3 \*
- E Plastic bracket x12

#### SCREWS

- F M8x20MM CSK x6
- G M8x20MM Socket head x6
- H M6x20MM Socket head x12
- I M6x30MM Socket head x12
- J M6x30mm Mushroom head screw x4

- K Allen key x2

\* Colour of the beam is always black, regardless desk frame colour.

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A 2P Run workstation

Sizes: 1200, 1400, 1600, 1800 mm

[www.jasonl.com.au](http://www.jasonl.com.au)


**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate




### STEP 01

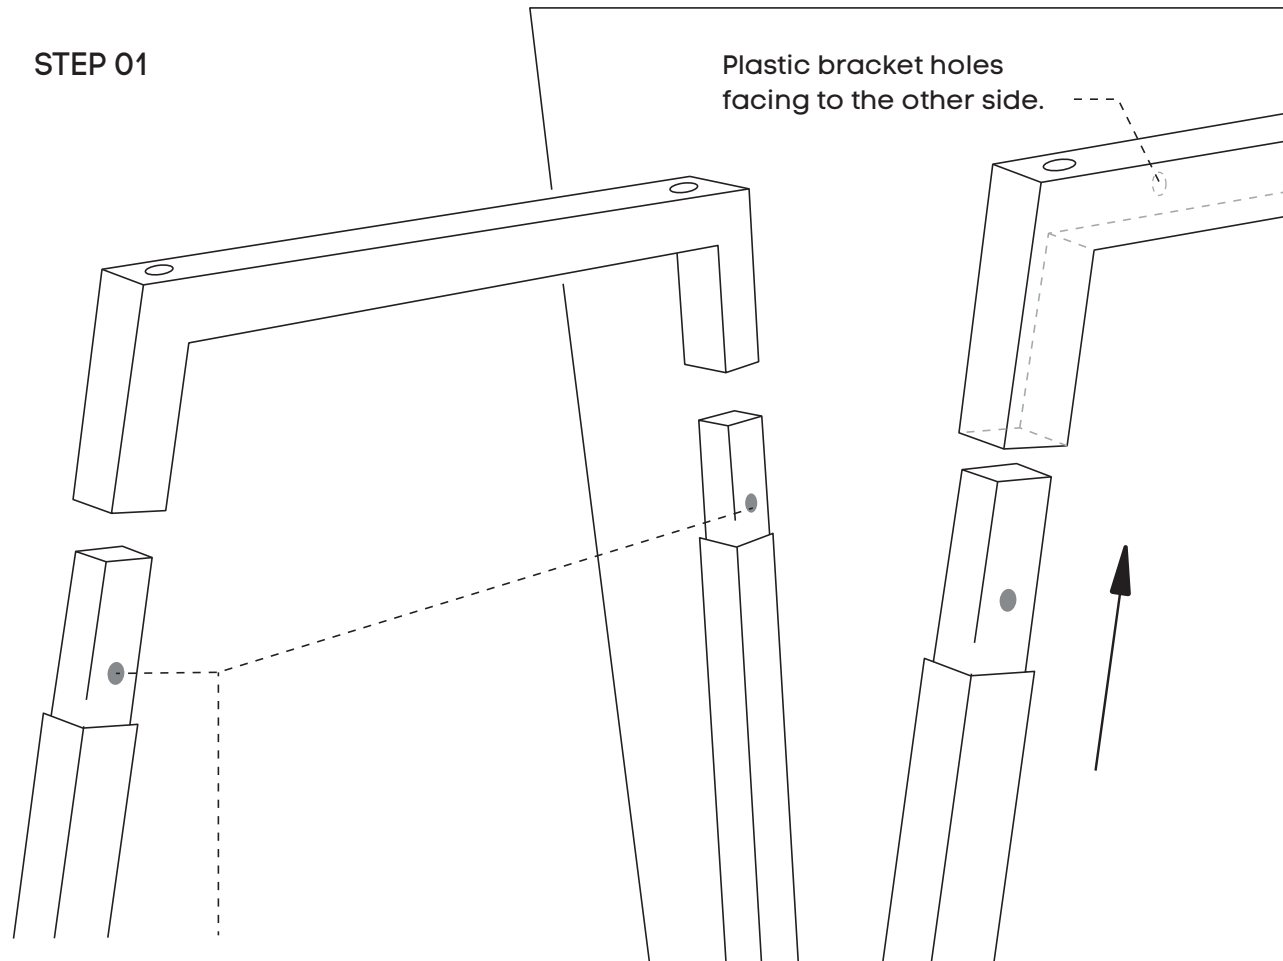

You will notice two colored stickers located on each leg.

Both legs must have the colour sticker facing away from where the plastic brackets are inserted.

### STEP 02

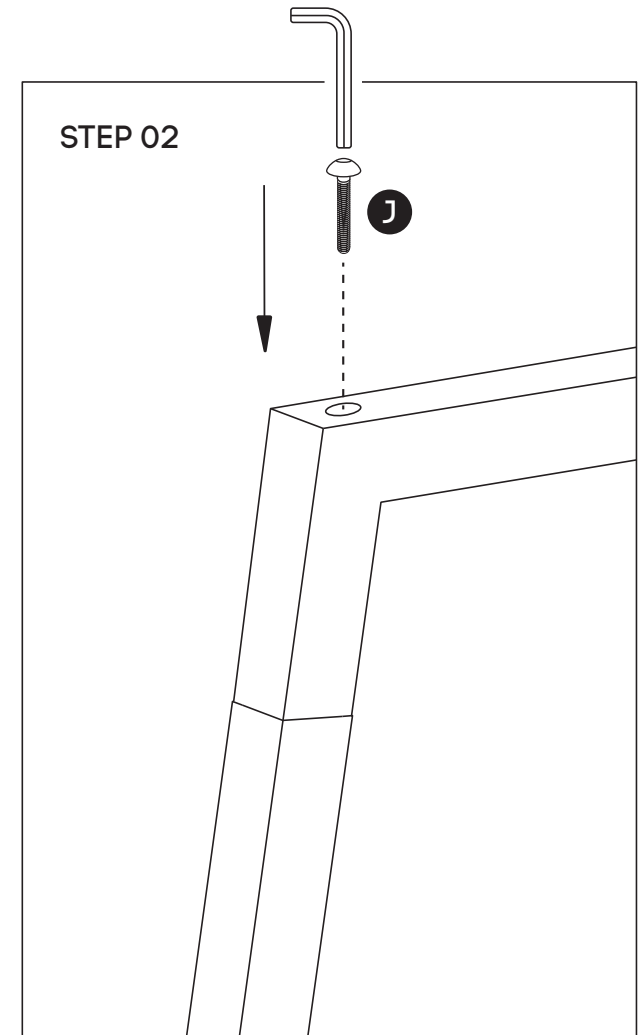

Insert the bottom of the legs as shown in the illustration. Using Allen Key provided, attach Mushroom Head Screw (J) - for all legs.

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A

### 2P Run workstation


Sizes: 1200, 1400, 1600, 1800 mm

[www.jasonl.com.au](http://www.jasonl.com.au)


**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

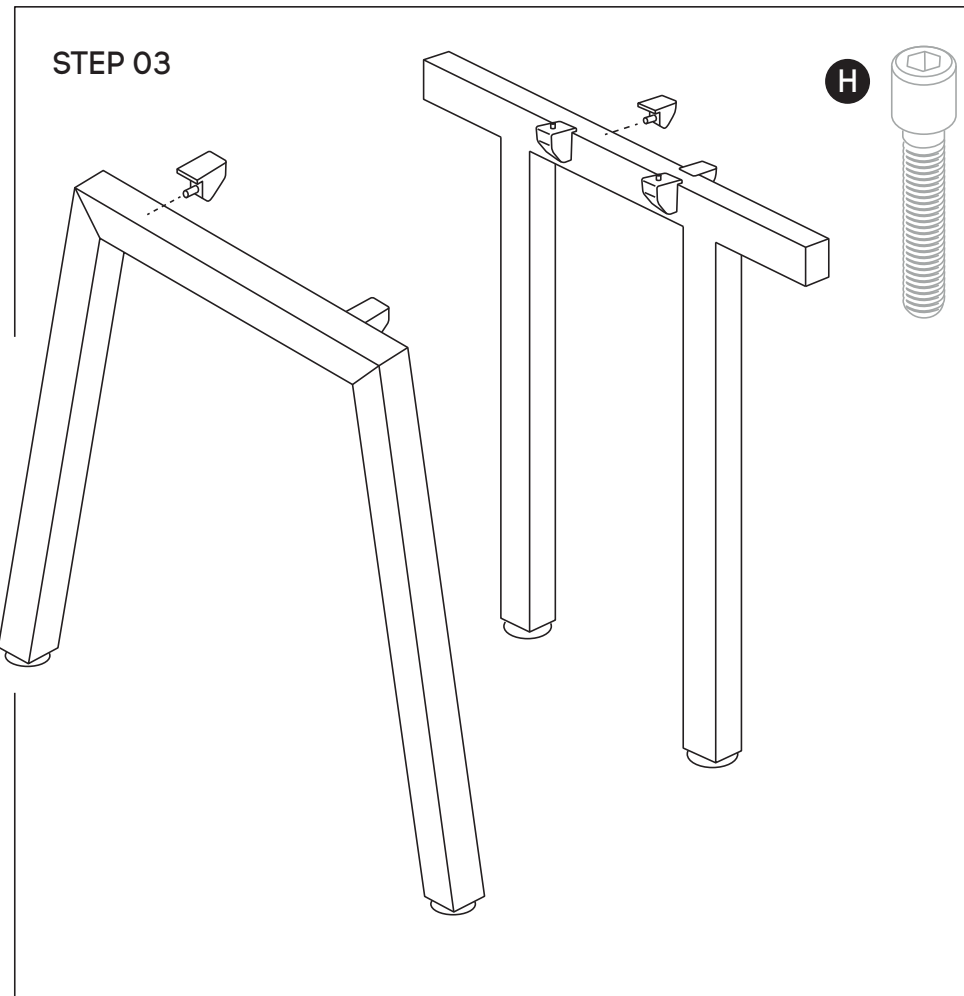

Using Allen Key provided, attach 2 plastic brackets per leg **(E)** (as per picture above) using M6x20MM **(H)** Socket head screw. Do the same with Connector frame **(C)**.

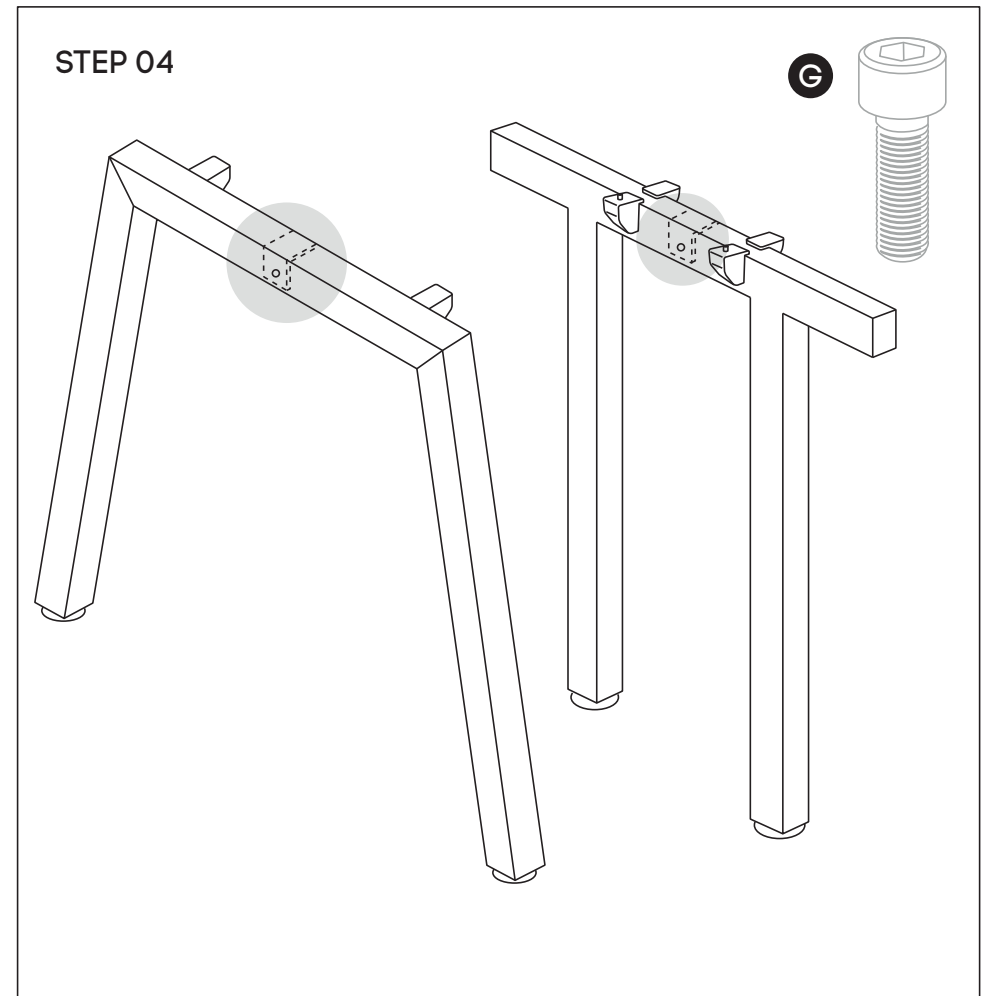

Using Allen Key provided, attach M8x20MM Socket head **(G)**-screw socket half way into leg for both legs **(B)** and into Connector frame **(C)**.

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A

### 2P Run workstation

Sizes: 1200, 1400, 1600, 1800 mm

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**



Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate



#### STEP 05

Adjust extendable beam **(D)** to desired length using markers and secure beam at that length using screws provided

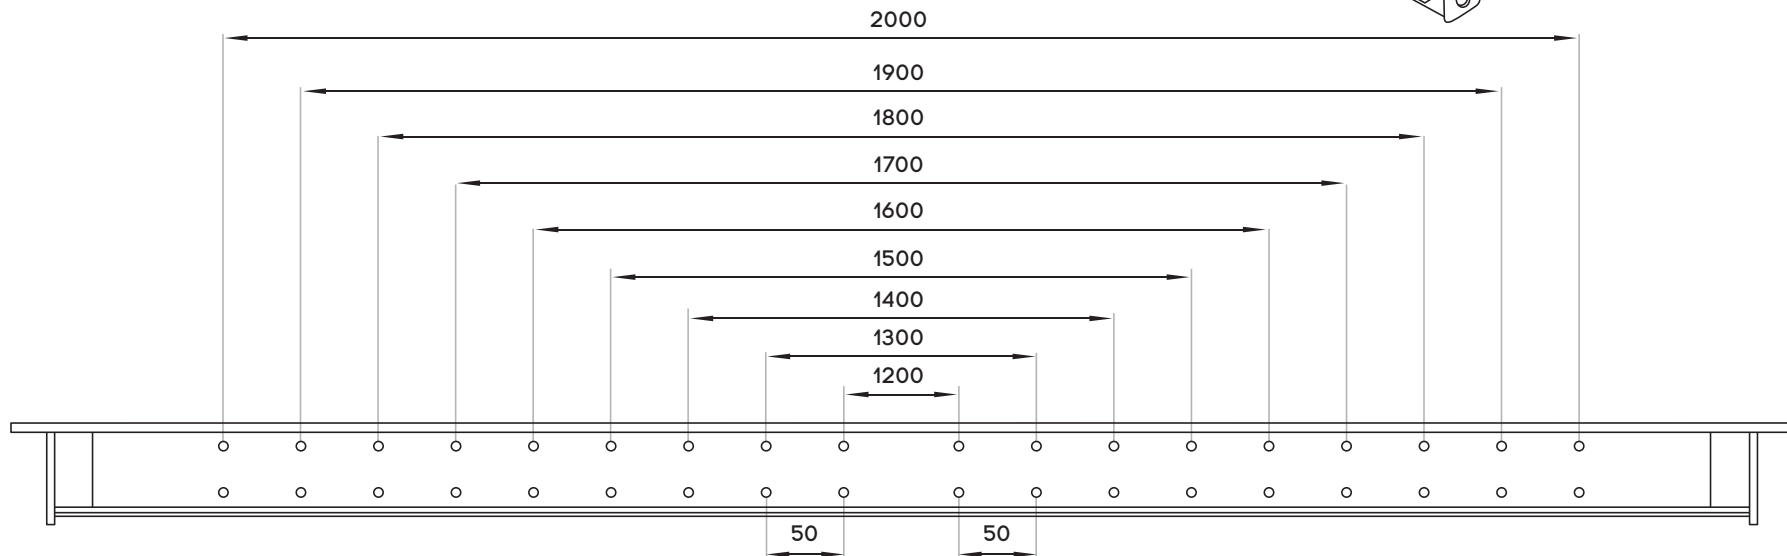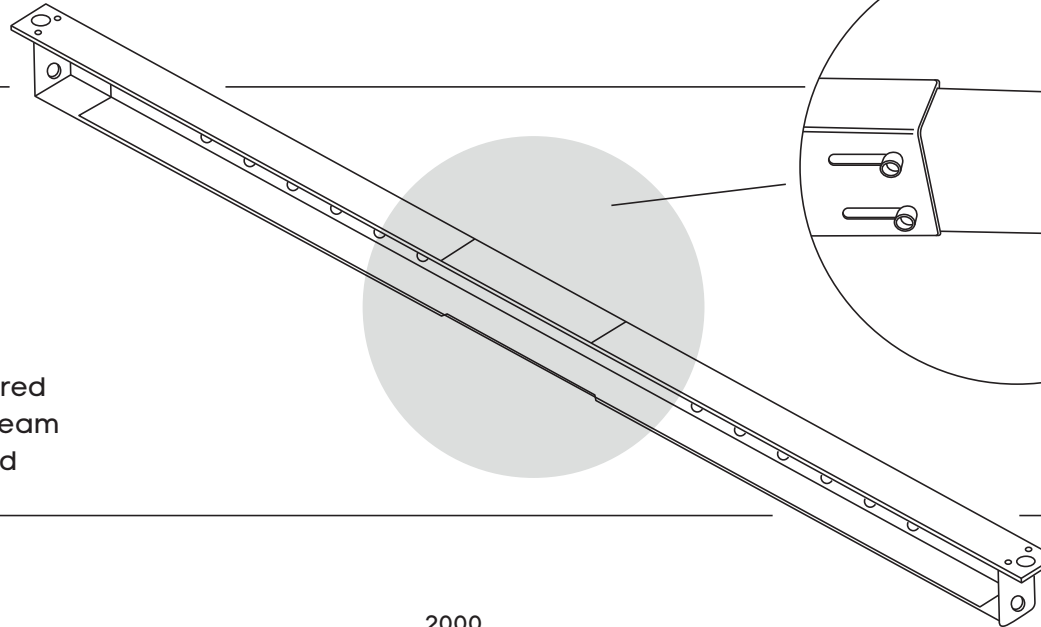

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A

### 2P Run workstation


Sizes: 1200, 1400, 1600, 1800 mm

[www.jasonl.com.au](http://www.jasonl.com.au)


**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

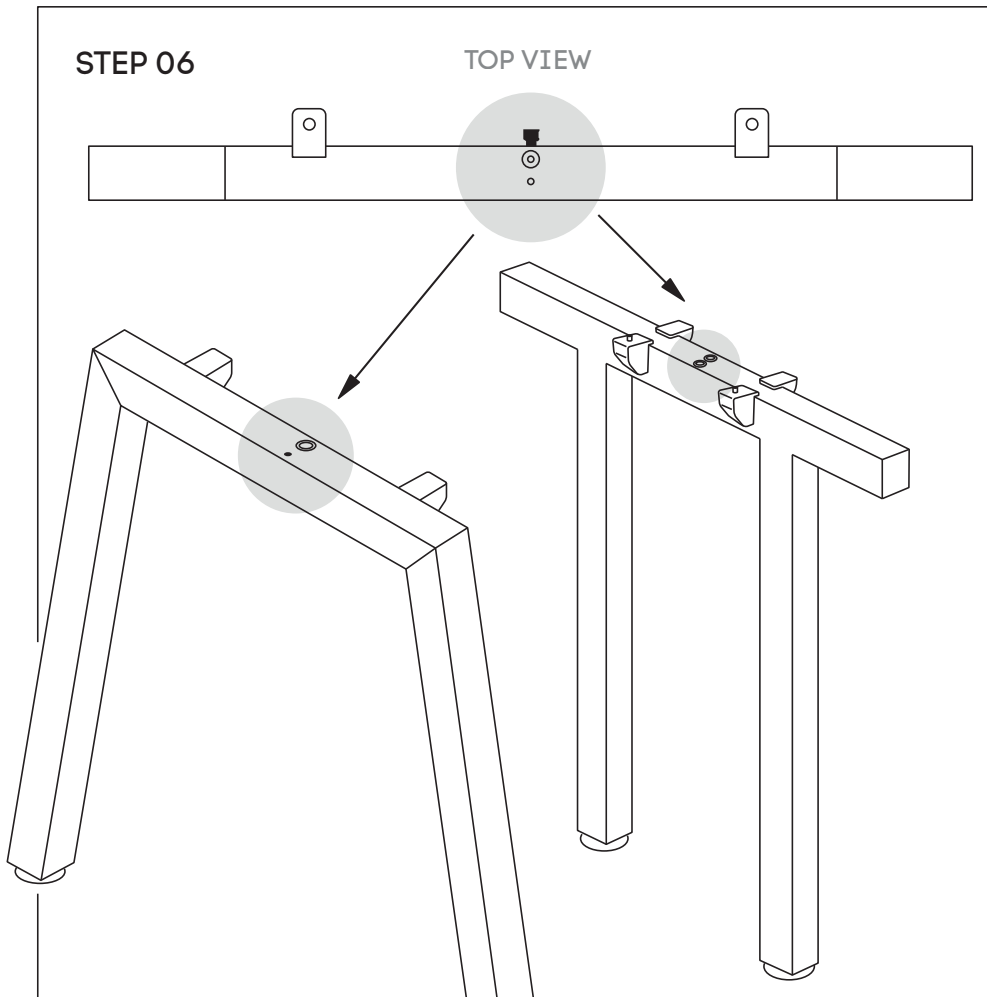

Attach beam **(D)** to legs **(B)** and Connector frame **(C)** using nut insert in legs. See point attached

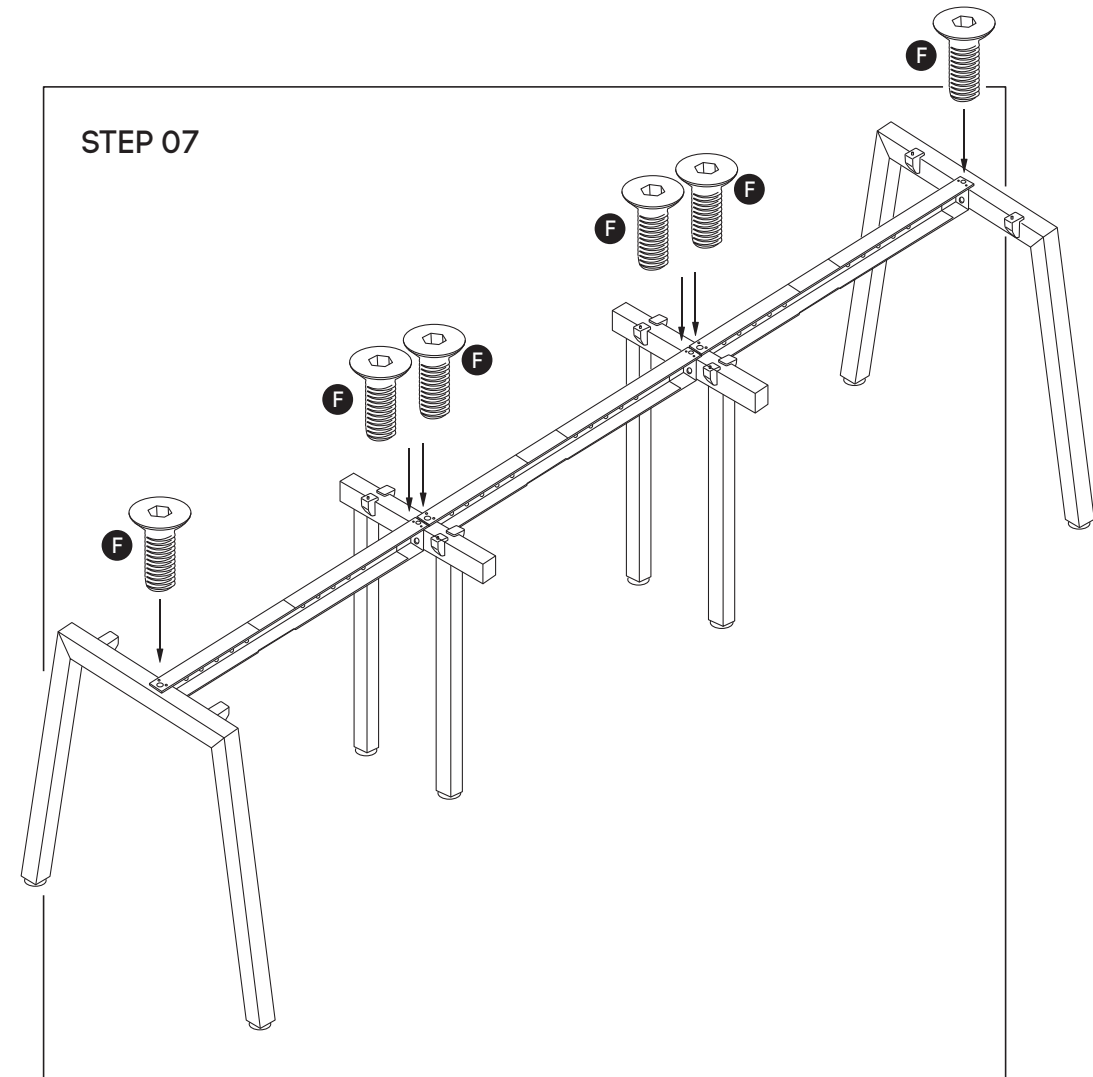

Frame looks like this. Using Allen Key, attach beam **(D)** with Socket **(F)**

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A

### 2P Run workstation

Sizes: 1200, 1400, 1600, 1800 mm

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate



STEP 08



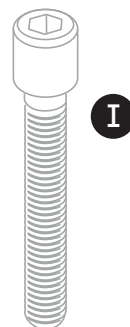


TABLE TOP  
BOTTOM VIEW

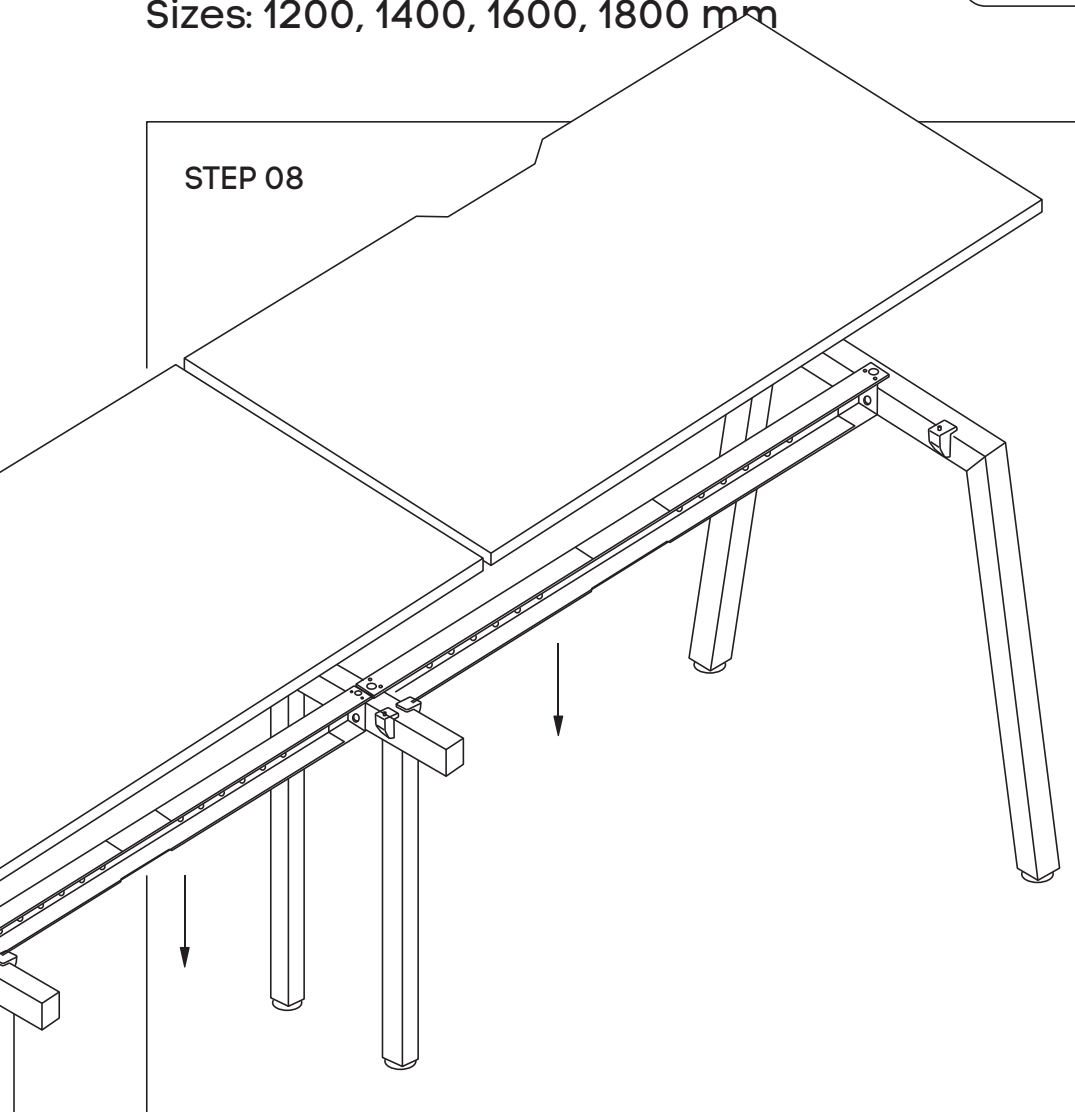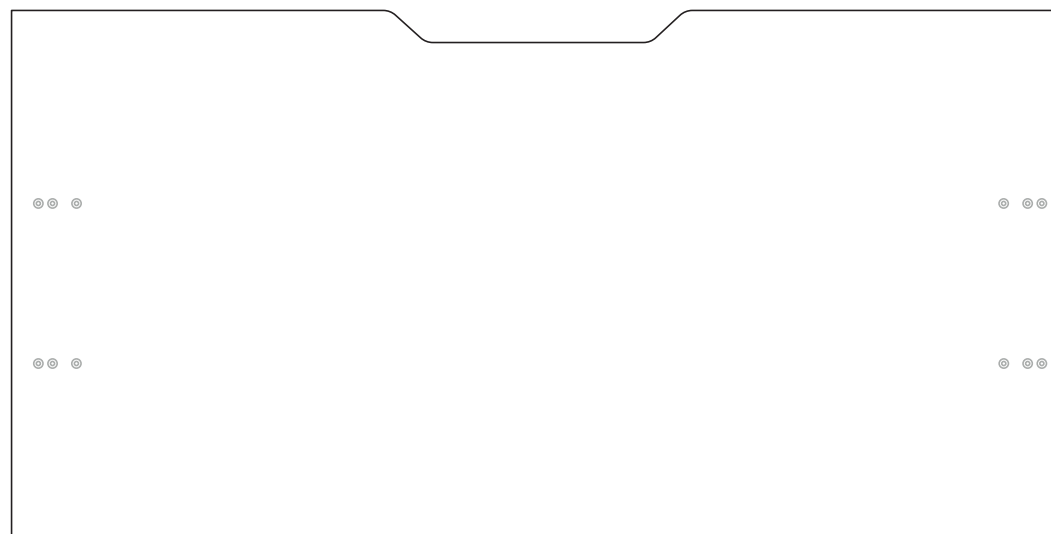

Place desktops ontop of frame - with cutout at the back of the desk.  
Nut inserts in top will align with plastic joiner brackets using M6x30MM  
(I) sockets attached tops to frame.

ASSEMBLY INSTRUCTIONS

# Quadro Wood A

## 2P Run workstation

Sizes: 1200, 1400, 1600, 1800 mm

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate



TABLE TOPS  
BOTTOM VIEW

The following nut inserts should be used for this specific desk / workstation

