
Quadro Wood A L-Shaped Desk

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!

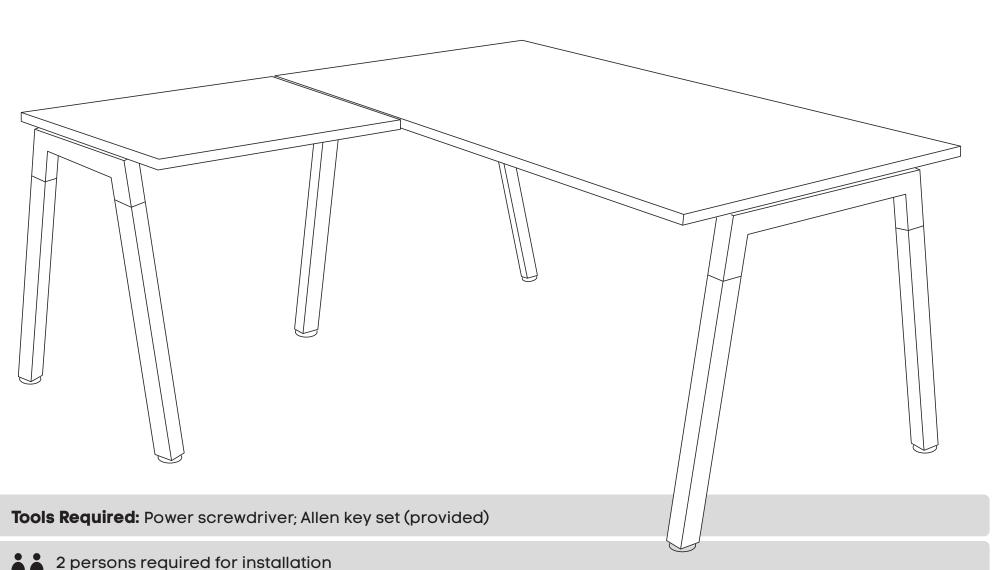



ASSEMBLY INSTRUCTIONS Quadro Wood A L-Shaped Desk


www.jasonl.com.au

Need help!

Call us on **1300 527 665**



Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

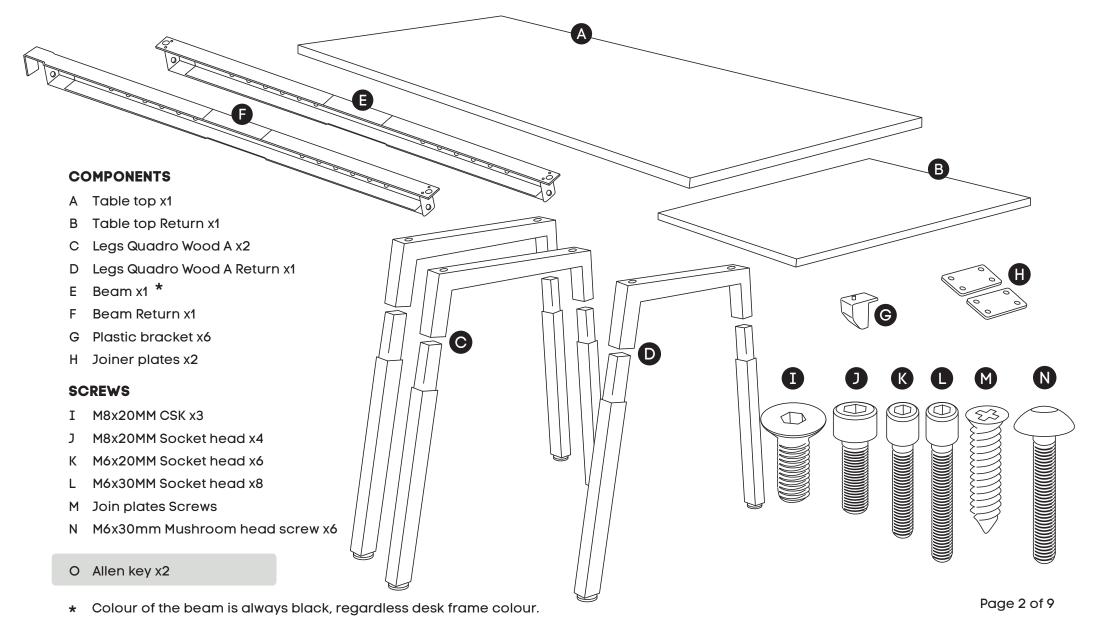

Quadro Wood A L-Shaped Desk

stickers located on each leg.

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!


Call us on **1300 527 665**

sticker facing away from where

the plastic brackets are inserted.



STEP 02

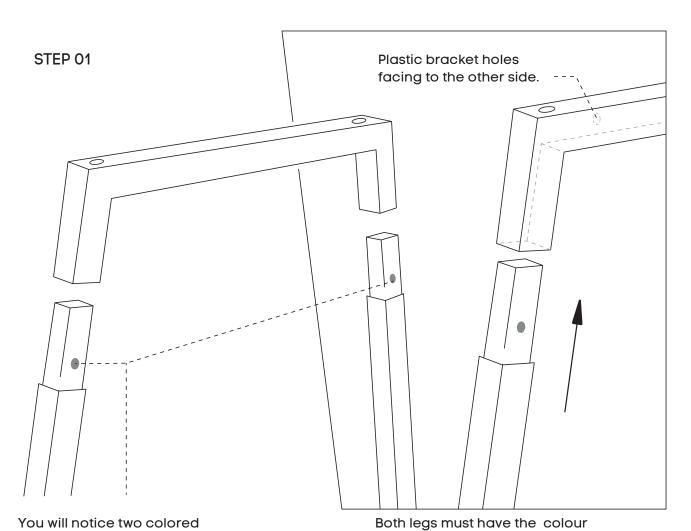

Insert the bottom of the legs as shown in the illustration. Using Allen Key provided, attach Mushroom Head Screw (N) - for all legs.


Quadro Wood A L-Shaped Desk

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm


www.jasonl.com.au

Need help!




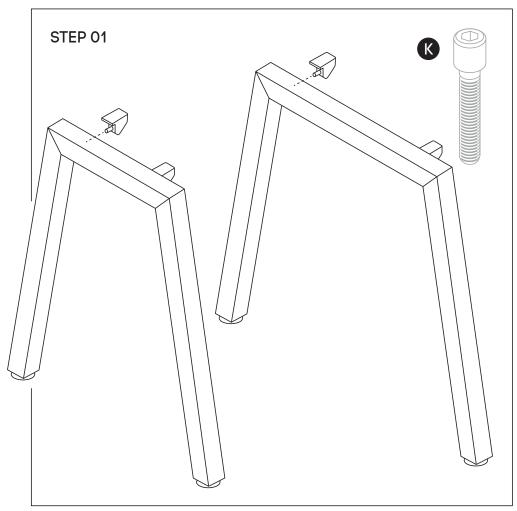



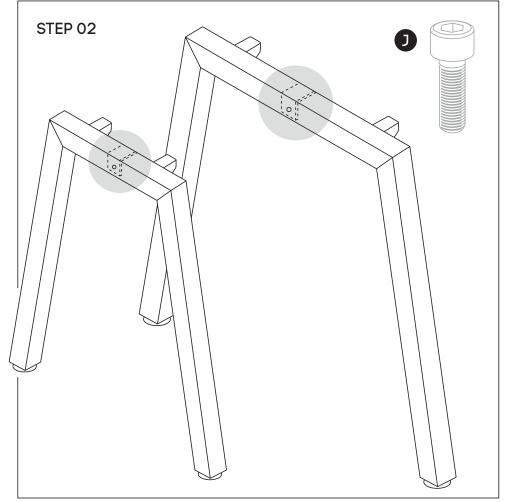

Using Allen Key provided, attach M8x20MM Socket head (J)-screw socket half way into leg for three legs (C & D)

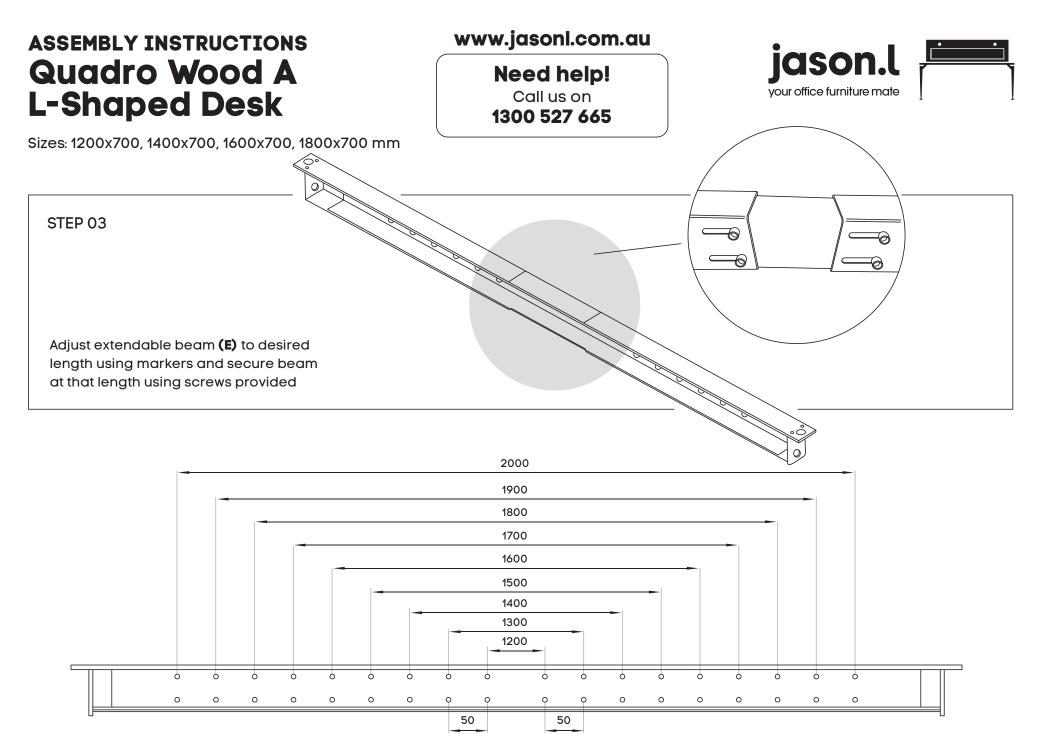

Quadro Wood A L-Shaped Desk


Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm


www.jasonl.com.au

Need help!





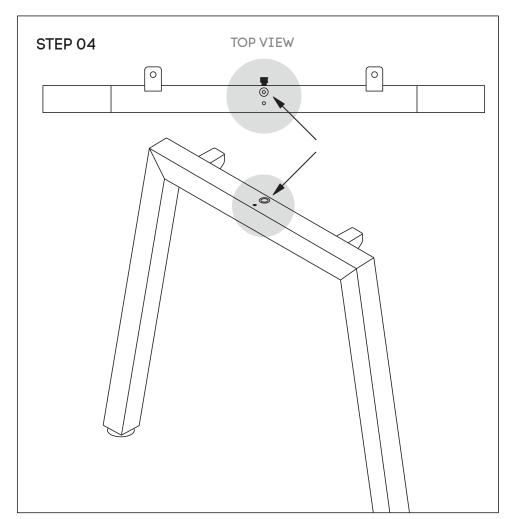

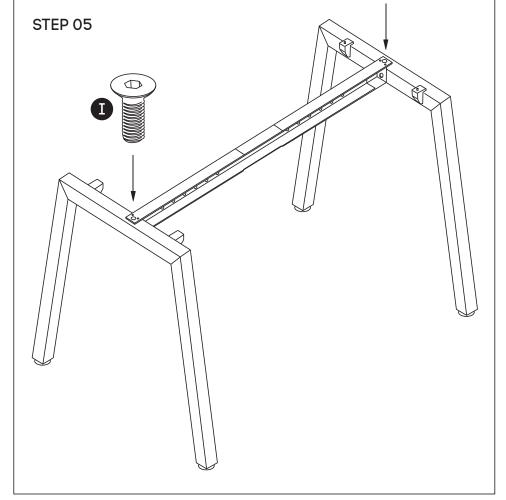

Attach beam **(E)** to legs **(C)** using nut insert in legs. See point attached

Frame looks like this. Using Allen Key, attach beam (E) with Socket (I)

Quadro Wood A L-Shaped Desk


Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!

Call us on **1300 527 665**



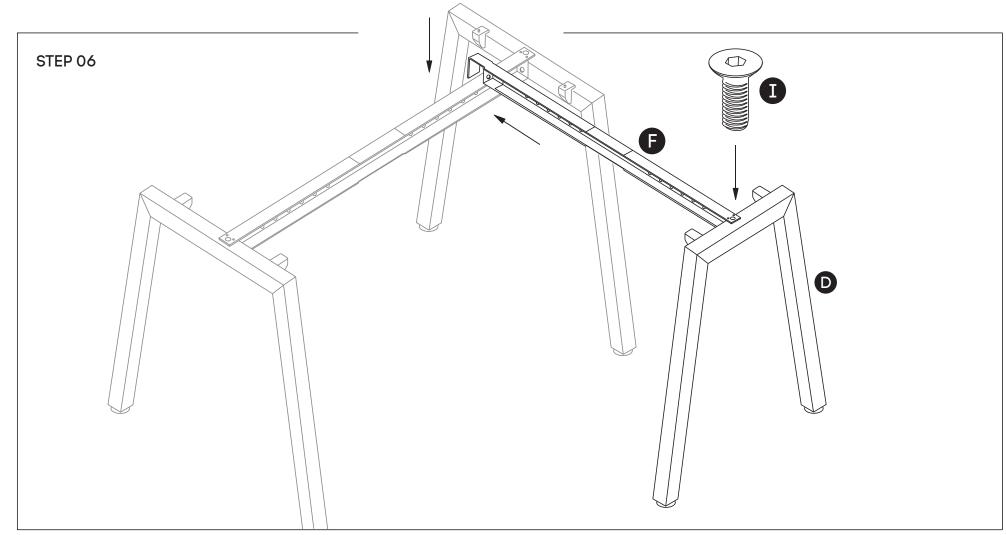

Now attach the return beam **(F)** to return leg **(D)** using nut insert in legs. See point attached. Then, connect the hook of the return beam to the beam of the main structure.


Quadro Wood A L-Shaped Desk

Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

www.jasonl.com.au

Need help!



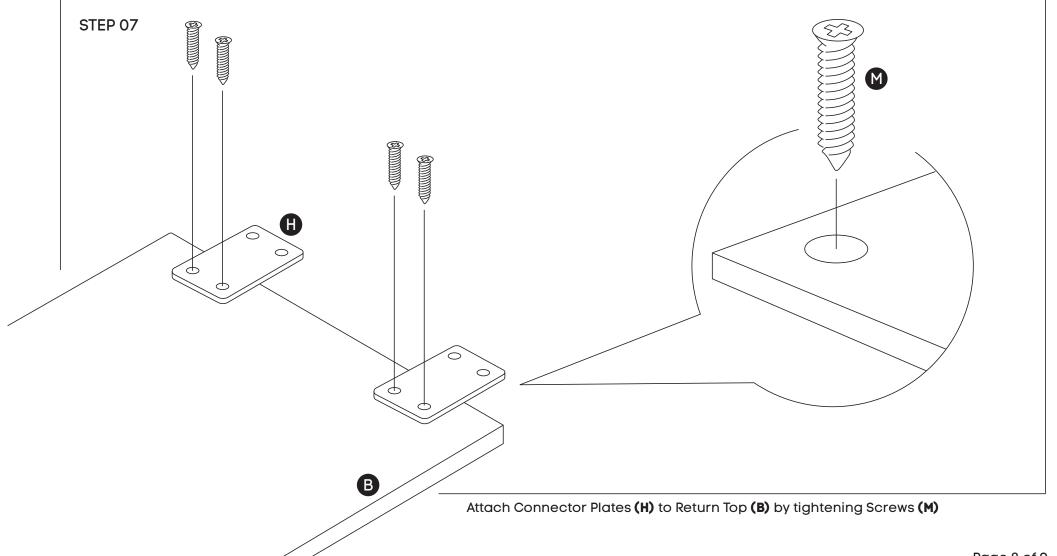

Quadro Wood A L-Shaped Desk


www.jasonl.com.au

Need help!

Call us on **1300 527 665**



Sizes: 1200x700, 1400x700, 1600x700, 1800x700 mm

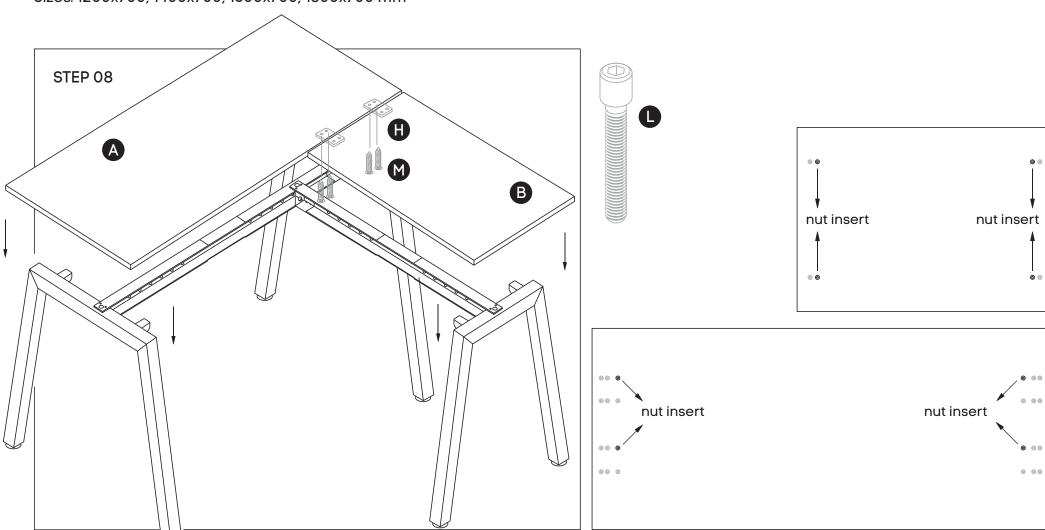

Place table top (A) ontop of frame. Using nut inserts in the desk, use M6x30mm socket (L) and attach desktop to the frame. Using nut inserts in the desktop, use M6x30mm socket (L) and attach desktop (B) to the frame. Once desktop are attached and secure to the frame, use woods screws and secure joiner plates to the underside of desktop A.

TABLE TOP BOTTOM VIEW