

# ASSEMBLY INSTRUCTIONS

## Quadro A Boardroom Frame

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**


Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate




**Size:**

1200 x 1200

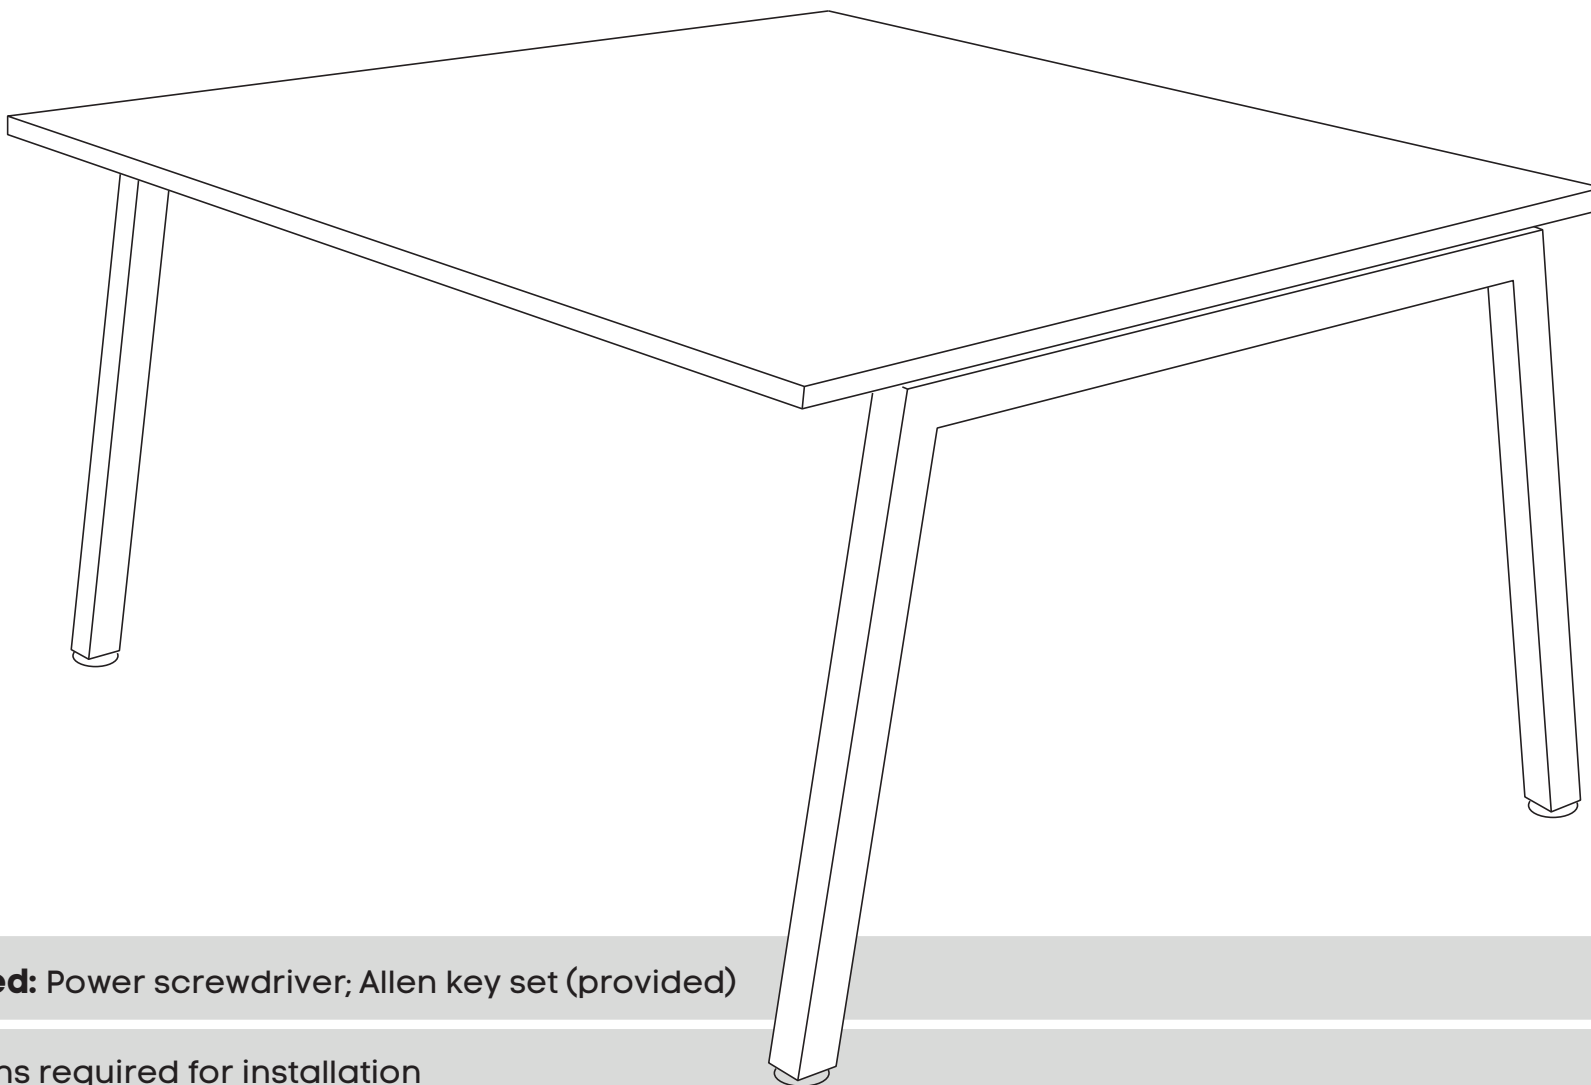

**Tools Required:** Power screwdriver; Allen key set (provided)

 2 persons required for installation

# ASSEMBLY INSTRUCTIONS


## Quadro A Boardroom Frame

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

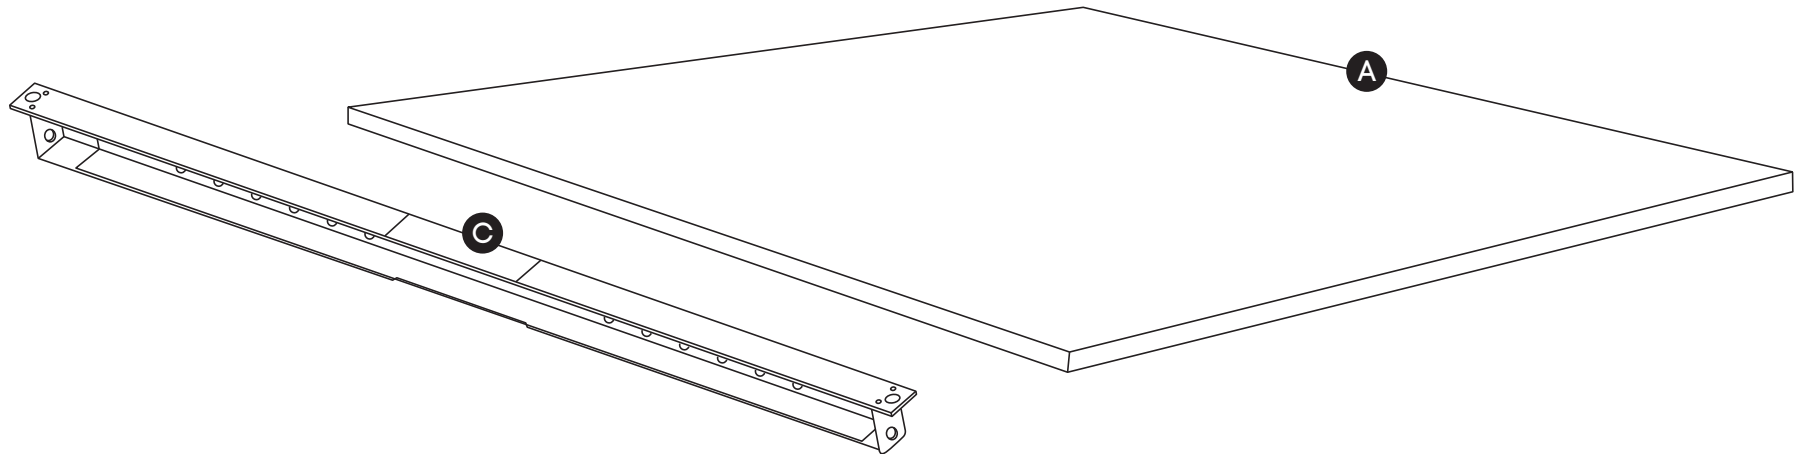




### COMPONENTS

- A Table top x1
- B Leg Quadro A x2
- C Beam x2 \*
- D Plastic bracket x8

### SCREWS

- E M8x20MM CSK x4
- F M8x20MM Socket head x4
- G M6x20MM Socket head x8
- H M6x30MM Socket head x8

- I Allen key x2

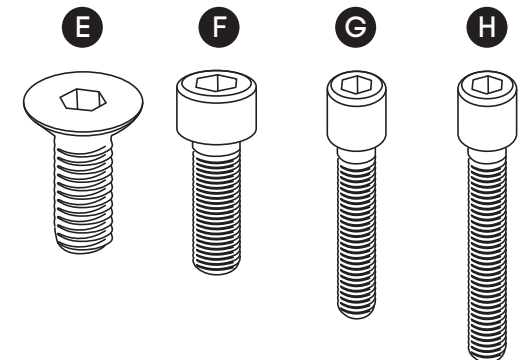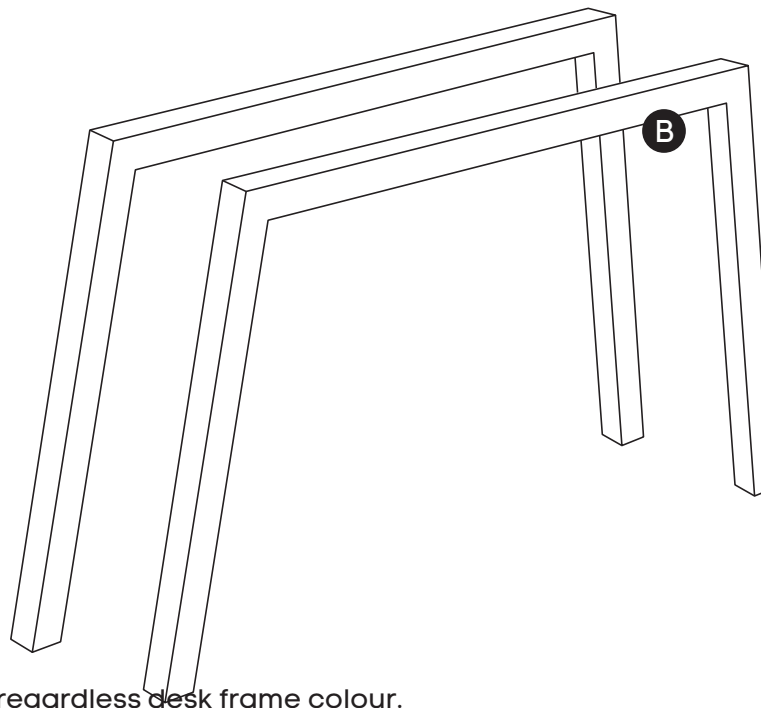

\* Colour of the beam is always black, regardless of desk frame colour.

# ASSEMBLY INSTRUCTIONS


## Quadro A Boardroom Frame

[www.jasonl.com.au](http://www.jasonl.com.au)


**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

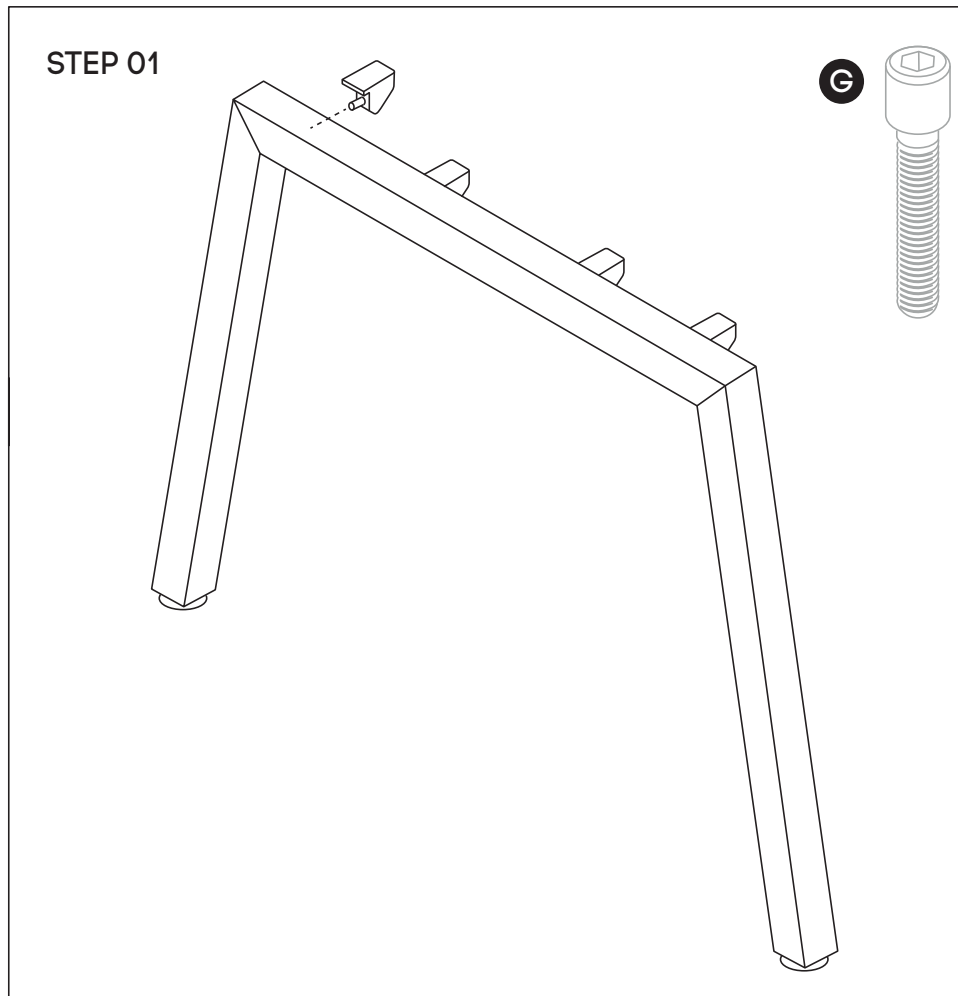

Using Allen Key provided, attach 4 plastic brackets per leg **(D)** (as per picture above) using M6x20MM **(G)** Socket head screw.

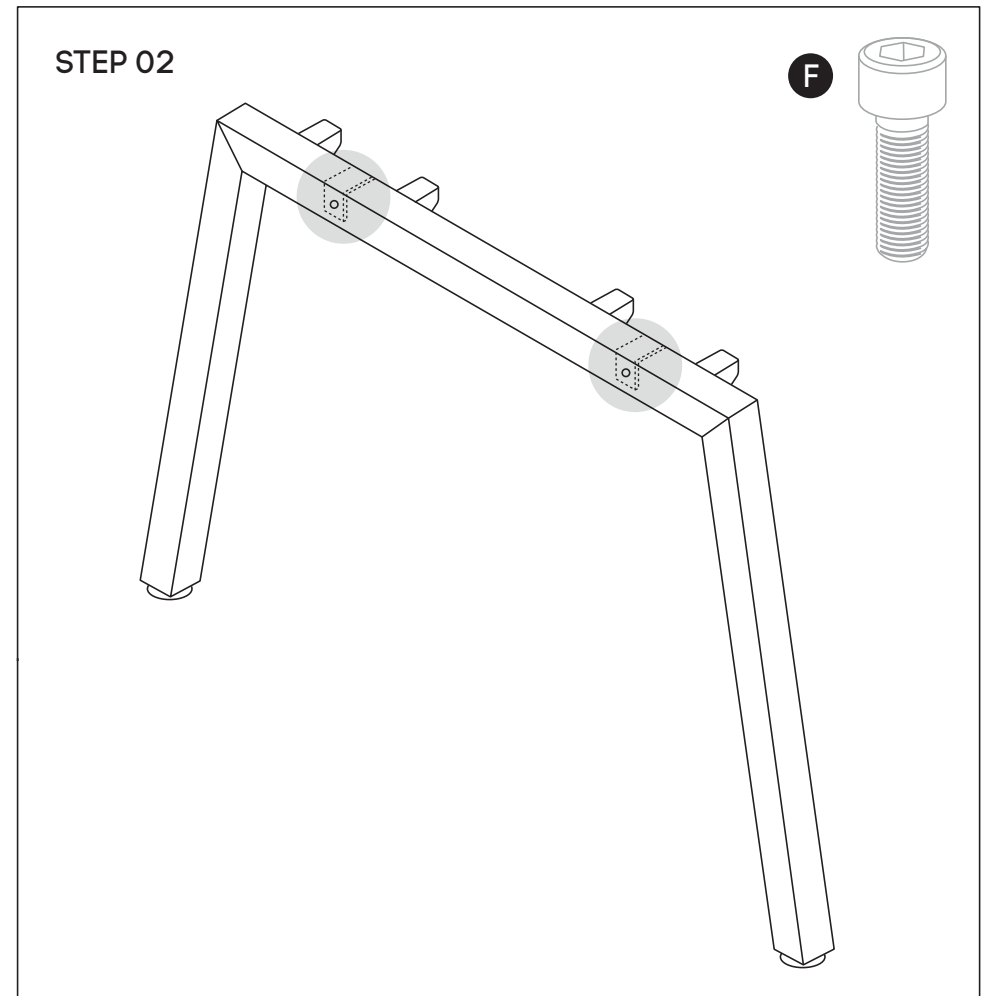

Using Allen Key provided, attach M8x20MM Socket head **(F)**-screw socket half way into leg for both legs **(B)**.

# ASSEMBLY INSTRUCTIONS

## Quadro A Boardroom Frame

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**



Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate



### STEP 03

Adjust extendable beam **(c)** to desired length using markers and secure beam at that length using screws provided

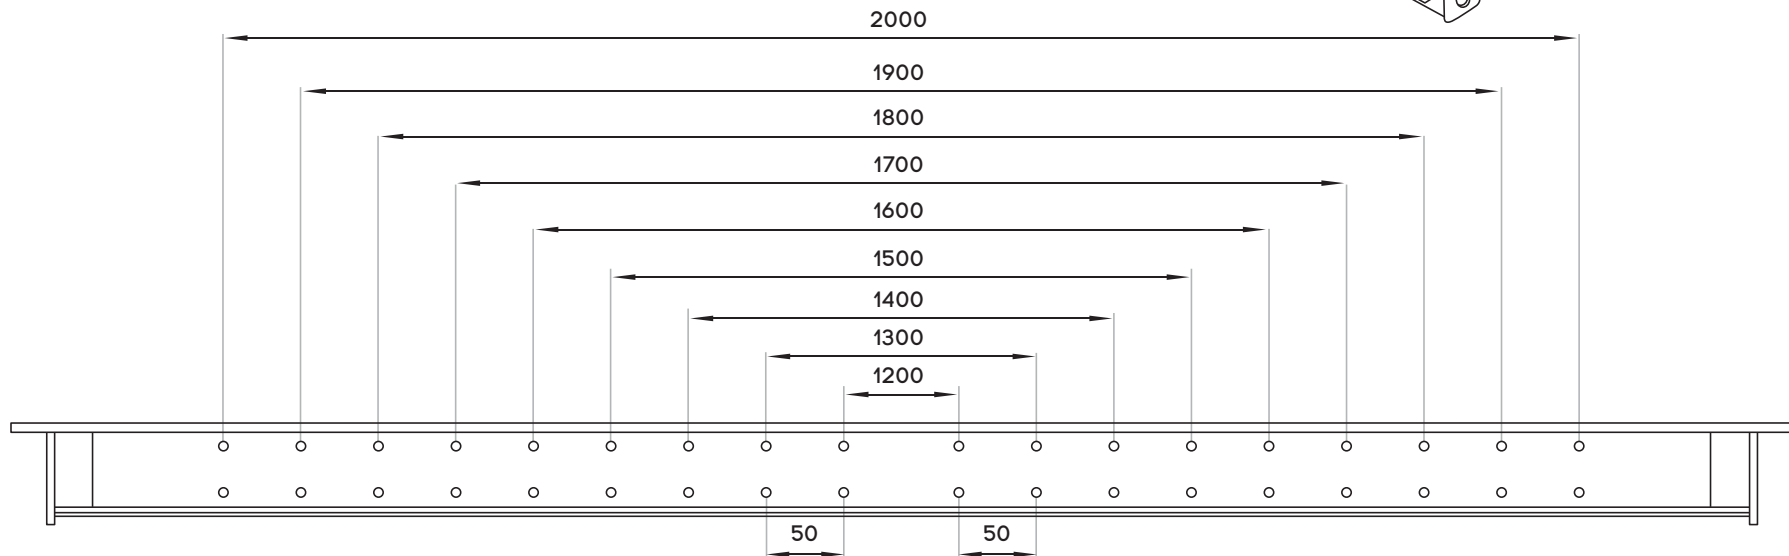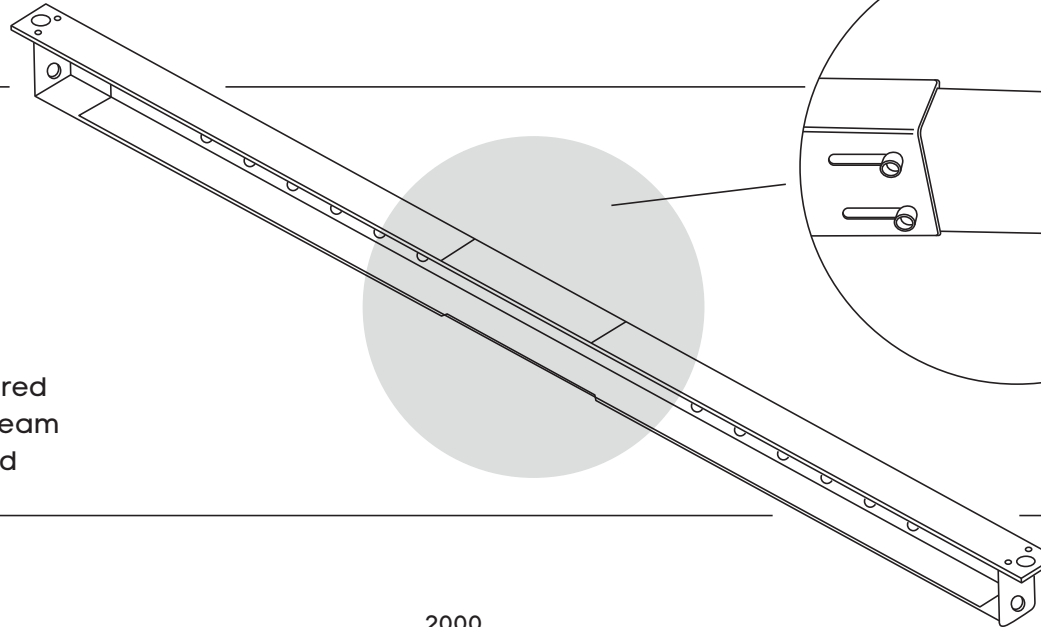

# ASSEMBLY INSTRUCTIONS


## Quadro A Boardroom Frame

[www.jasonl.com.au](http://www.jasonl.com.au)


**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

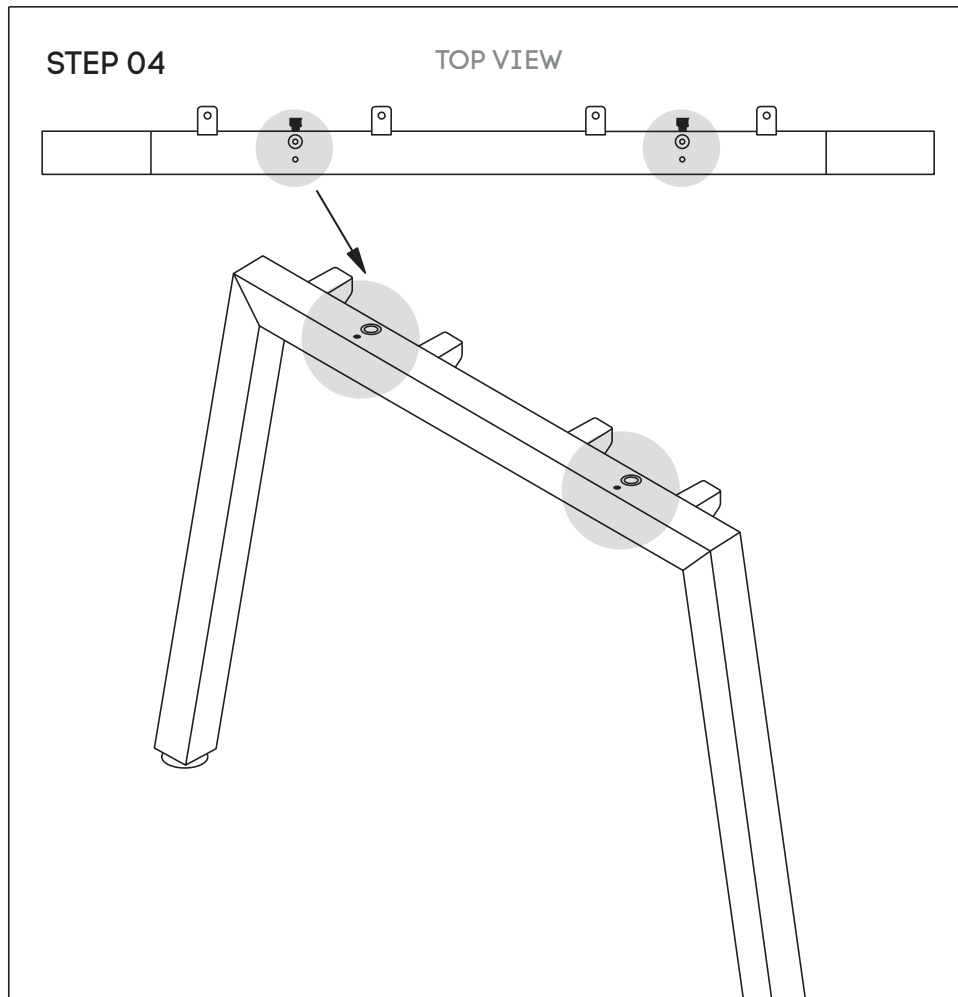

Attach beam **(C)** to legs **(B)** using nut insert in legs.  
See point attached

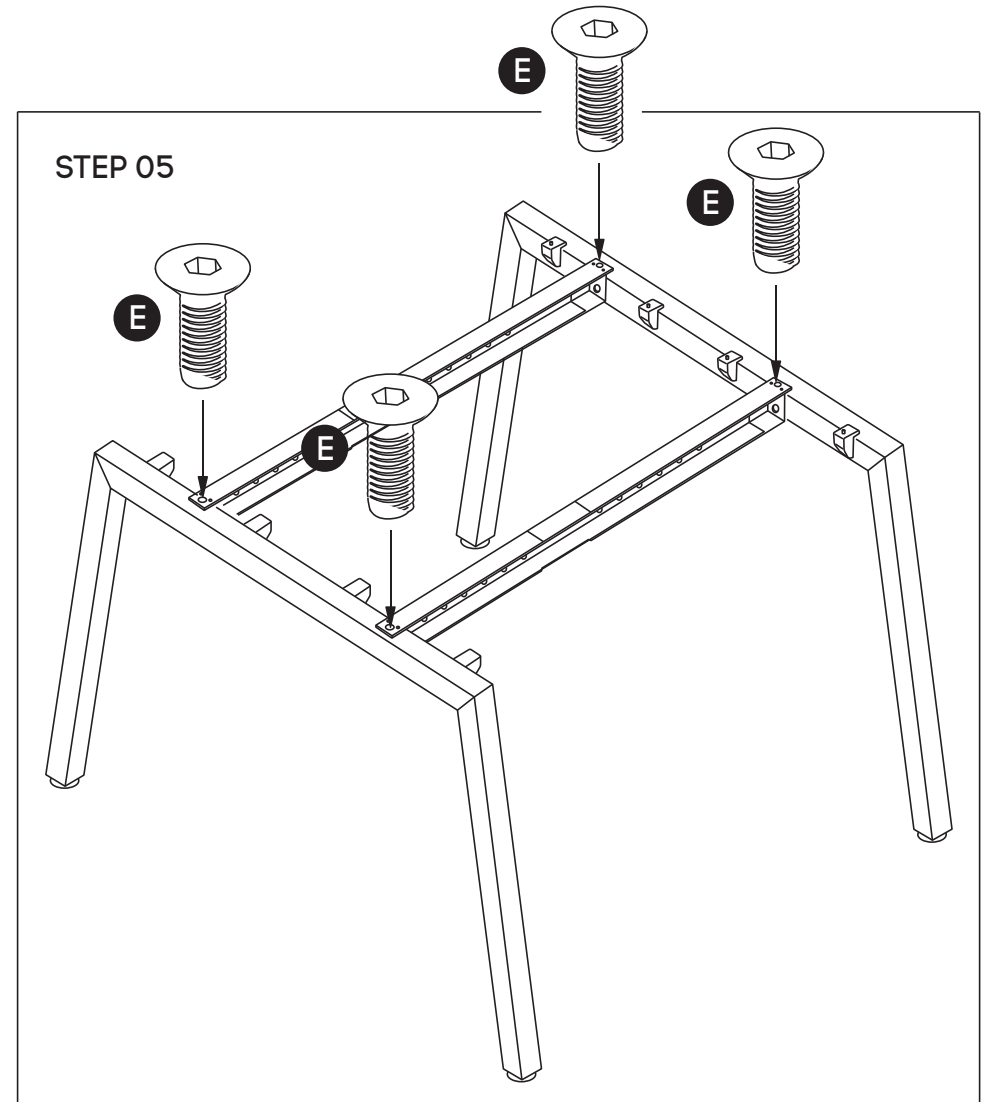

Frame looks like this. Using Allen Key, attach beam **(C)** with Socket **(E)**

# ASSEMBLY INSTRUCTIONS


## Quadro A Boardroom Frame

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

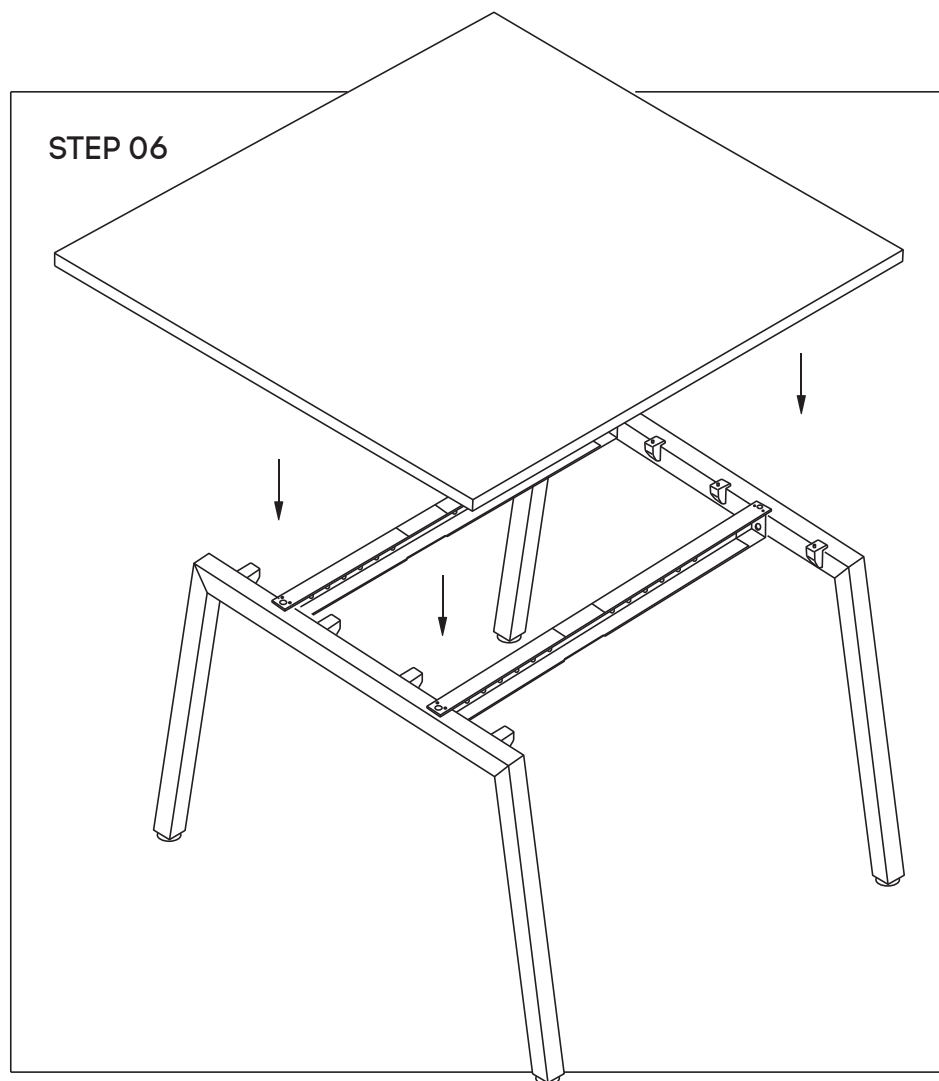

Place desktop on top of frame. Wood Screws to be drilled into the underneath Top.