#### **ASSEMBLY INSTRUCTIONS**

## Quadro A **Desk Frame**

#### www.jasonl.com.au

#### Need help!

Call us on 1300 527 665



#### Sizes:

1000x600


1200x700

1400x700

1600x700

1800x700

2000-2400x700

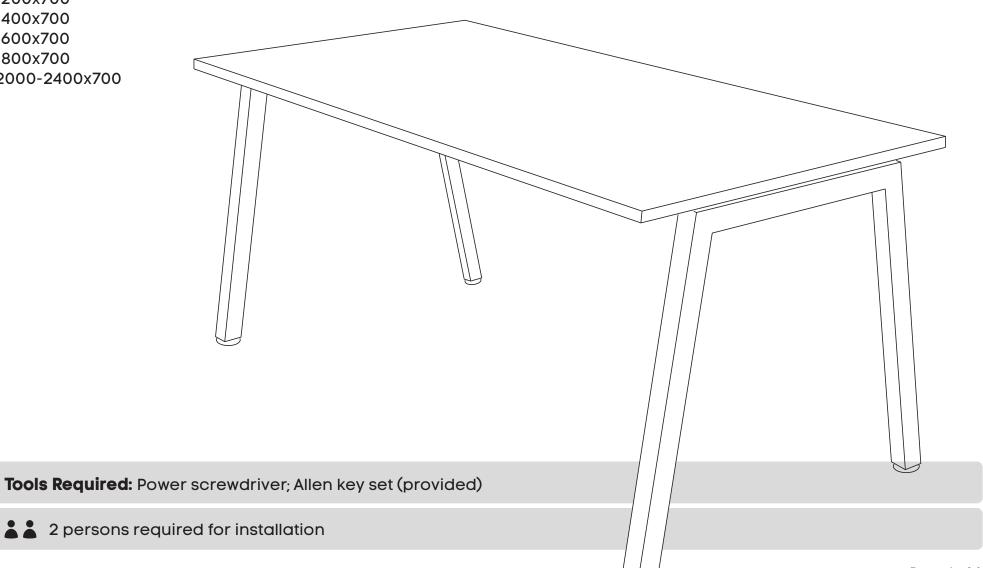

2 persons required for installation

www.jasonl.com.au

**Need help!** 

Call us on **1300 527 665** 



# G **(1)**

#### **COMPONENTS**

- A Table top x1
- B Legs Quadro A x2
- C Beam x1 \*
- D Plastic bracket x4

#### **SCREWS**

- E M8x20MM CSK x1
- F M8x20MM Socket head x1
- G M6x20MM Socket head x2
- H M6x30MM Socket head x2
- I Allen key x2



#### www.jasonl.com.au

#### Need help! Call us on

1300 527 665






Using Allen Key provided, attach 2 plastic brackets per leg (D)

(as per picture above) using M6x20MM (G) Socket head screw



Using Allen Key provided, attach M8x20MM Socket head (F)screw socket half way into leg for both legs (B)

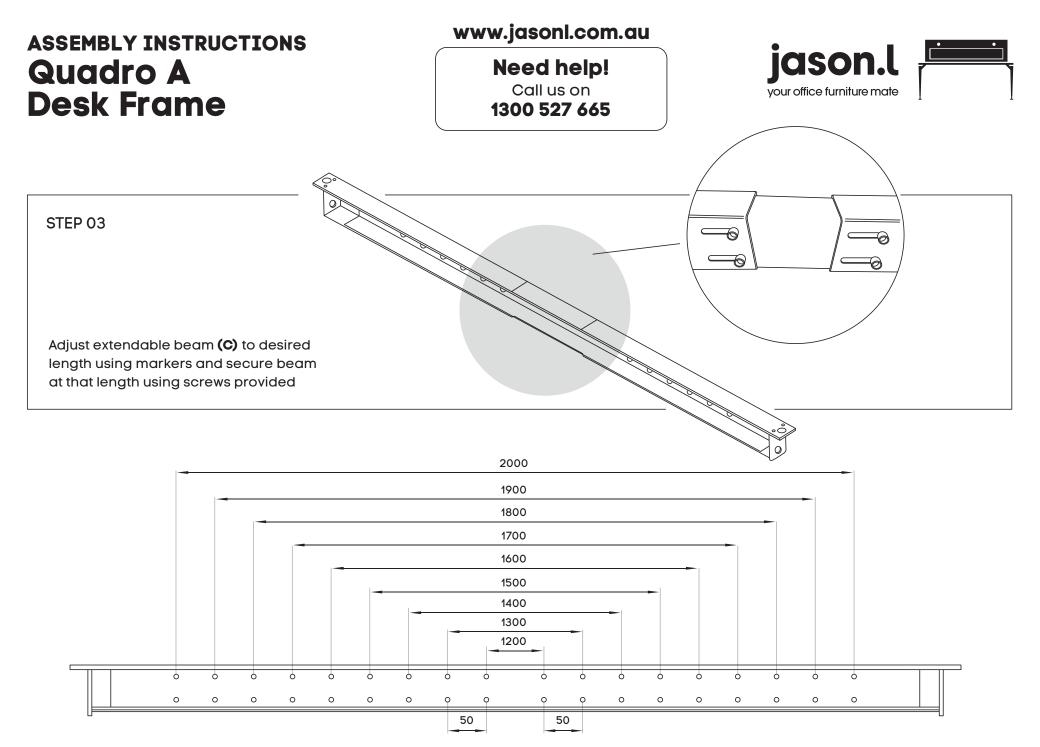


#### www.jasonl.com.au


#### Need help! Call us on

1300 527 665





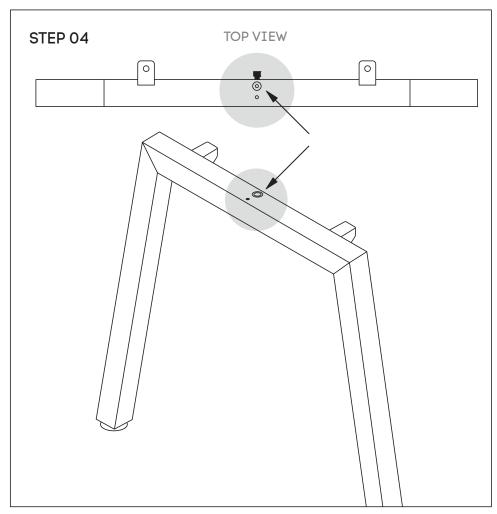

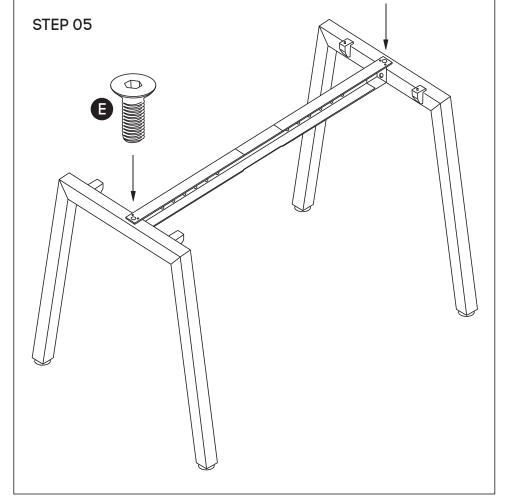

Attach beam **(C)** to legs **(B)** using nut insert in legs See point attached


Frame looks like this. Using Allen Key, attach beam (C) with Socket (E)

www.jasonl.com.au

Need help! Call us on

1300 527 665



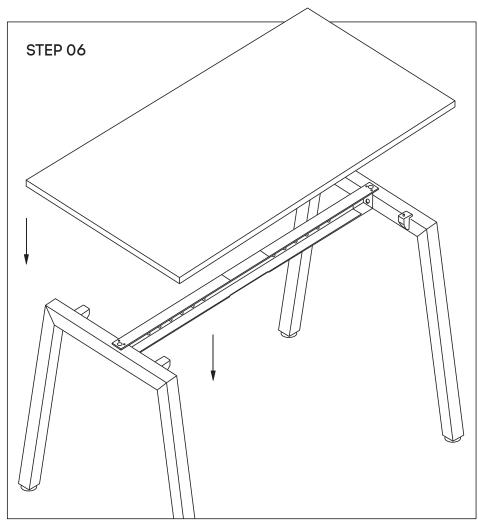

Place desktop on top of frame. Wood Screws to be drilled into the underneath Top.