


Need help! Call us on **1300 527 665**




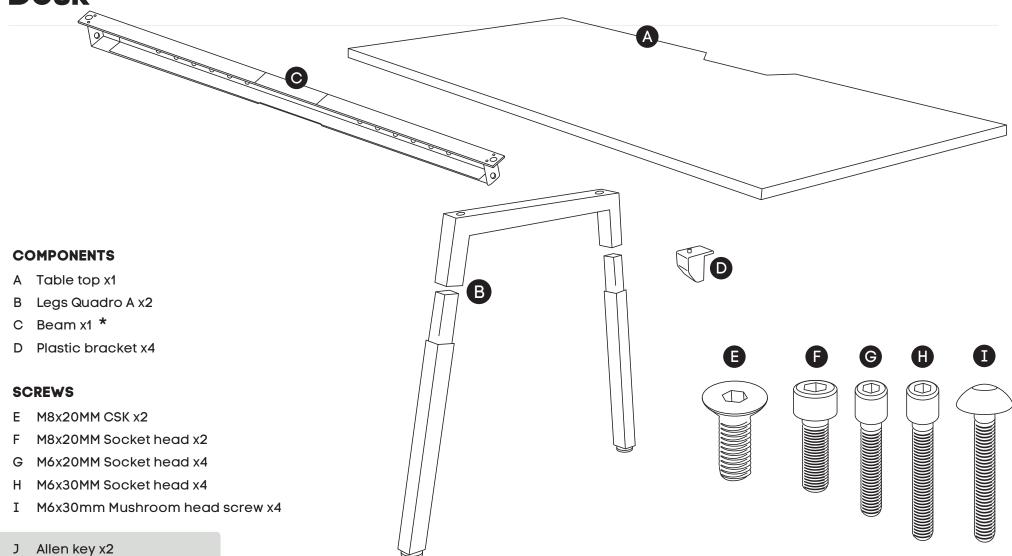

* Colour of the beam is always black, regardless desk frame colour.

Need help! Call us on 1300 527 665

jason.l

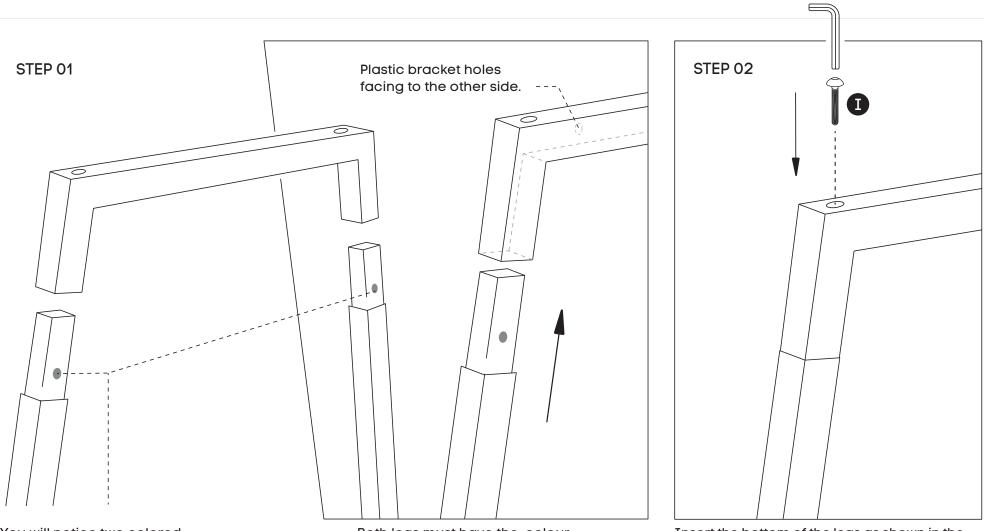


You will notice two colored stickers located on each leg.

Both legs must have the colour sticker facing away from where the plastic brackets are inserted.

Insert the bottom of the legs as shown in the illustration. Using Allen Key provided, attach Mushroom Head Screw **(I)** - for all legs.




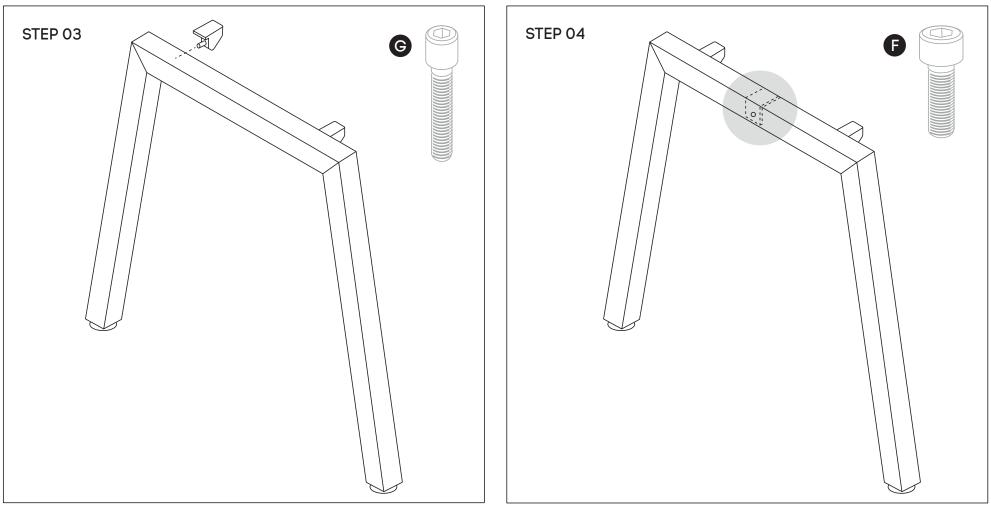

Using Allen Key provided, attach M8x20MM Socket head **(F)**screw socket half way into leg for both legs **(B)**

Using Allen Key provided, attach 2 plastic brackets per leg **(D)** (as per picture above) using M6x20MM **(G)** Socket head screw

ASSEMBLY INSTRUCTIONS jason.l **Quadro Wood** Desk STEP 05 -0 -0 0 Adjust extendable beam (C) to desired length using markers and secure beam at that length using screws provided O2000 1900

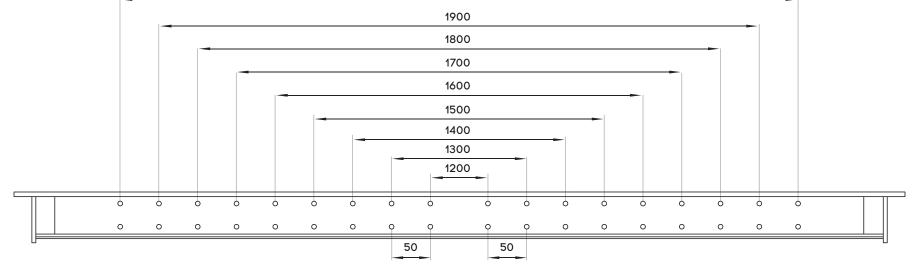


jason.l **Quadro Wood** Desk \square (E) STEP 07 STEP 06 TOP VIEW 0 0 0 0

Frame looks like this. Using Allen Key, attach beam (C) with Socket (E)

Attach beam **(C)** to legs **(B)** using nut insert in legs. See point attached

Need help! Call us on **1300 527 665**



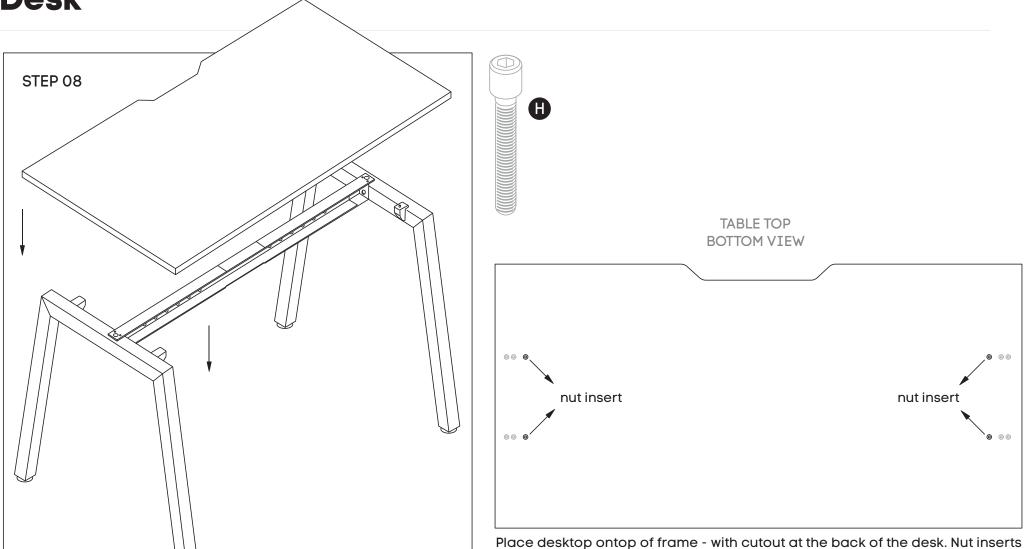

Place desktop ontop of frame - with cutout at the back of the desk. Nut inserts in top will align with plastic joiner brackets using M6x30MM **(H)** sockets attached top to frame.