

ASSEMBLY INSTRUCTIONS
Quadro Loop
Boardroom table


Size: 1200 mm

www.jasonl.com.au


Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

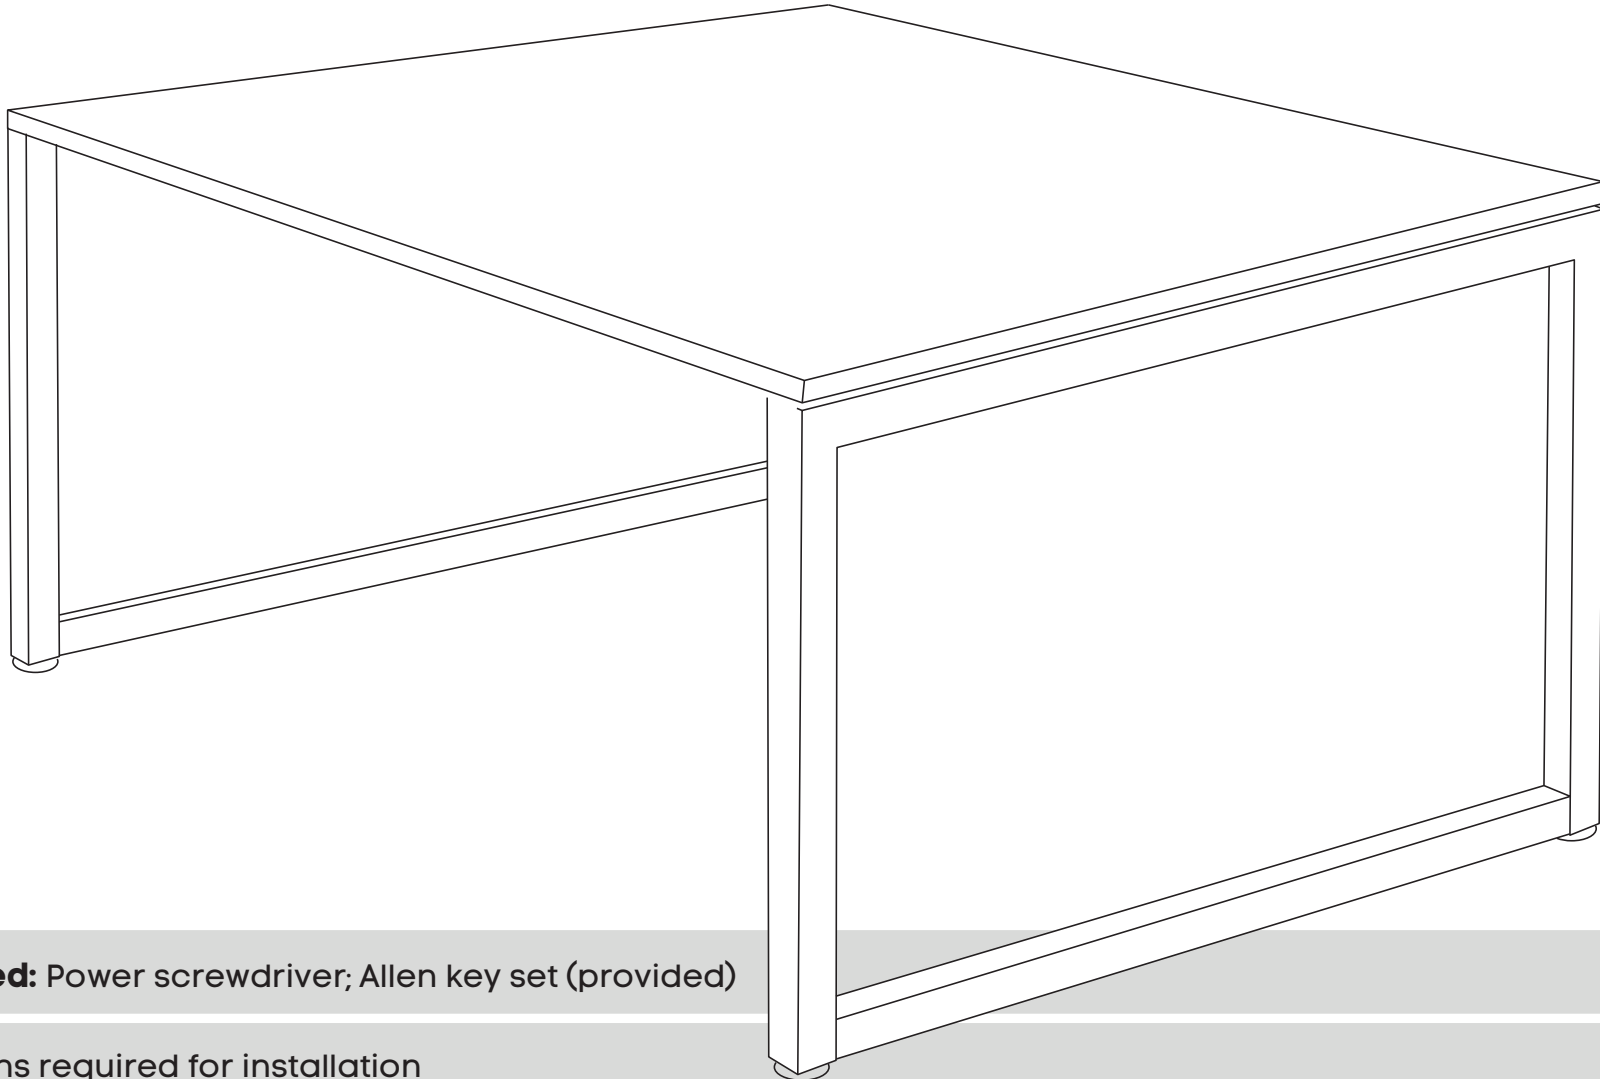

Tools Required: Power screwdriver; Allen key set (provided)

 2 persons required for installation

ASSEMBLY INSTRUCTIONS

Quadro Loop Boardroom table


Size: 1200 mm

www.jasonl.com.au

Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

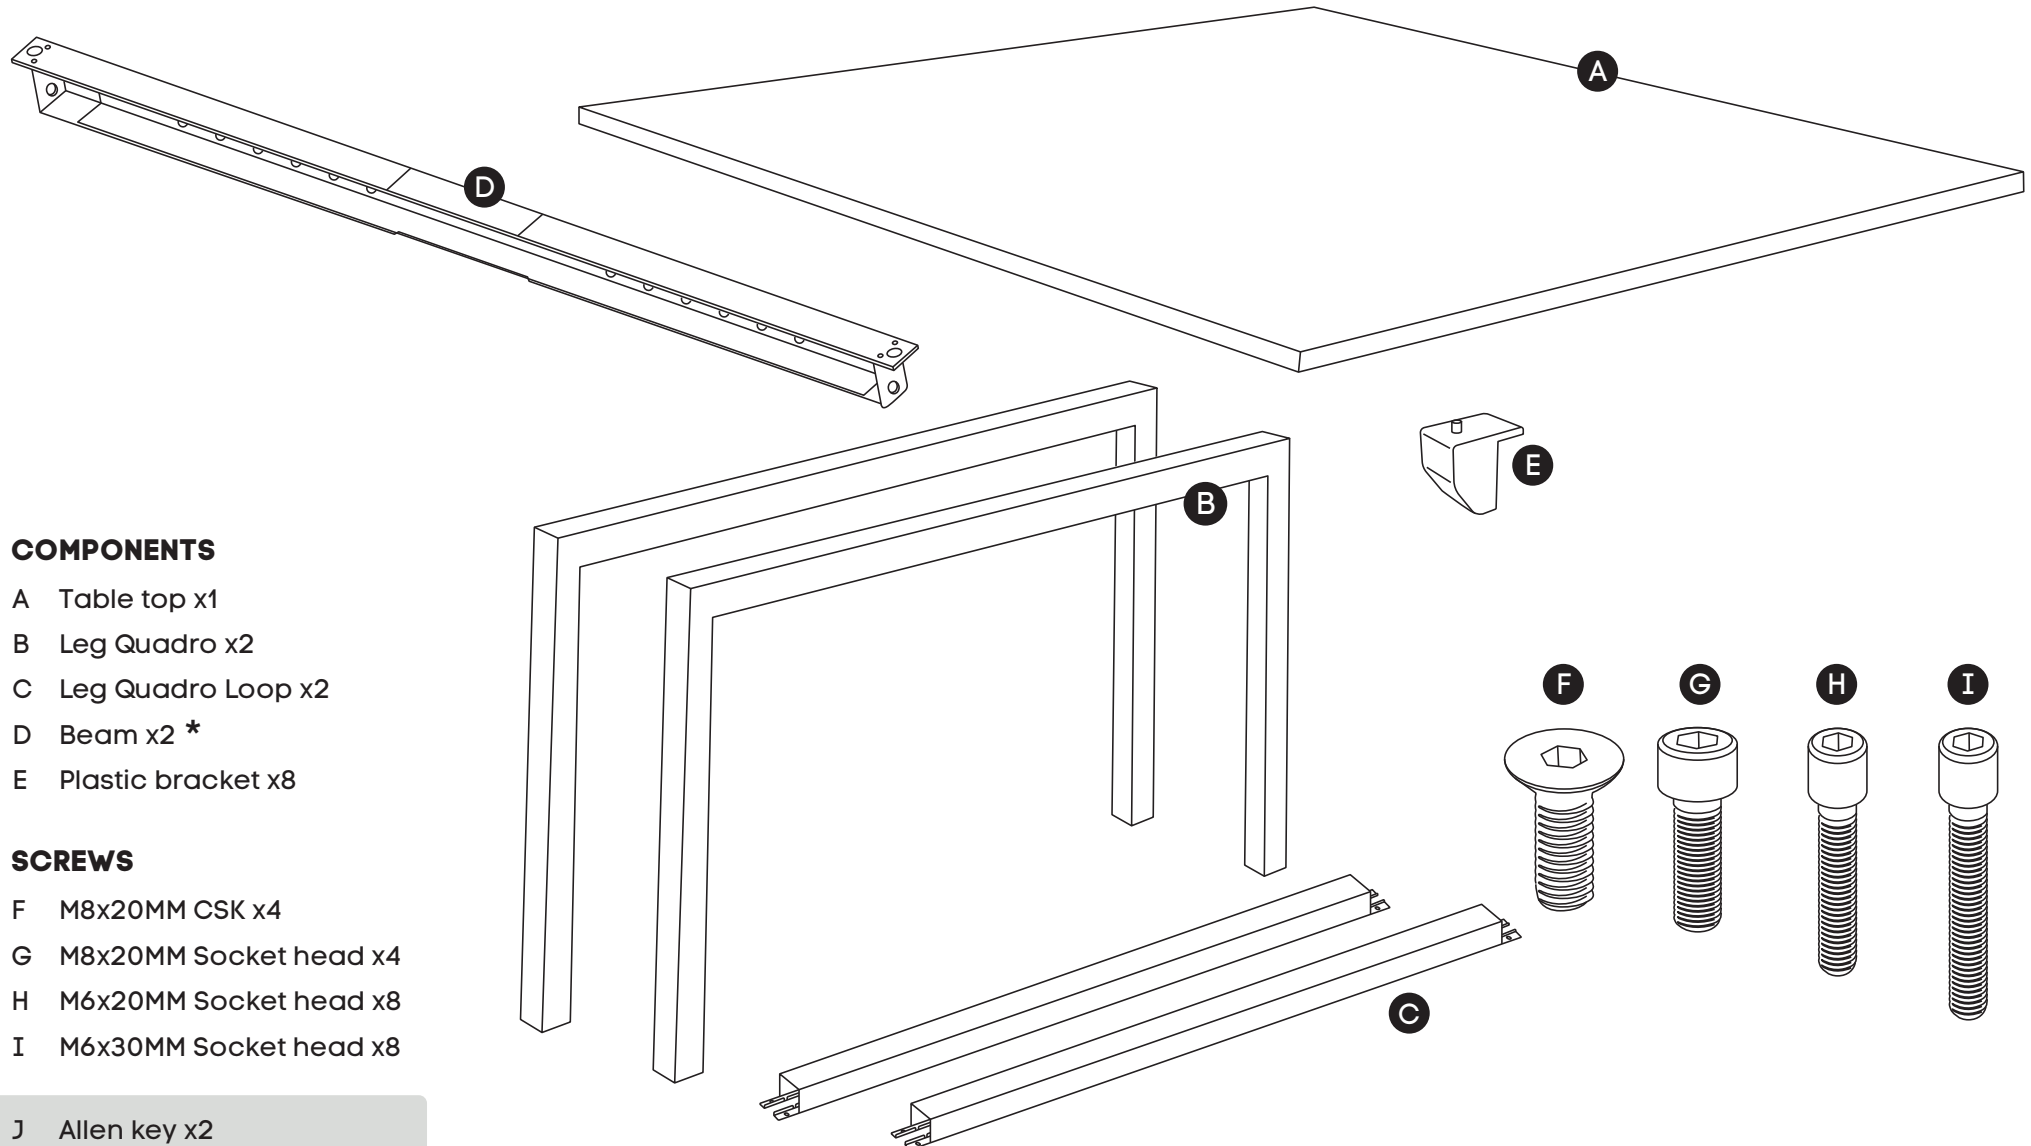

COMPONENTS

- A Table top x1
- B Leg Quadro x2
- C Leg Quadro Loop x2
- D Beam x2 *
- E Plastic bracket x8

SCREWS

- F M8x20MM CSK x4
- G M8x20MM Socket head x4
- H M6x20MM Socket head x8
- I M6x30MM Socket head x8

- J Allen key x2

* Colour of the beam is always black, regardless desk frame colour.

ASSEMBLY INSTRUCTIONS

Quadro Loop Boardroom table


Size: 1200 mm

www.jasonl.com.au


Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

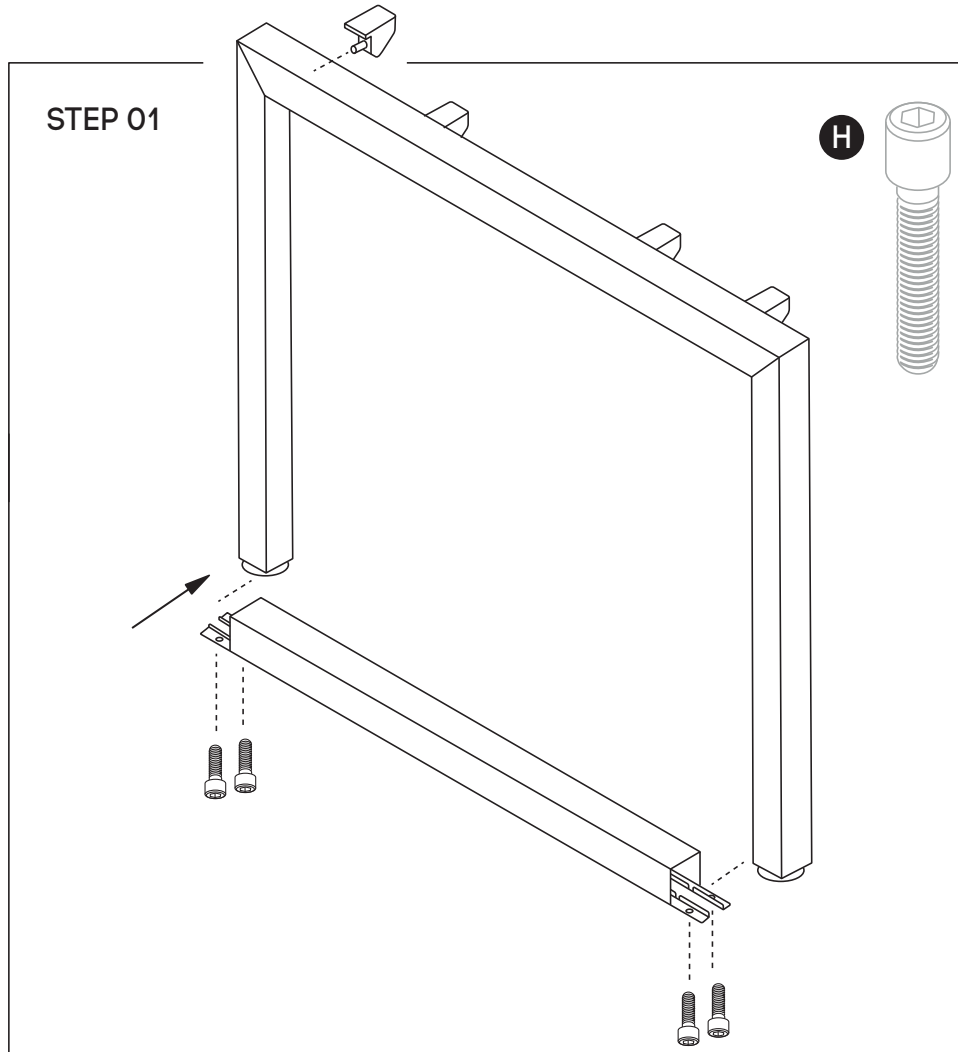

Using Allen Key provided, attach 4 plastic brackets per leg **(E)** (as per picture above) using M6x20MM **(H)** Socket head screw. Connect Loop Legs **(C)** to Bottom of Quadro Legs **(B)** by using 4 bolts per leg.

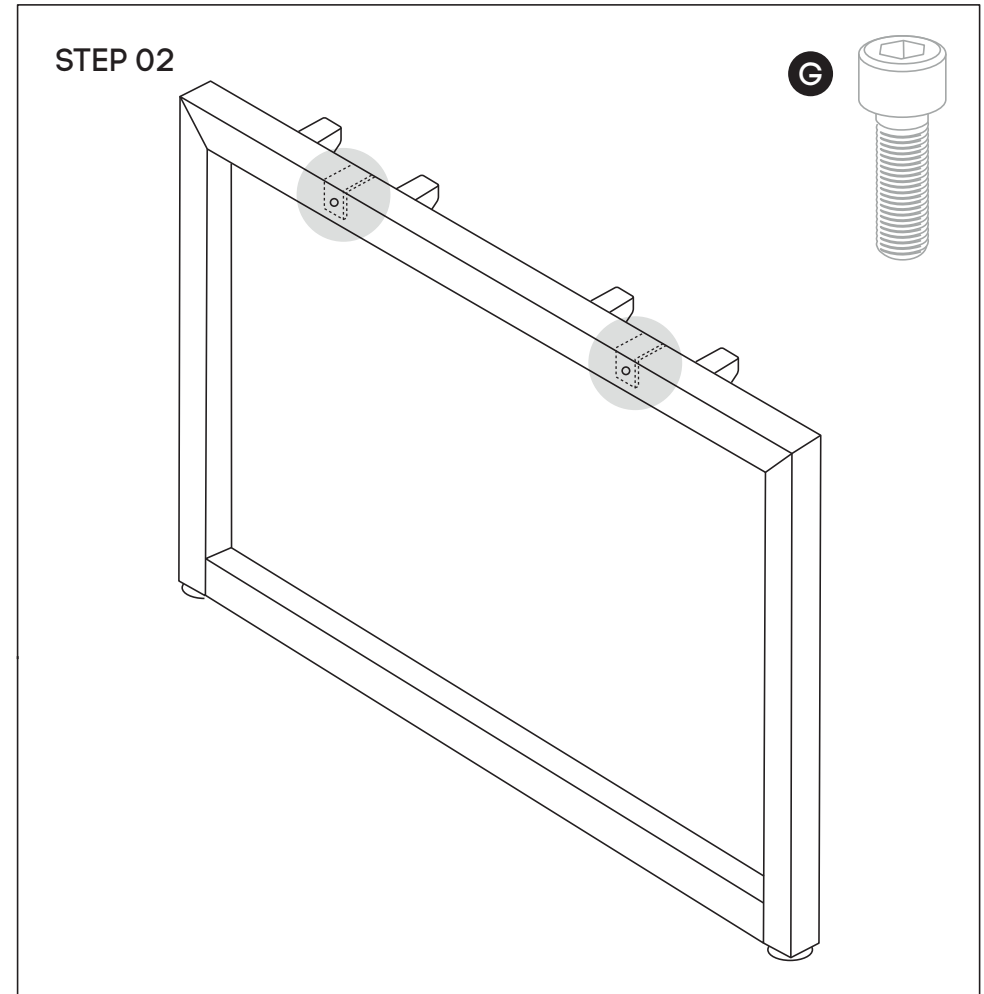

Using Allen Key provided, attach M8x20MM Socket head **(G)**-screw socket half way into leg for both legs **(B)**.

ASSEMBLY INSTRUCTIONS

Quadro Loop Boardroom table

Size: 1200 mm

www.jasonl.com.au

Need help!



Call us on
1300 527 665

jason.l
your office furniture mate



STEP 03

Adjust extendable beam **(D)** to desired length using markers and secure beam at that length using screws provided

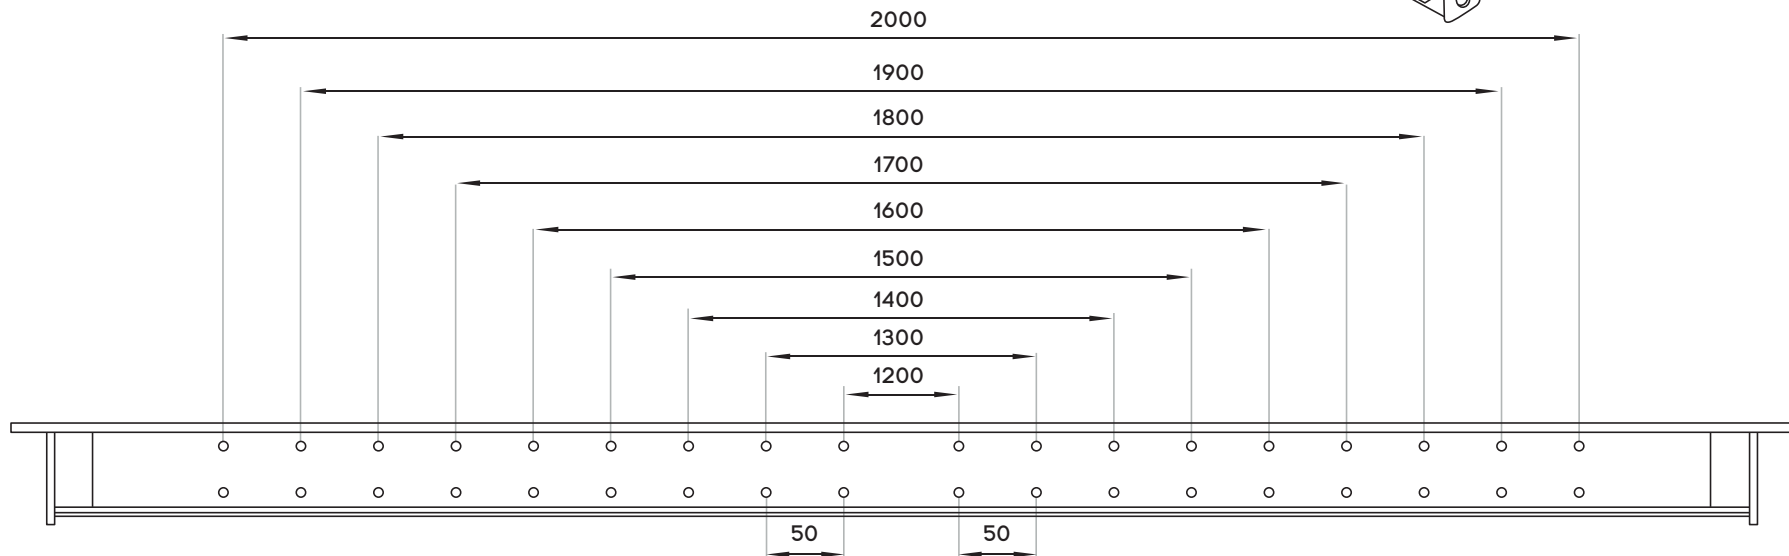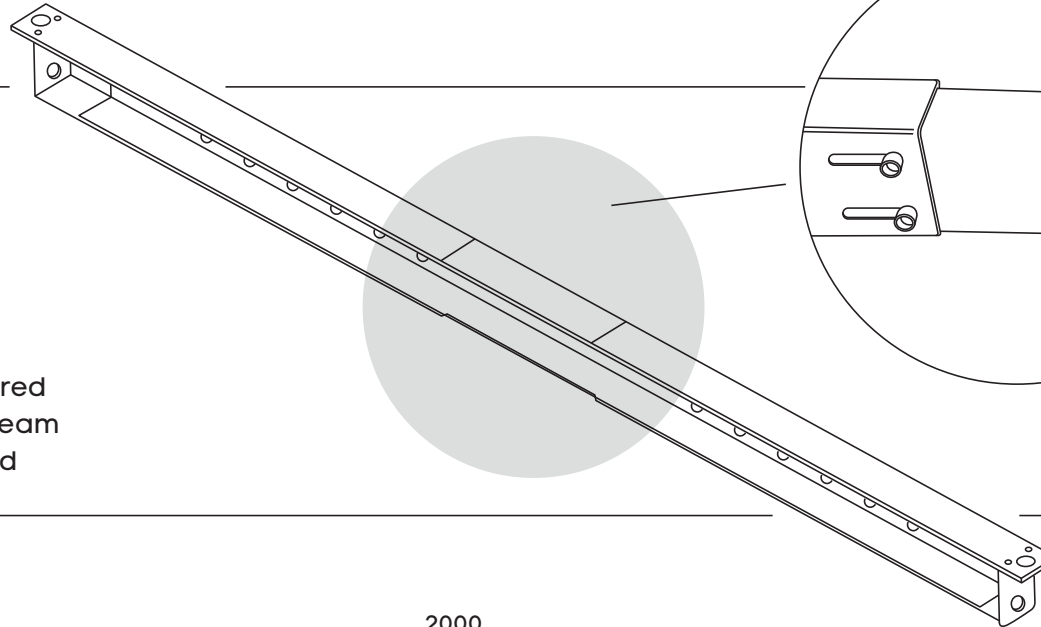

ASSEMBLY INSTRUCTIONS

Quadro Loop Boardroom table


Size: 1200 mm

www.jasonl.com.au


Need help!

Call us on
1300 527 665

jason.l
your office furniture mate

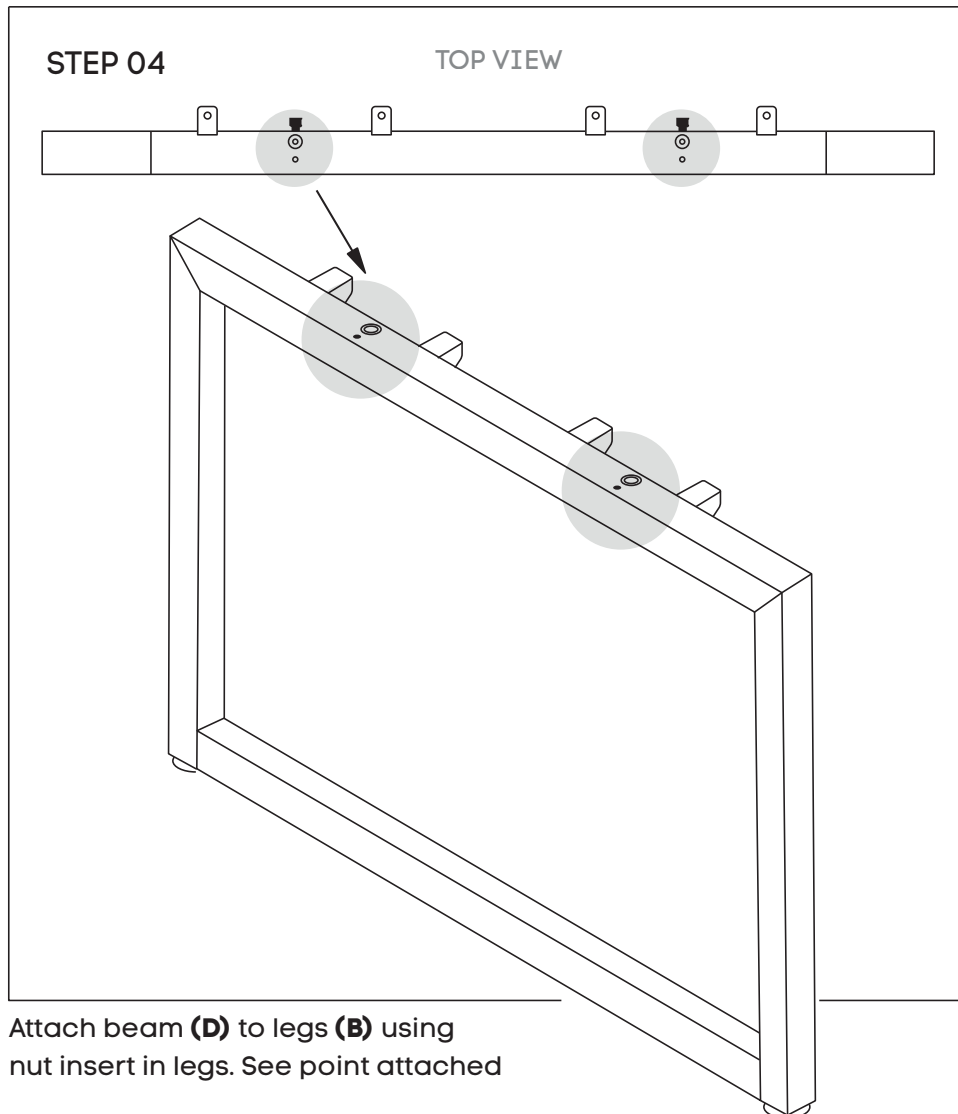

Attach beam **(D)** to legs **(B)** using nut insert in legs. See point attached

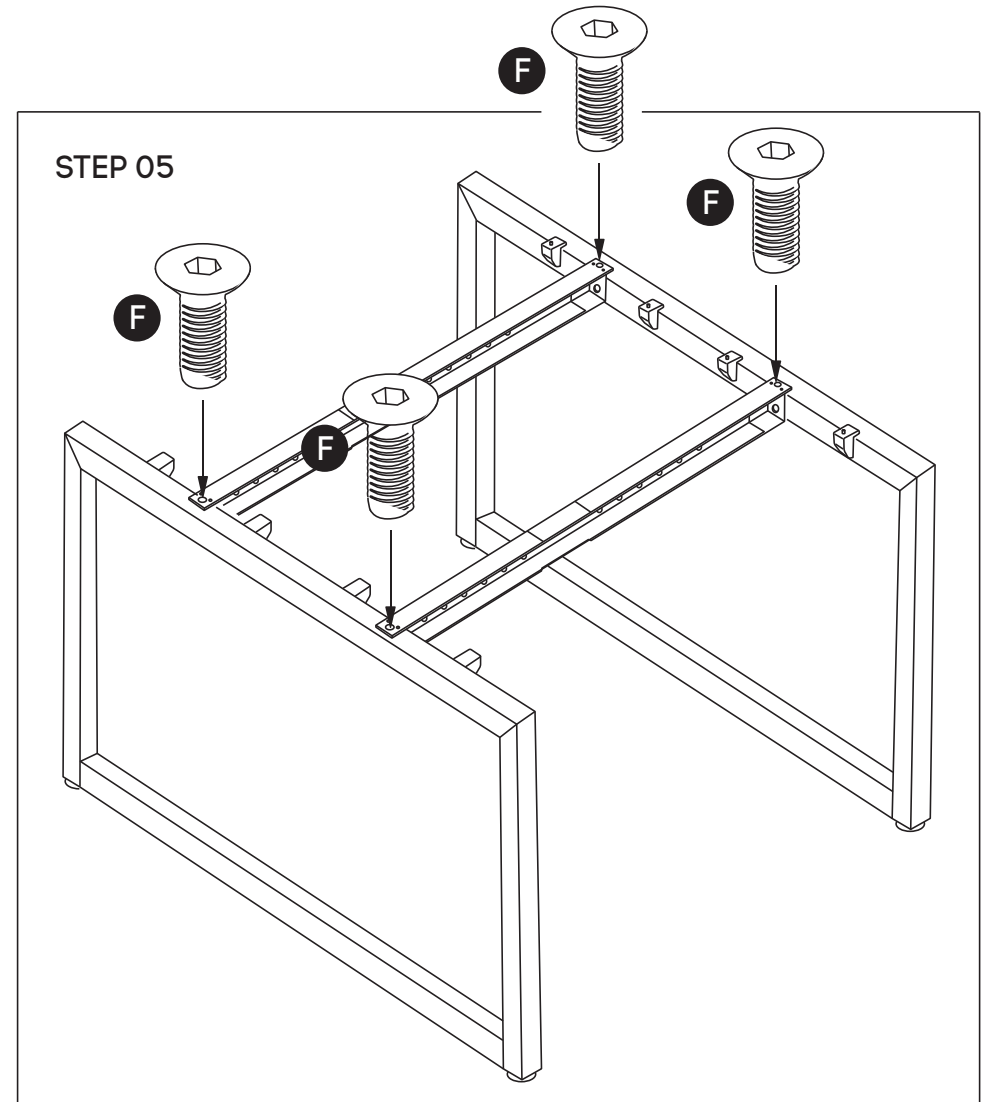

Frame looks like this. Using Allen Key, attach beam **(D)** with Socket **(F)**

ASSEMBLY INSTRUCTIONS

Quadro Loop Boardroom table



Size: 1200 mm

www.jasonl.com.au

Need help!


Call us on
1300 527 665

jason.l
your office furniture mate

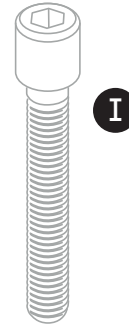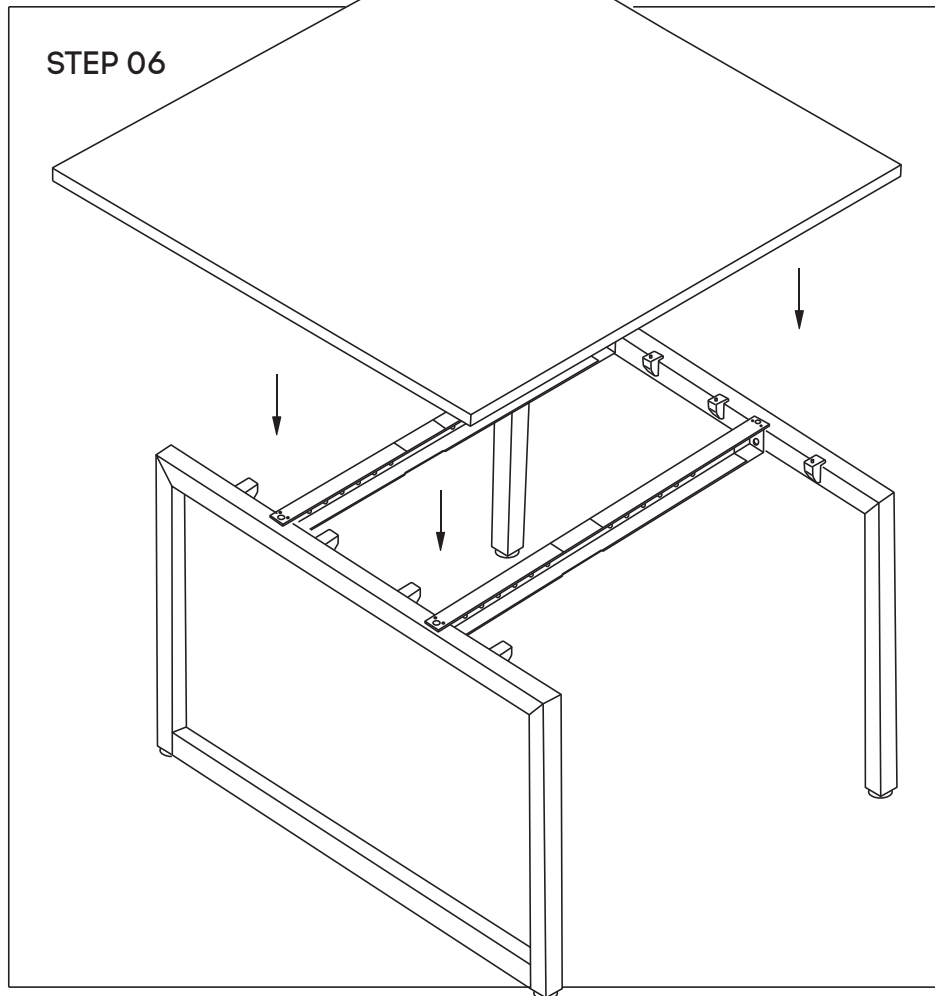

I

TABLE TOP
BOTTOM VIEW

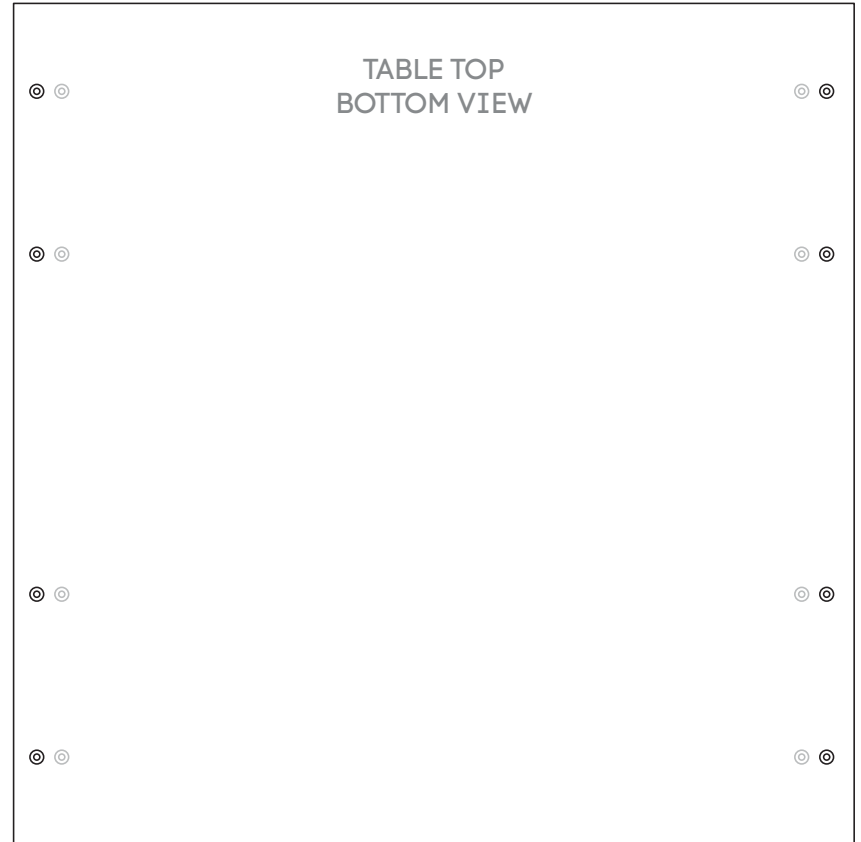

Place desktop on top of frame. Nut inserts in top will align with plastic joiner brackets using M6x30MM (**I**) sockets attached tops to frame.